




TDK Life on Record Trek 360 Motherboard Replacement

This guide will aid you in replacing the motherboard.

Written By: Helen Huynh

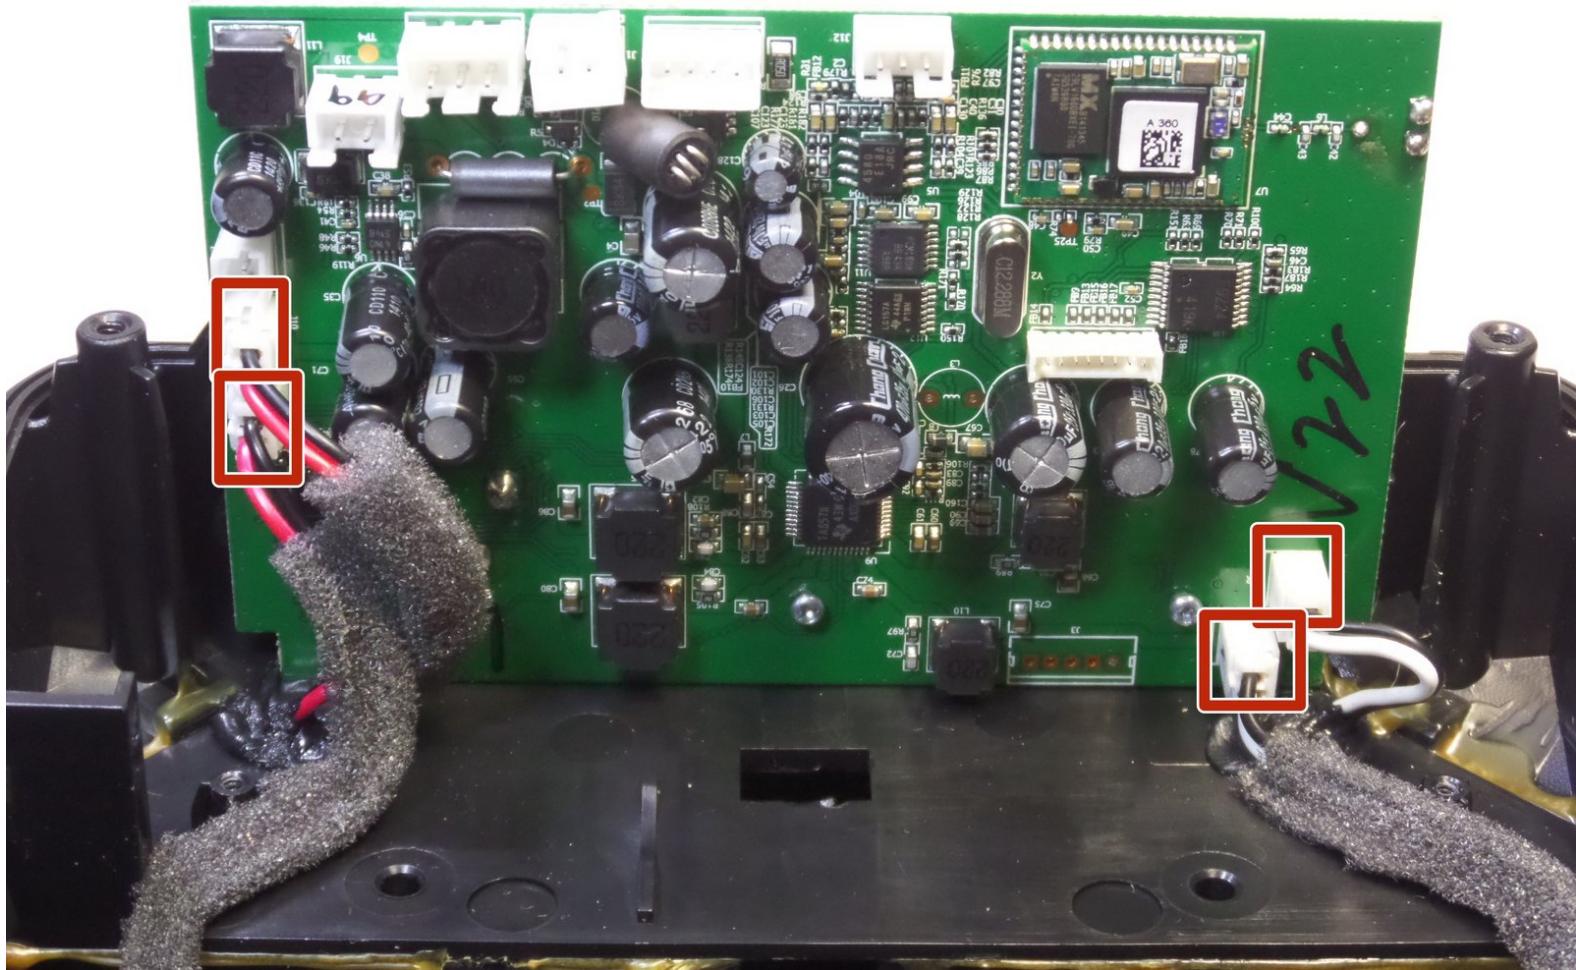

INTRODUCTION

None of the individual components on the motherboard are replaceable!

TOOLS:

- Metal Spudger (1)
- Tweezers (1)
- Phillips #1 Screwdriver (1)
- Phillips #0 Screwdriver (1)
- T8 Torx Screwdriver (1)

Step 1 — Disassembling TDK Life on Record bottom panel



- Remove the four rubber feet of the device using a metal spudger.

Step 2



- Remove the four 9 mm Phillips #0 screws located under the feet of the device.
- Remove the four 9 mm Torx #8 screws located on each side of the bottom the device.

Step 3



- Pull the bottom cover of the device towards you.

Step 4



- Remove the four 13 mm Phillips #1 screws.


Step 5



- Use one hand to grip the device from the side of the handle, and use the other hand to grip the side of the device that contains the woofer
- The woofer is the circular component located at the bottom of the device after the bottom cover has been removed
- Pull apart the compartments by applying force in opposite directions.

⚠ Do not pull with extreme force!! There are many electrical wires inside the device that can become damaged if the bottom panel is removed without care

Step 6

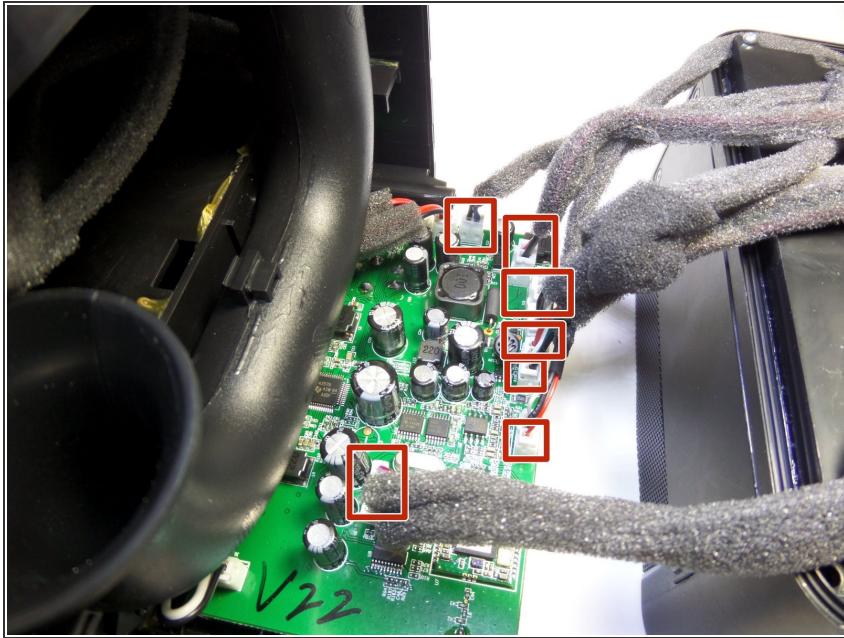

- Disconnect the seven cables attached to the motherboard.

⚠ Do not use too much force when pulling on the wires. Pulling with too much force can damage the wires.

Step 7 — Air Vent Tube




- Remove the four 8 mm Phillips #1 screws.

Step 8




- place your hands on each side of the air vent and then place your index finger on the thin plastic half circle that holds the vent in place.
- Pull the plastic half circle towards you.
- Put both of your hands inside the tube as shown and push away from you.

Step 9 — Motherboard

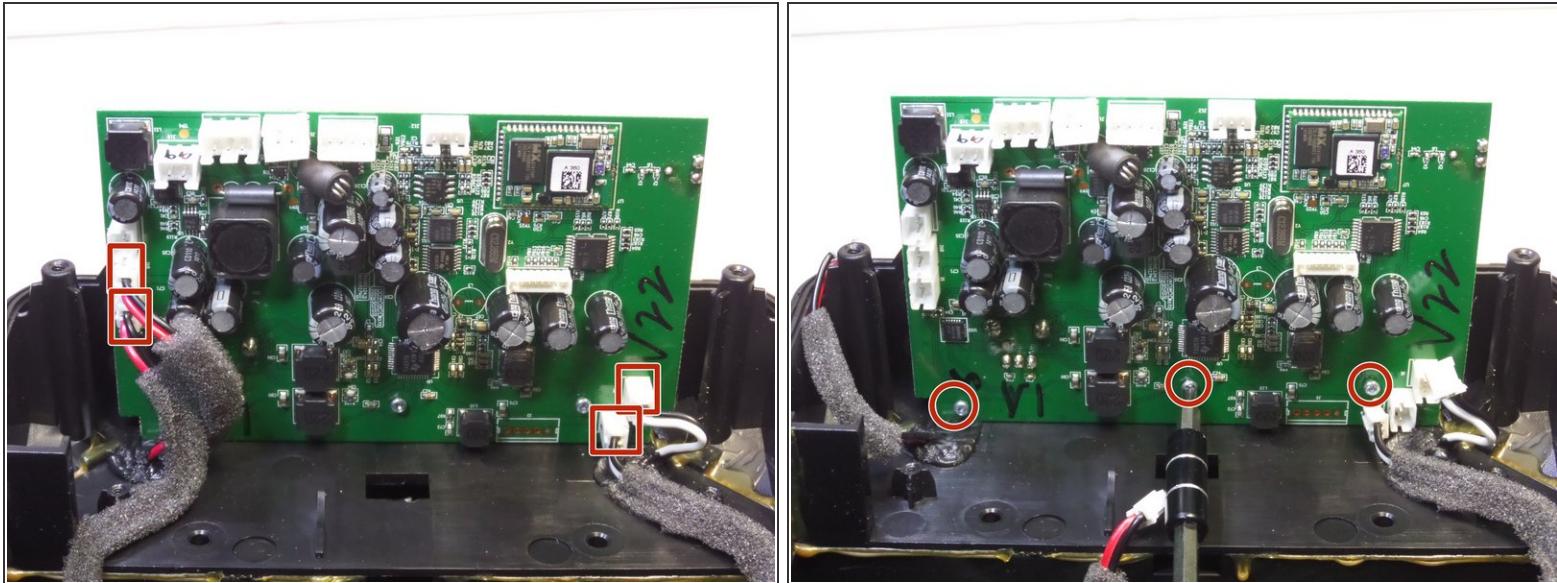


- Remove the four wired clips by pulling on the wires.
- Remove the three 6 mm Phillips #1 screws.

Step 10

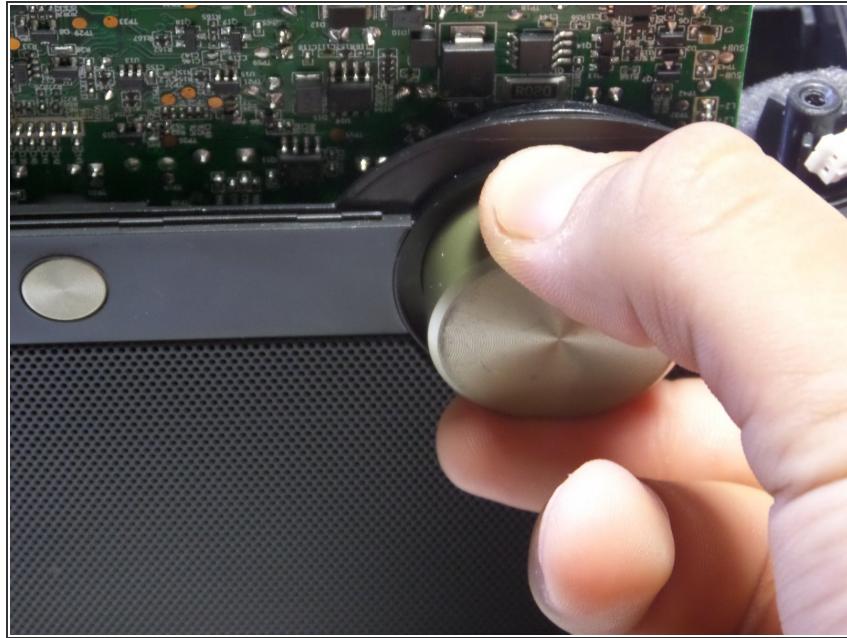


- Remove the volume control knob, which is located at the front of the speaker, by pulling it towards you.

Step 11

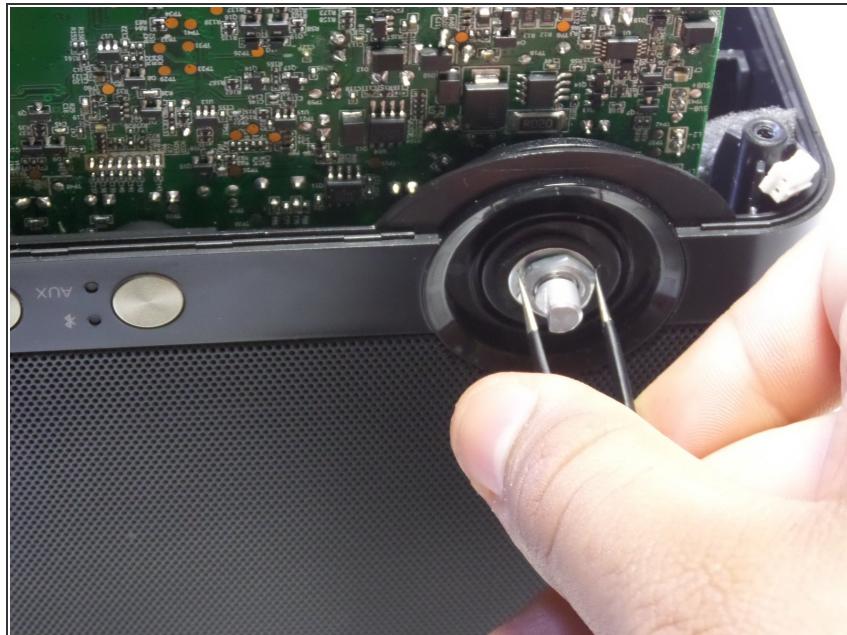

- Using tweezers, turn the nut counter-clockwise and remove the nut.

Step 12

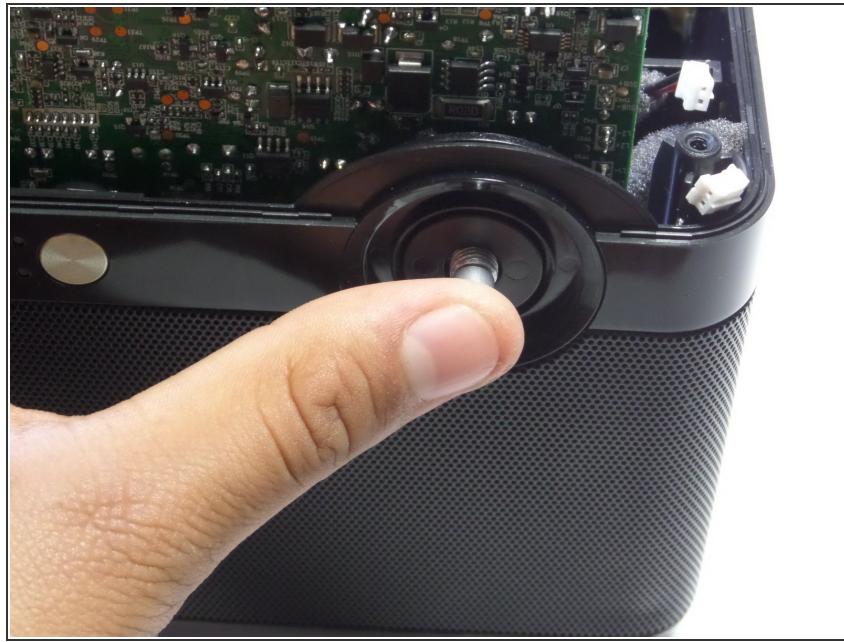

- Push the metal part that holds the volume control knob away from you.

To reassemble your device, follow these instructions in reverse order.