



# TRS-80 Color Computer Outside Casing Replacement

Removing the outer casing of your TRS-80 Color Computer to get to the insides.

Written By: Andrew



## INTRODUCTION

Removing the outer casing of your TRS-80 Color Computer to get to the insides.

### TOOLS:

- Phillips #1 Screwdriver (1)

## Step 1 — Outside Casing



- Flip the computer over.
- Remove the two 24.1mm Phillips screws near the front of the case.
- Remove the five 33.0 mm Phillips screws towards the back of the case.

## Step 2



- Carefully flip the computer right side up.
- Lift off the top half of the case.

To reassemble your device, follow these instructions in reverse order.