




# Teac DC-D2831 volume control knob replacement

This guide will show how to remove the old volume control knob and replace it with a new one.

Written By: Oliver Kunz

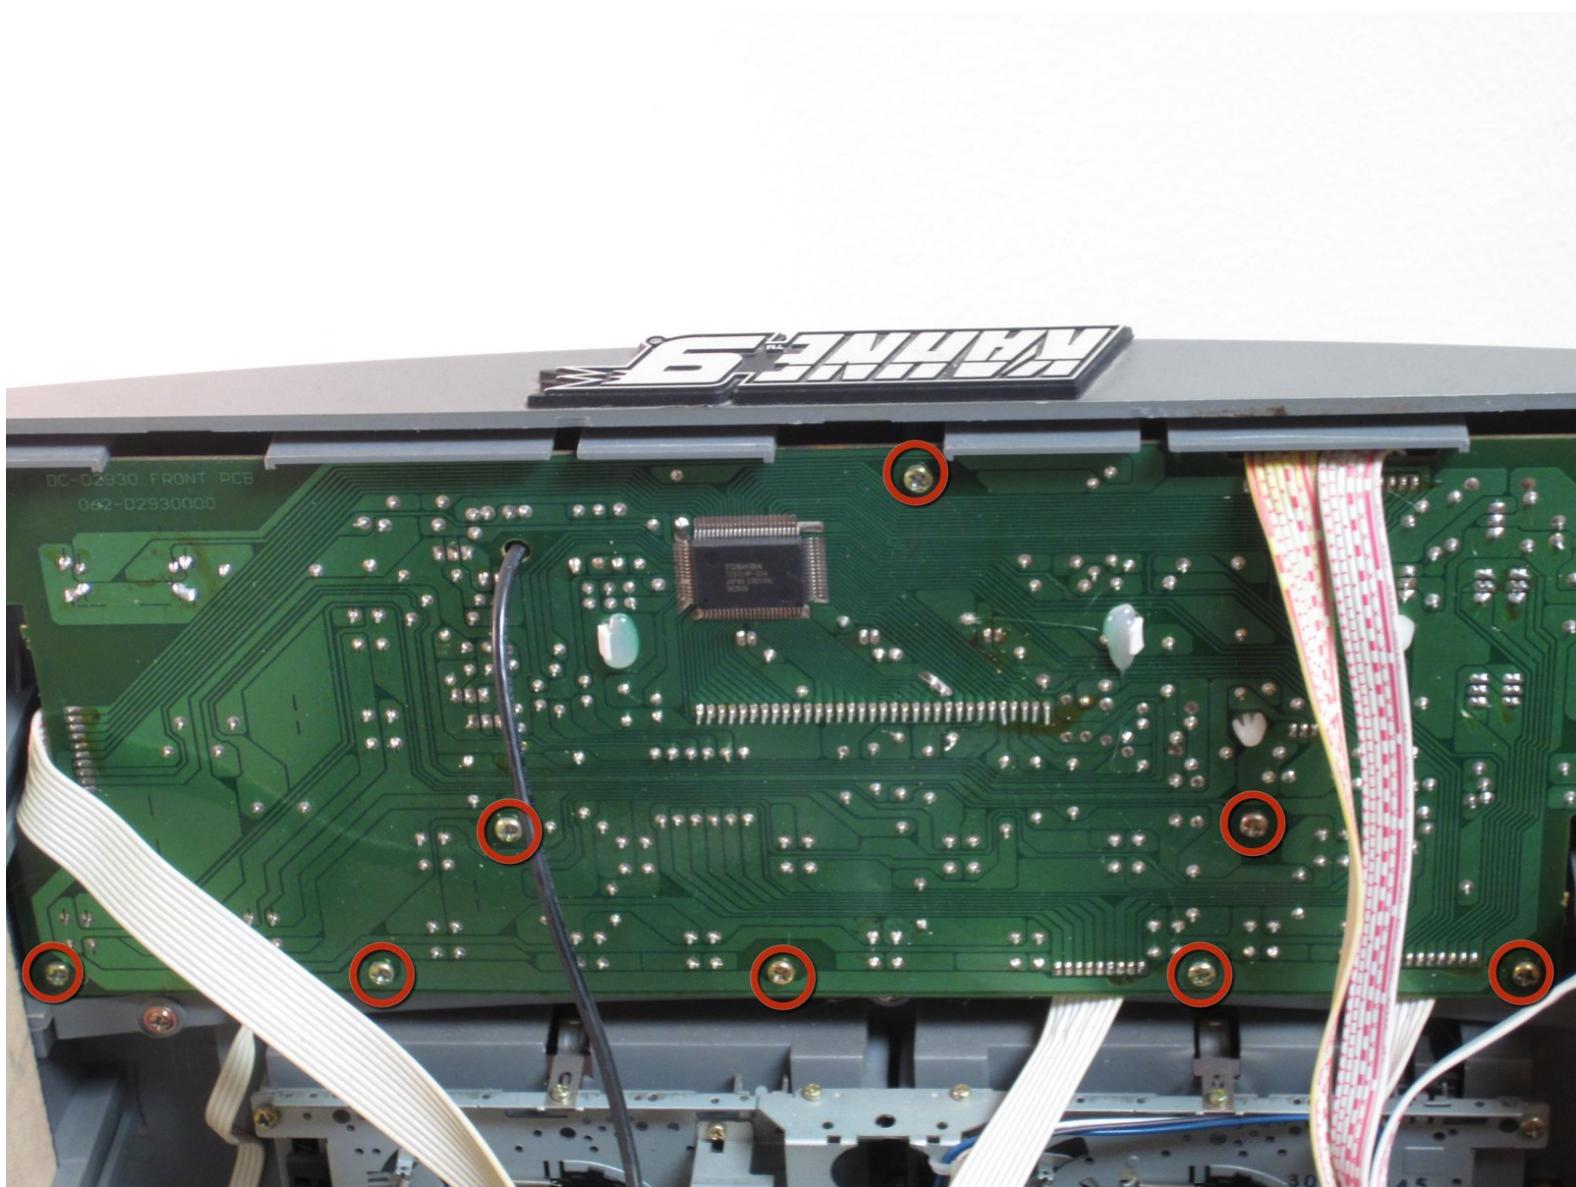



## INTRODUCTION

This guide will help you replace your faulty volume knob. This guide should only be looked at after completing the [Disassembly Guide](#).

### TOOLS:



- [Phillips #2 Screwdriver](#) (1)

## Step 1 — Volume Control Knob

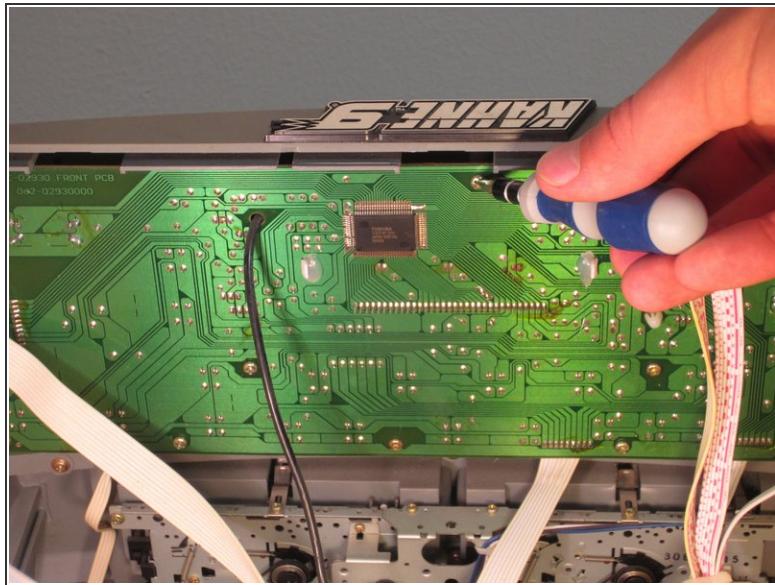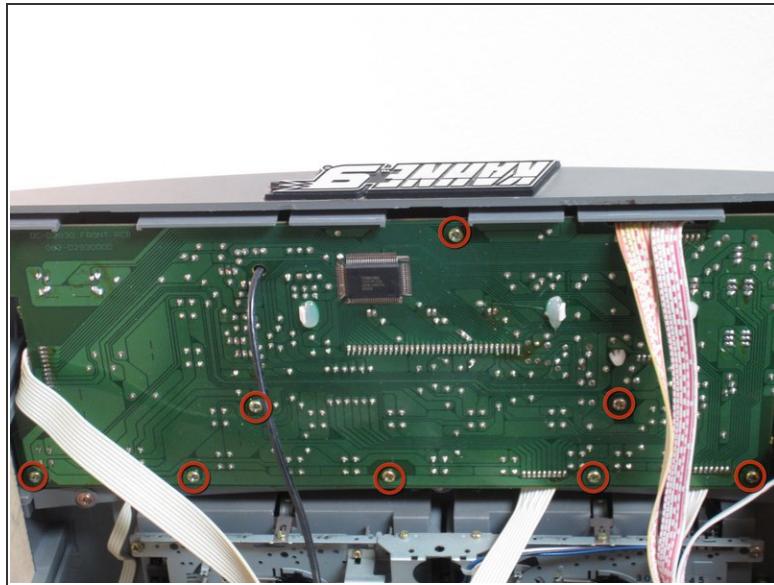

- Remove the screws that are holding the circuit board in place.

## Step 2

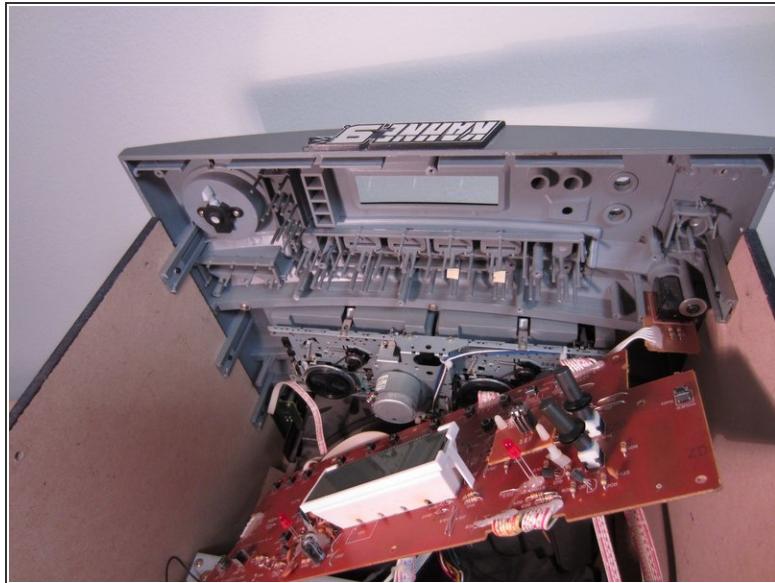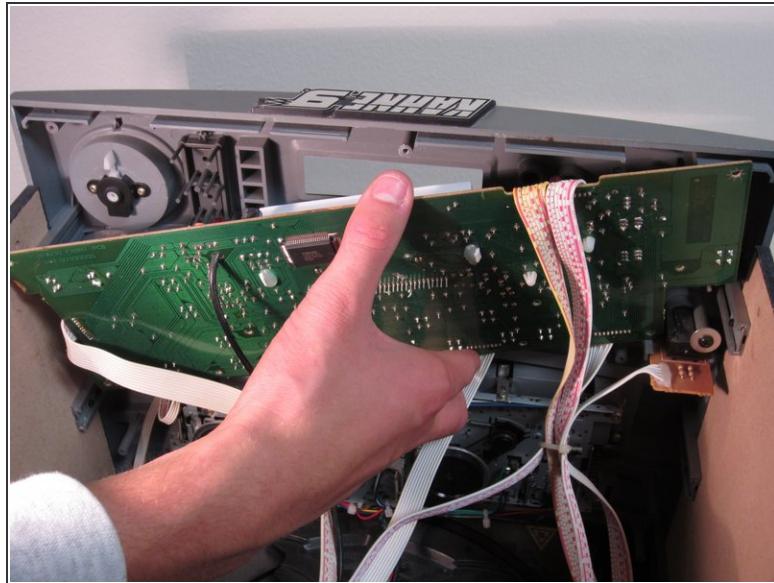

- Pull the circuit board out to reveal the inside of the display.

## Step 3



- Remove the screws and the black piece that are holding the volume control knob in place.

## Step 4



- Pull the volume control knob from the outside and the white piece on the inside until they separate.
- Replace the volume knob with a new one to complete the repair.

To reassemble your device, follow these instructions in reverse order and follow the disassembly guide instructions in reverse order.