



Texas Instruments TI-80 Batteries Replacement

This guide shows you how to remove batteries to replace them.

Written By: brian decater



INTRODUCTION

Batteries, over time, run down and lose power. This guide will help you remove and replace dead batteries.

Step 1 — Batteries



- Locate battery cover on the back of the case.
- Slide battery cover to the right reveal the batteries.

Step 2



- Remove battery cover.
- Slide the red lock down.
 - Slide the metal tab to the right of the top battery.
- Remove the 3-Volt Lithium Coin Cell Battery.
- Slide the red lock up.
 - Slide the metal tab to the right of the bottom battery.
- Remove the 3-Volt Lithium Coin Cell Battery.

To reassemble your device, follow these instructions in reverse order.