




# Thermaltake Theron Plus Button Cleaning

This guide will show how to clean the dirt that may be preventing the buttons on a mouse from working properly.

Written By: Steven Kontra

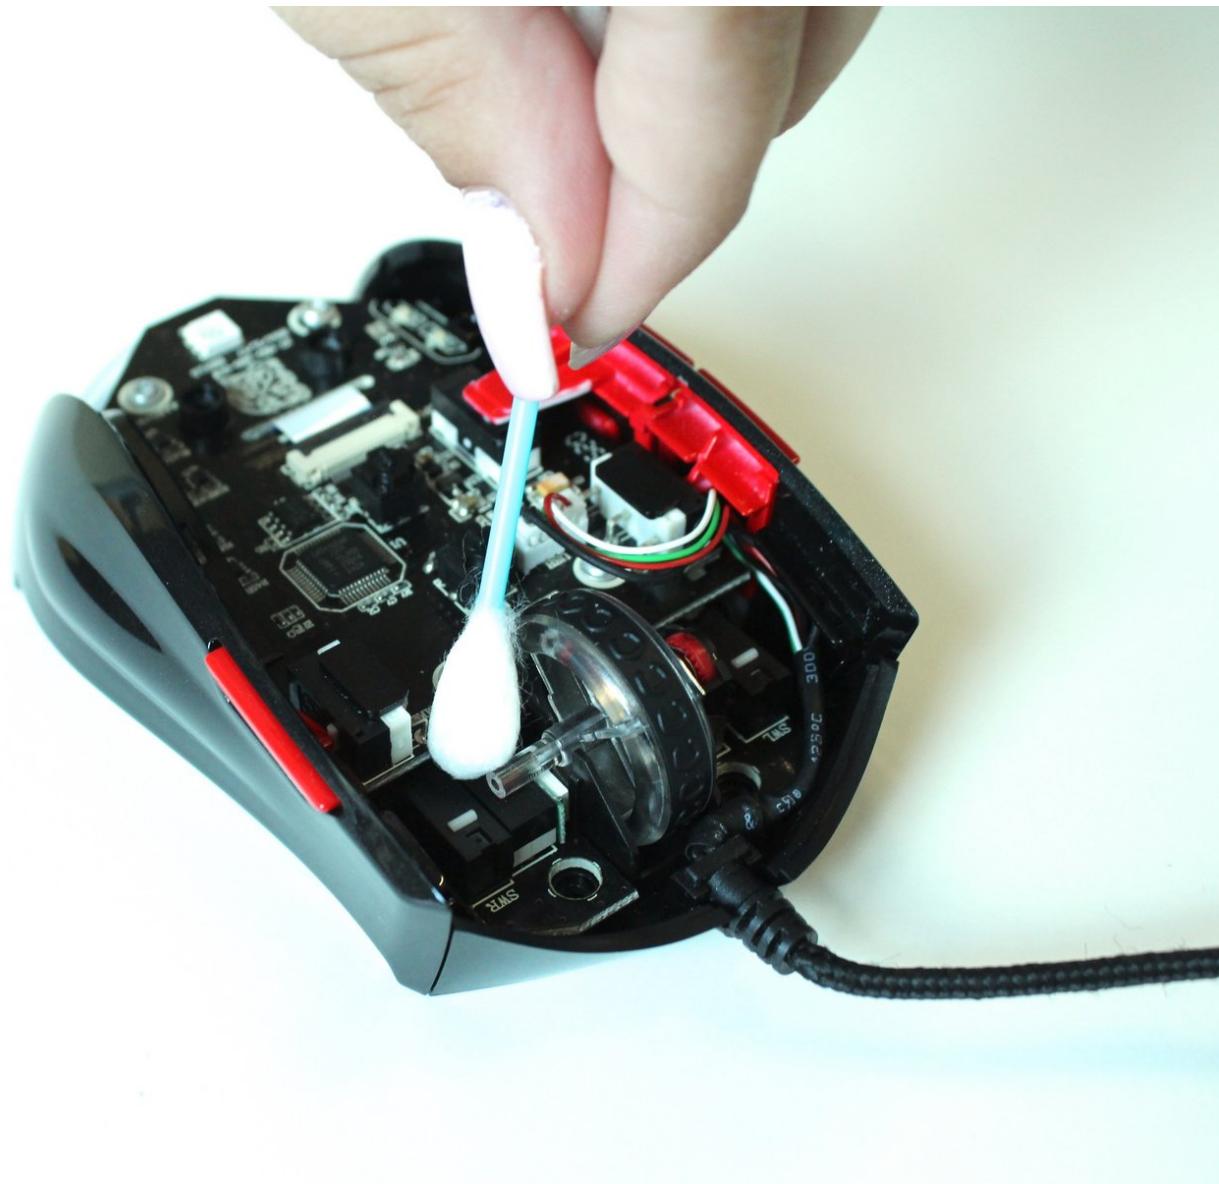

## INTRODUCTION

If the click on your buttons does not seem like it is performing optimally, there may be dirt around the switches. This guide will detail how to remove this debris to return the mouse to its optimal function.

### **TOOLS:**

- [Phillips #1 Screwdriver \(1\)](#)

### **PARTS:**

- [Q-Tips \(1\)](#)

## Step 1 — Top cover




- Remove the plastic cover and pack of weights.
- Remove the two 1.0 mm foam covers with tweezers.
- Peel away the plastic screw cover with tweezers.

## Step 2



- Remove the four 1.0 mm screws with a Ph #1 screwdriver.
- Gently remove the top of the mouse.

## Step 3 — Thermaltake Theron Plus Button Cleaning

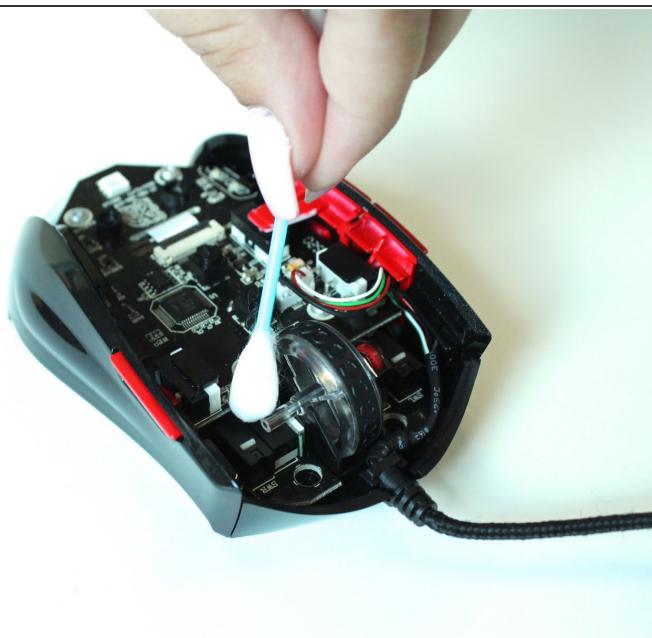

- Use a Q-tip to clean around the switches.

To reassemble your device, follow these instructions in reverse order.