



# TiVo Series 2 TCD24008A Hard Drive Replacement

This guide describes how to replace the hard drive.

Written By: Talha



## INTRODUCTION

This guide describes how to replace the hard drive.

### TOOLS:

- T9 Torx Screwdriver (1)

## Step 1 — Cover




- Unscrew the five 0.31 inch T-9 screws on the back cover.

## Step 2



- Slide the cover towards the back until it is no longer under the front cover.

## Step 3

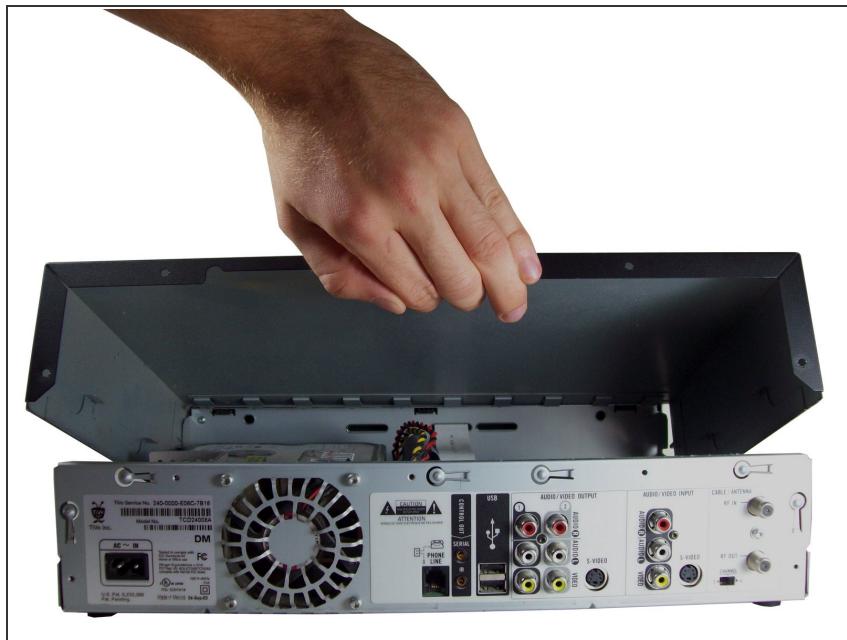



- Lift the cover up and off the device.

## Step 4 — Hard Drive



- Locate the hard drive.

## Step 5

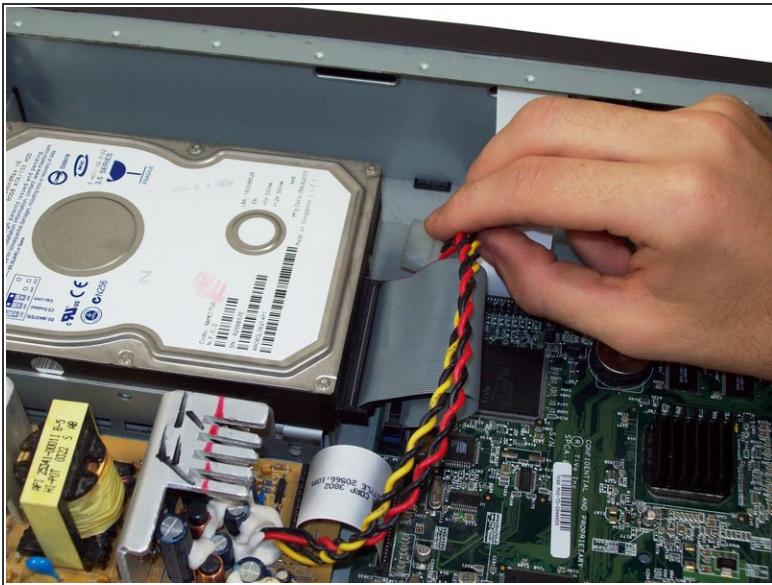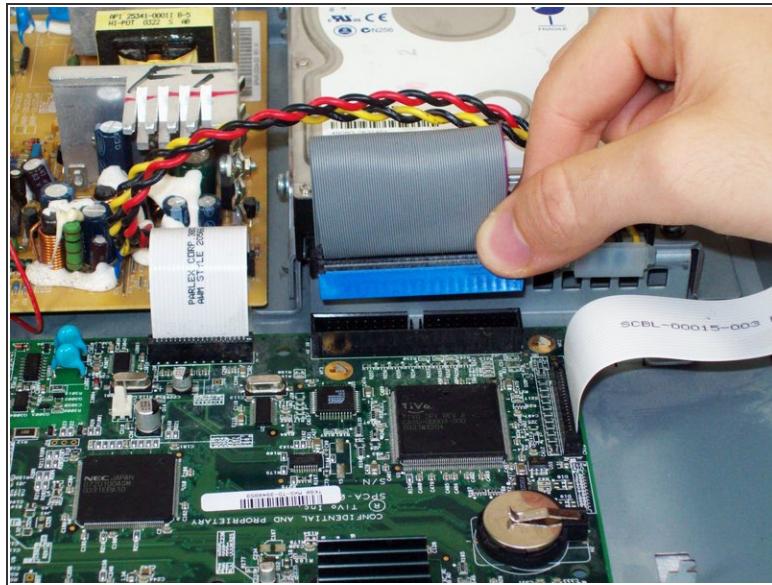

- Remove the ribbon cable by applying firm pressure to the black tabs on the sides.
- Remove the power cable to the right of the ribbon cable.

## Step 6



- Unscrew the 0.31 inch T-9 screws from the hard drive and pull outwards to remove.

To reassemble your device, follow these instructions in reverse order.