



Timex T73751 Clip On Watch Battery Replacement

Changing the battery in this clip-on watch is an adventure. You'll need a CR2025 battery for the replacement.

Written By: DuaneMurphy1



This document was generated on 2020-04-06 07:19:59 AM (MST).

 **TOOLS:**

- **Phillips #0 Screwdriver** (1)
- **Long thin flat bladed screwdriver** (1)
Used to bend metal tabs
- **Tweezers** (1)
Used to hold and manipulate the small screws

 **PARTS:**

- **CR2025 coin cell** (1)

Step 1 — Introduction -- The Front



- The front of the watch. Of course the battery is in the back.
- The button on the left is used to rotate the watch within the clip. The button does not release the watch from the clip.

Step 2



- Remove the four (4) screws on the rear of the watch. Note the battery number (CR2025) printed on the back of the watch

Step 3 — Remove the back cover



- You will find a rubber cover held down by 6 small metal tabs.
- Note - the tab circled in orange was bent in a way that the tab could not be unbent. I don't know if that is on purpose.

Step 4 — Remove the rubber gasket



- The tabs are now bent upward in order to release the rubber gasket. Note that the tab circled in orange was not unbent.

Step 5 — Remove the battery cover



- The upper screw is longer than the lower screw. The upper screw tab has an extra tab.

Step 6 — Remove the battery and cover



- Two screws hold down the battery cover. The screw in the side with a tab is slightly longer than the other side.

Step 7 — Separate battery and battery holder



- Peel the battery holder off of the CR2025 battery.
- Note the message on the cover: After battery insertion short AC pad and battery (+) to reset. Note the small arrow on the lower left.
- The top of the battery is (+).

To reassemble your device, follow these instructions in reverse order.