



# Toaster Oven Toasting Knob Replacement

This guide will provide the user with instructions on how to replace the toasting knob on a Toastmaster toaster oven.

Written By: Alissa Mell



## INTRODUCTION

This guide will teach you how to properly disassemble a Toastmaster toaster oven and replace the toasting knob. Before you begin, clean out your toaster oven and make sure it is off and unplugged.

### TOOLS:

- Phillips #0 Screwdriver (1)

## Step 1 — Toasting knob



- Remove the two 4mm by 8mm screws from the back of the toaster oven.

## Step 2



- Remove the four 4mm by 8mm screws from the black supports from the base of the toaster oven.
- Take the two supports off of the bottom.

## Step 3




- Remove the two 4mm by 4mm screws from the base in order to remove the tray.

## Step 4



- Slide the back panel off of the oven.

## Step 5

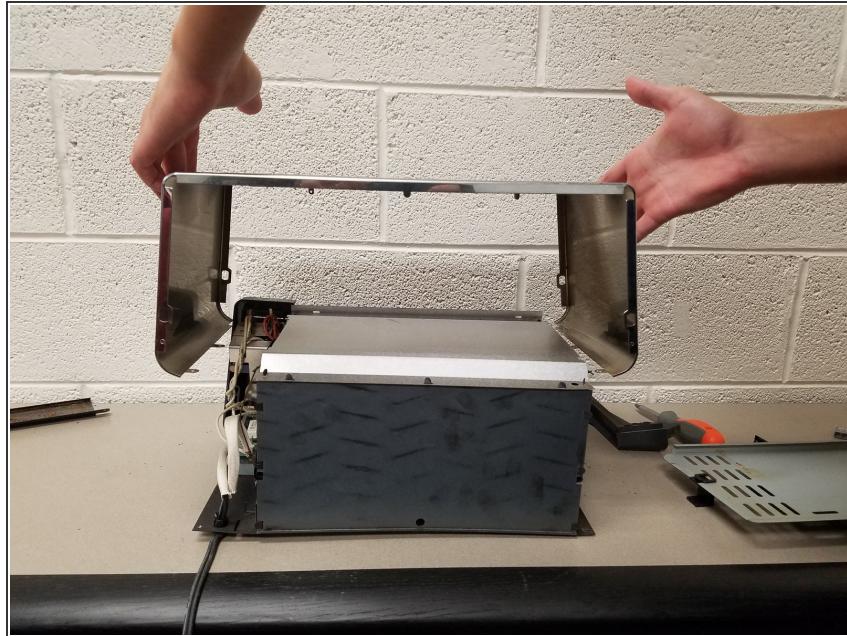

- Grip the sides of the metal cover and lift the cover up off the toaster oven top.

## Step 6



- The knob is missing in the first picture.
- Push the knob into the hole.
- The knob is now back in place in the last picture.

To reassemble your device, follow these instructions in reverse order.