



Toilet Tank Lid Replacement

Remove the toilet tank lid on your gravity flush toilet.

Written By: Ron Davis



INTRODUCTION

The toilet tank lid will need to be removed in order to provide access to the inner components of the toilet tank.

Step 1 — Tank Lid



- Lift the tank lid up and away from the toilet tank.

To reassemble your device, follow these instructions in reverse order.