



# Toilet Tree TTP-TRIM-1 Blade Replacement

Replace broken or worn timmer blades to restore the utility of your Toilettree nose & ear trimmer.

Written By: samuel fontanez



## INTRODUCTION

The blades on the Nose & Ear trimmer eventually wear out and require replacement. The following steps will guide you through how to safely and successfully replace these blades.

### **TOOLS:**

- [Tweezers \(1\)](#)

### **PARTS:**

- [AA Batteries \(1\)](#)

## Step 1 — Battery




- Twist the battery cap found on the bottom of the device counterclockwise.

## Step 2





- Remove the battery

## Step 3 — Trimmer Blades

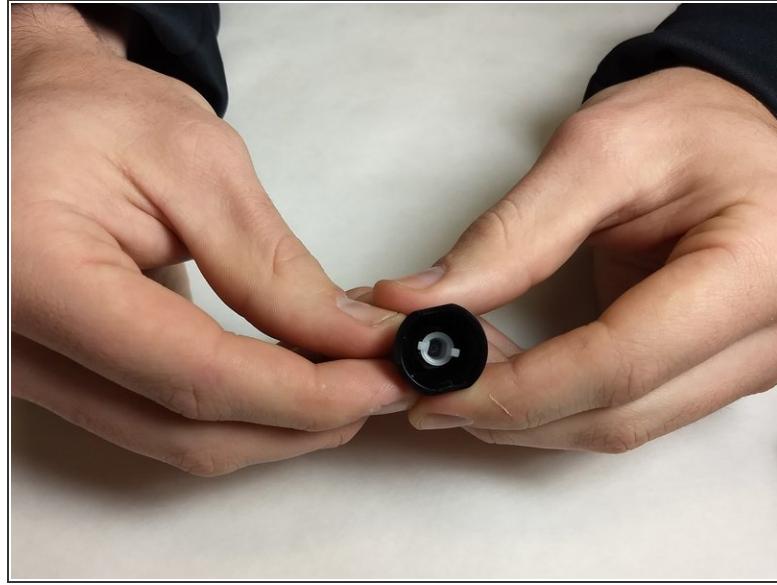

- Twist the tip of the trimmer counterclockwise to remove it.
- The trimmer blade assembly will be located on the inside of the tip.

## Step 4

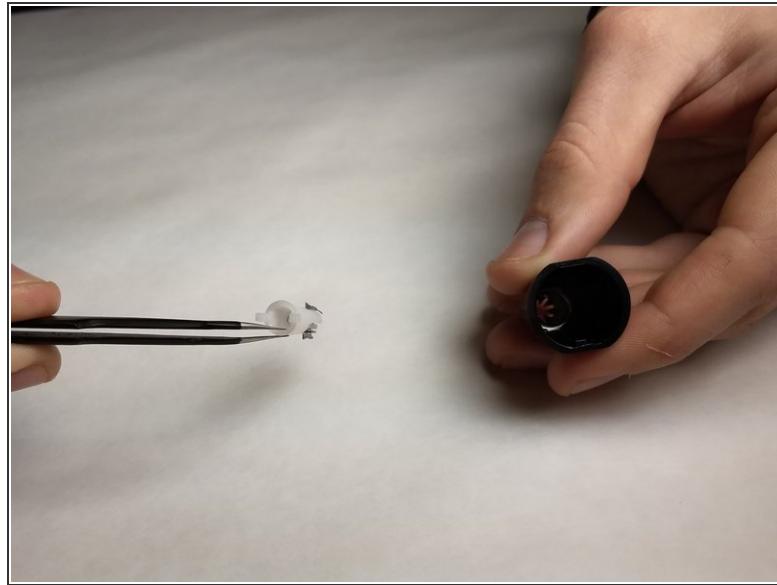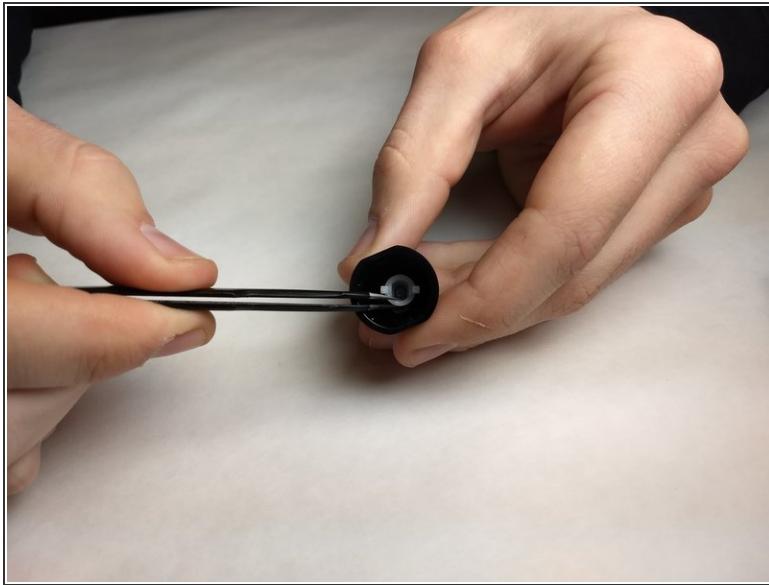

- Using the tweezers, pull the blade assembly out of the trimmer tip.

To reassemble your device, follow these instructions in reverse order.