


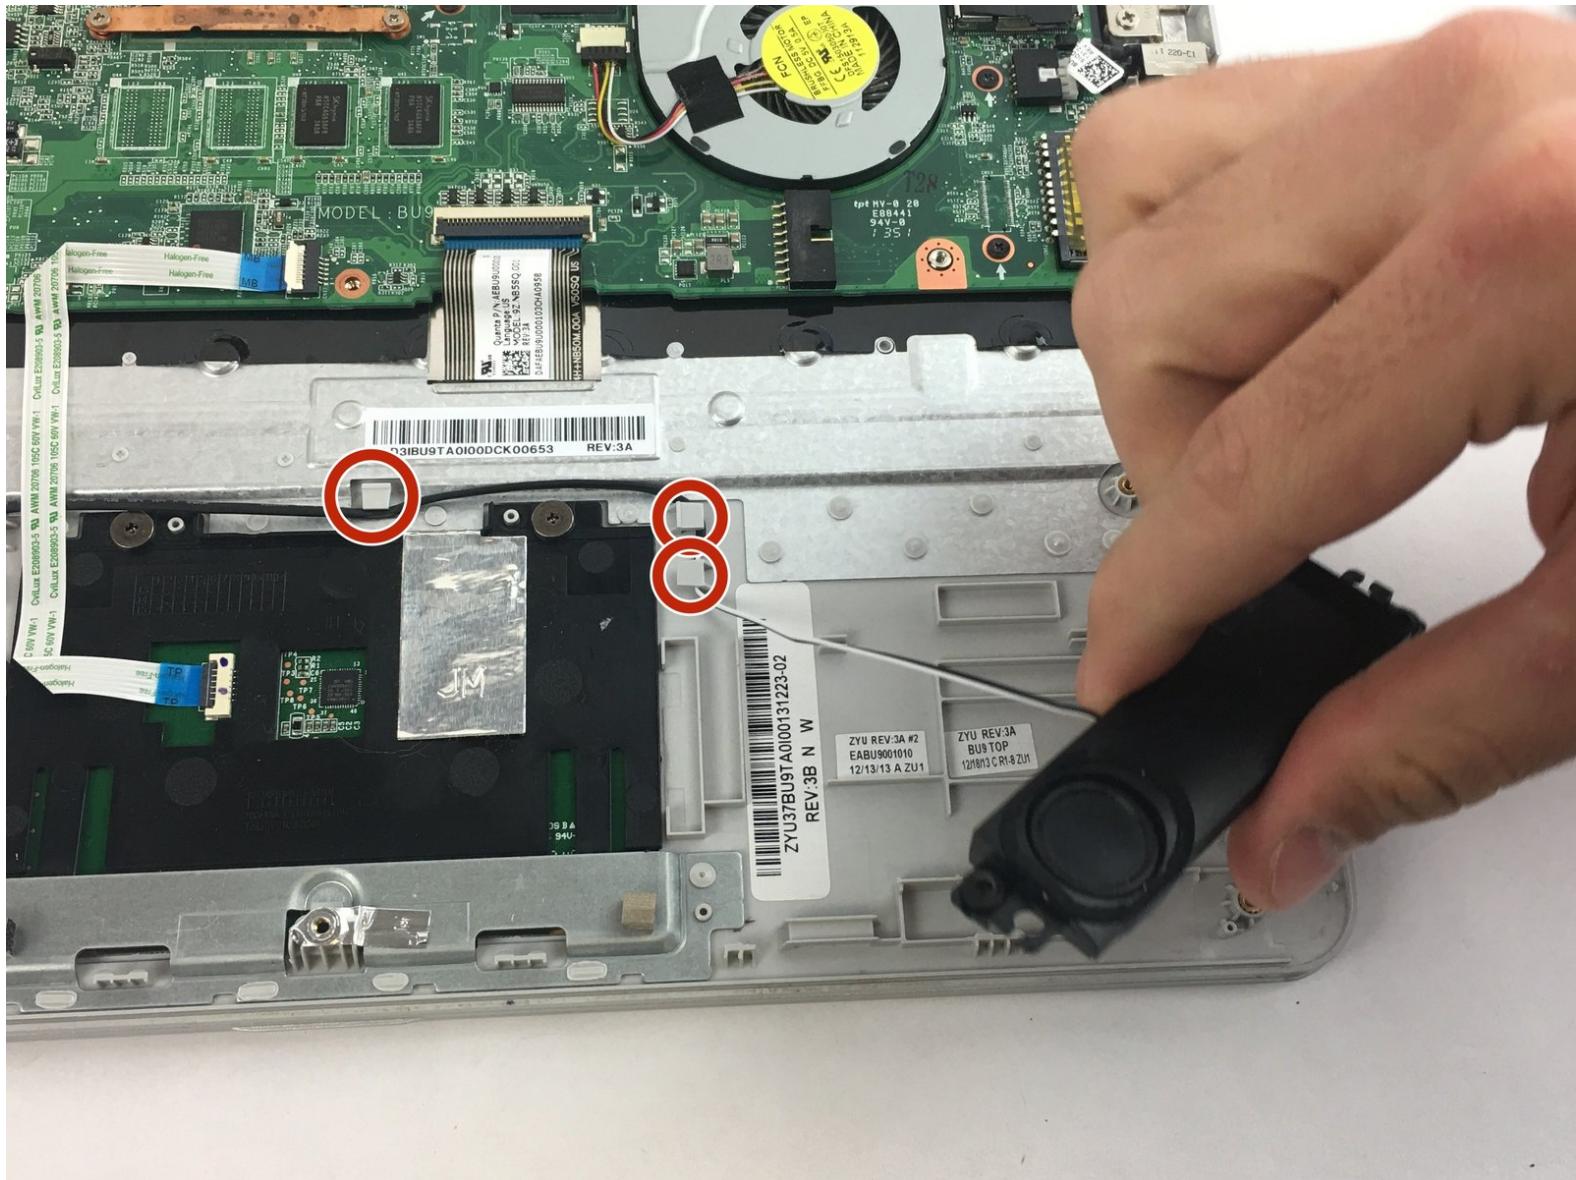

Toshiba Chromebook CB35-A3120 Speakers Replacement

This guide is to replace the speakers in a Toshiba ChromeBook.

Written By: Jayce Houghton




INTRODUCTION

In this guide we plan to remove the internal speakers from the Toshiba ChromeBook and replace them with new ones.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [64 Bit Driver Kit](#) (1)

Step 1 — Speakers

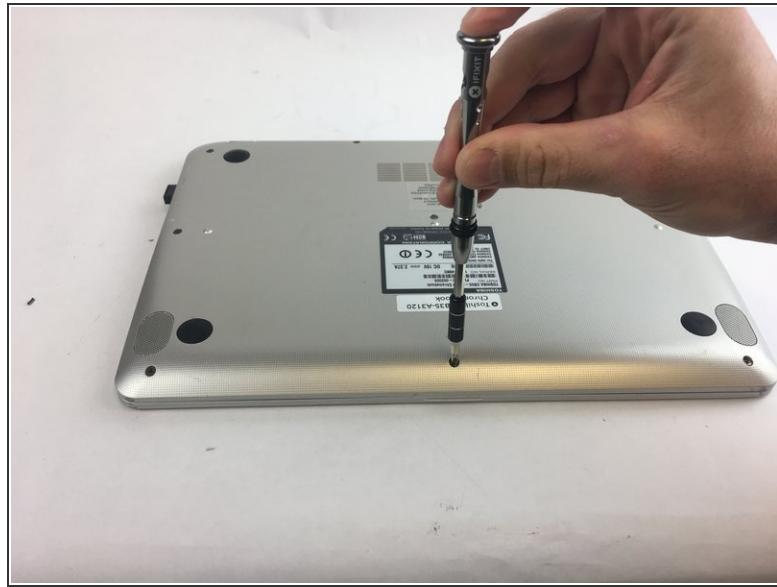


- Using a Y1 screw driver head remove all ten .9mm screws from the back cover
- Set the screws aside in preparation for reassembly

Step 2




- Remove the back cover by placing a prying tool in the SD slot and popping the clips out of place.

Step 3

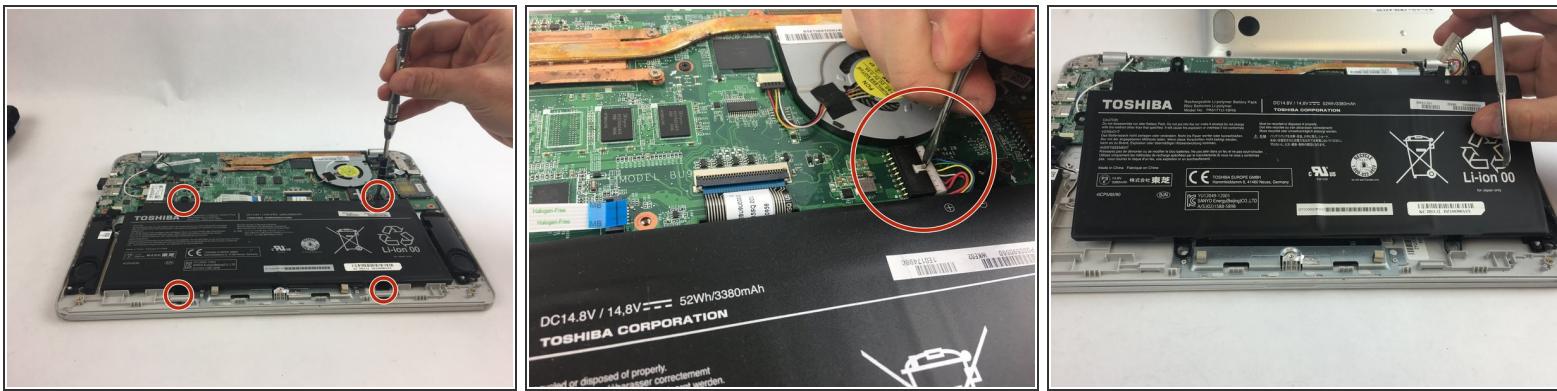



- Unscrew the battery by using a J1 screw driver head, and place the four .7mm screws off to the side
- Using a pry tool, pop the battery connector out of place and gently lift the battery upward.

Step 4

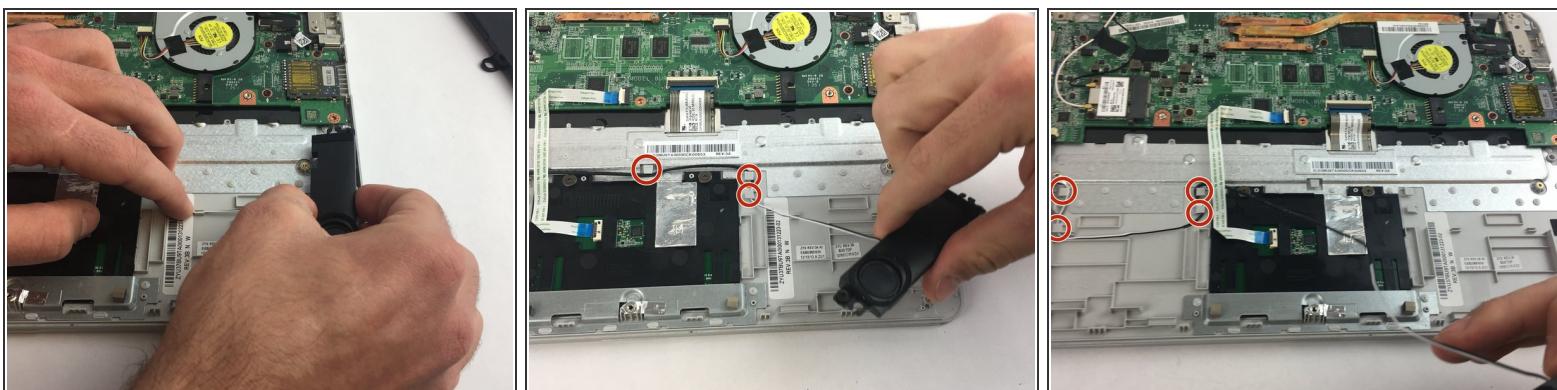

- Remove the right side speaker by popping it out of place with your finger
- Follow the speaker wire along the clips underneath the battery until you reach the left hand speaker

Step 5

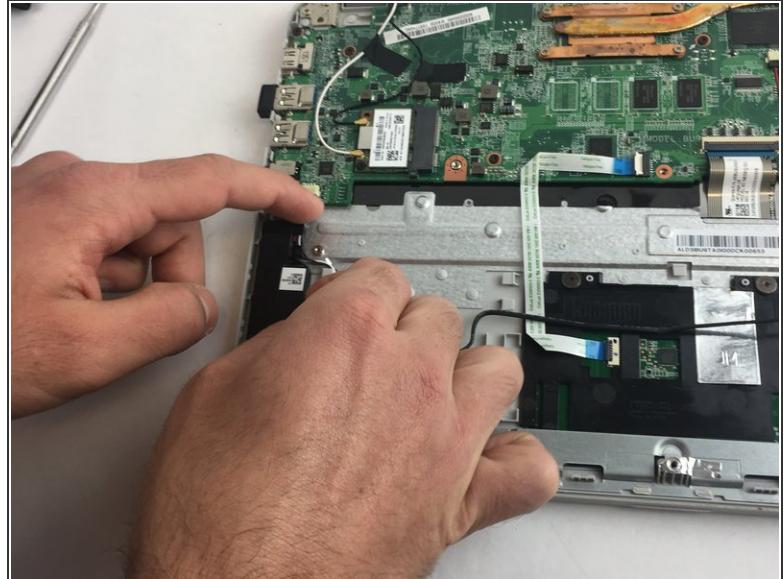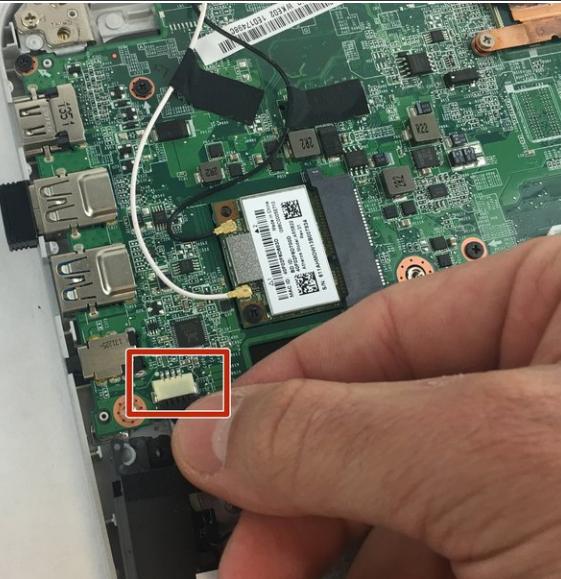

- Unplug the connector wiring the speaker to the mother board.
- Pop the speaker out of the computer, similar to the method used in the previous step.

To reassemble your device, follow these instructions in reverse order.