




Toshiba Dynabook T552-58G Screen Replacement

If you need to replace the screen due to faulty function, follow this guide. Tools are required.

Written By: Courtney Orange

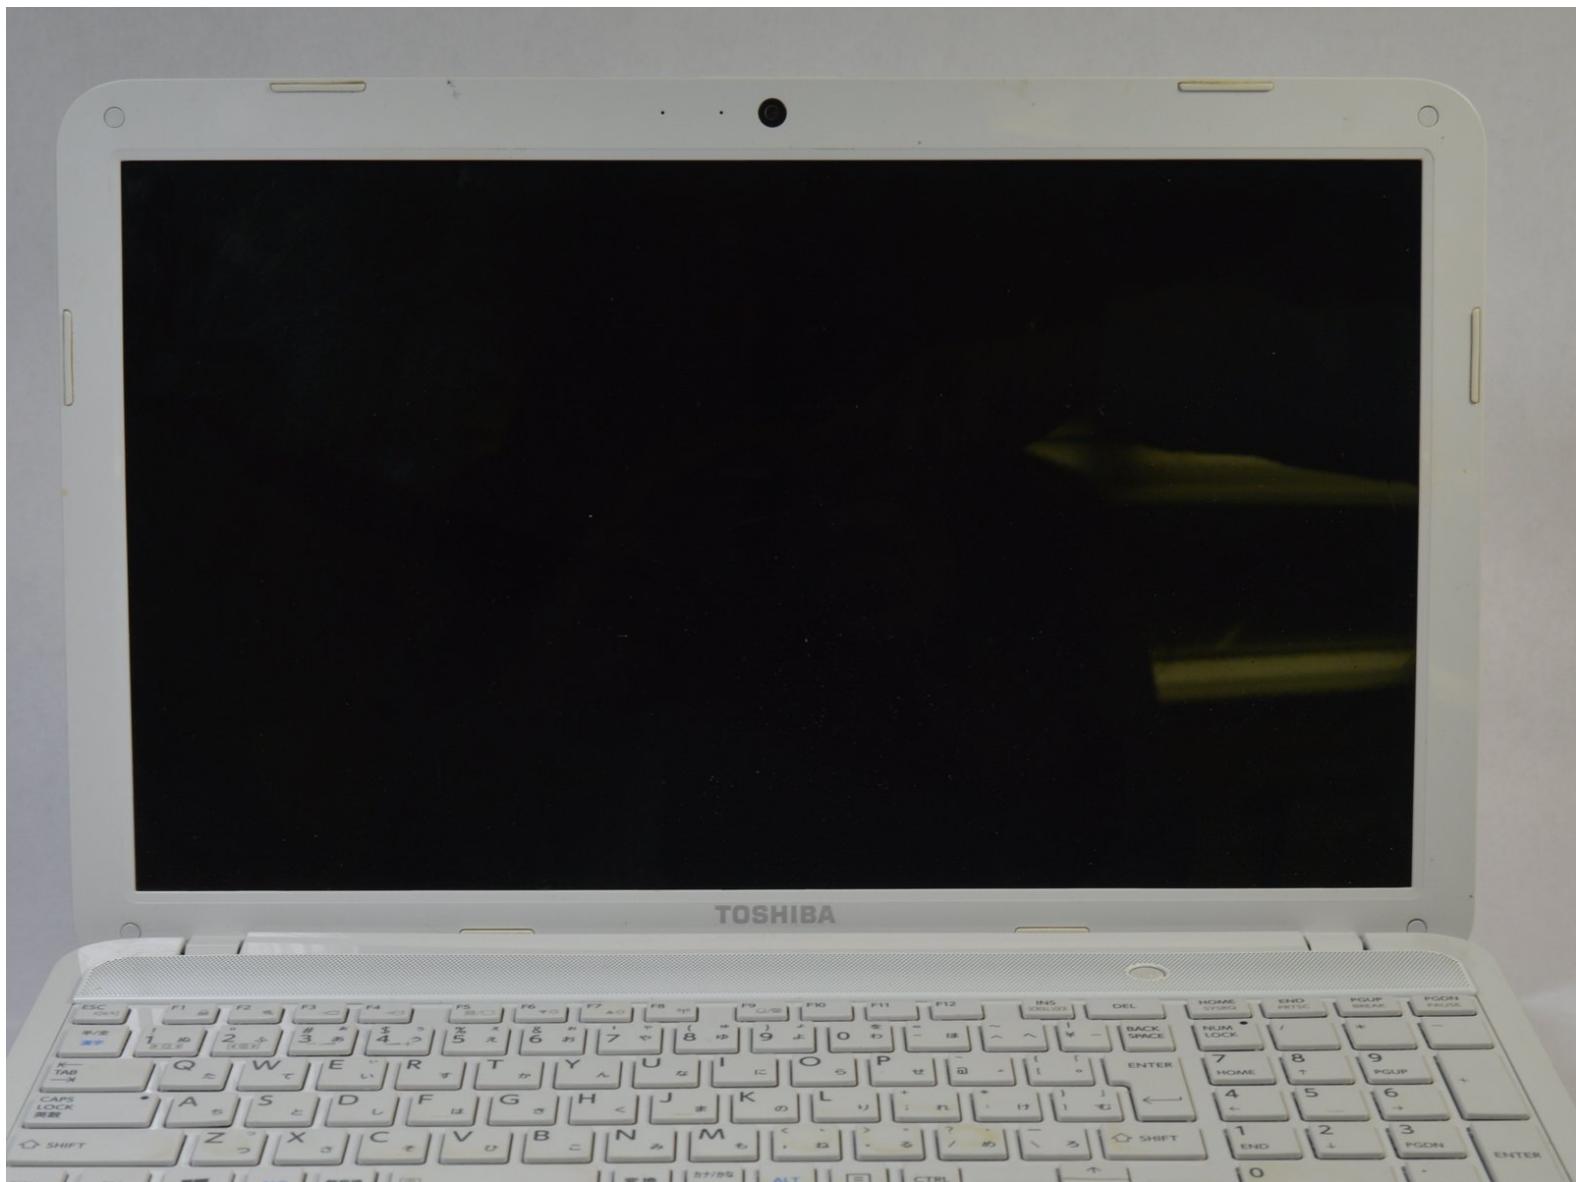

INTRODUCTION


Fix your computer's screen with ease by following this guide.

If your screen is busted, malfunctioning, or just needs to be replaced, this guide will assist you through the process. For best results, all steps should be followed.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Screen

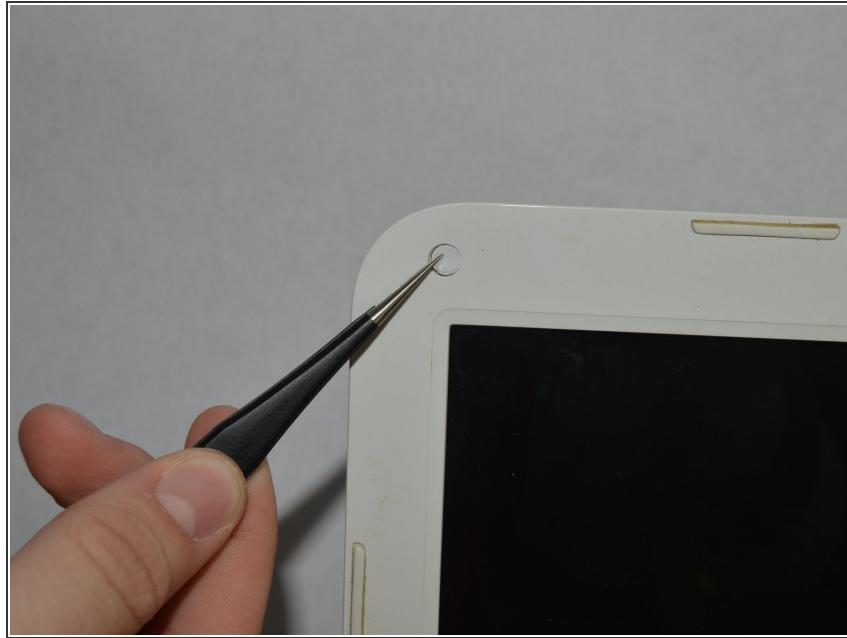

- Peel screw covers off with pointed tweezers. There are four of them.

Step 2



- Using a PH 00 screwdriver, unscrew the four screws in each corner of the screen cover. Each screw is 3.3 mm long.


Step 3



- Using your fingers, pull the screen covering off.

(i) The cover should pop off.

Step 4

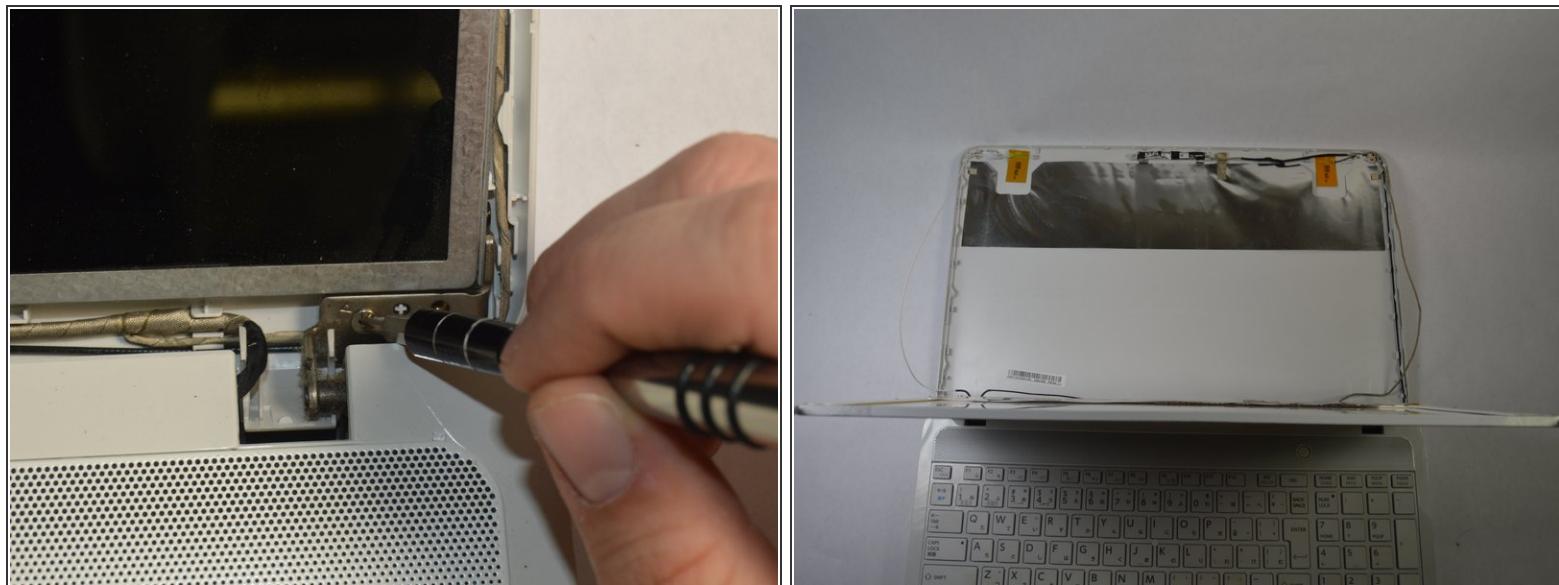

- Using a PH 0 screwdriver, unscrew the screws connecting the front cover to the screen. There are two and each screw is 3.4 mm long.

Step 5



- Using your fingers, pull the wires from the backing of the front cover.
- Disconnect the wire from the front cover.

Step 6



- Using a PH 0 screwdriver, remove the screws from each side of the screen. There are a total of six screws. Each screw is 3.2 mm long.

Step 7



- Remove wire from the back of the screen by just lifting and pulling it.

Step 8



- Gently remove screen from the rest of the computer.

To reassemble your device, follow these instructions in reverse order.