




Toshiba Encore WT8-A Tablet Camera Replacement

This guide is intended to show tablet owners how they can take their device apart in order to replace the camera.


Written By: Melanie Mestre

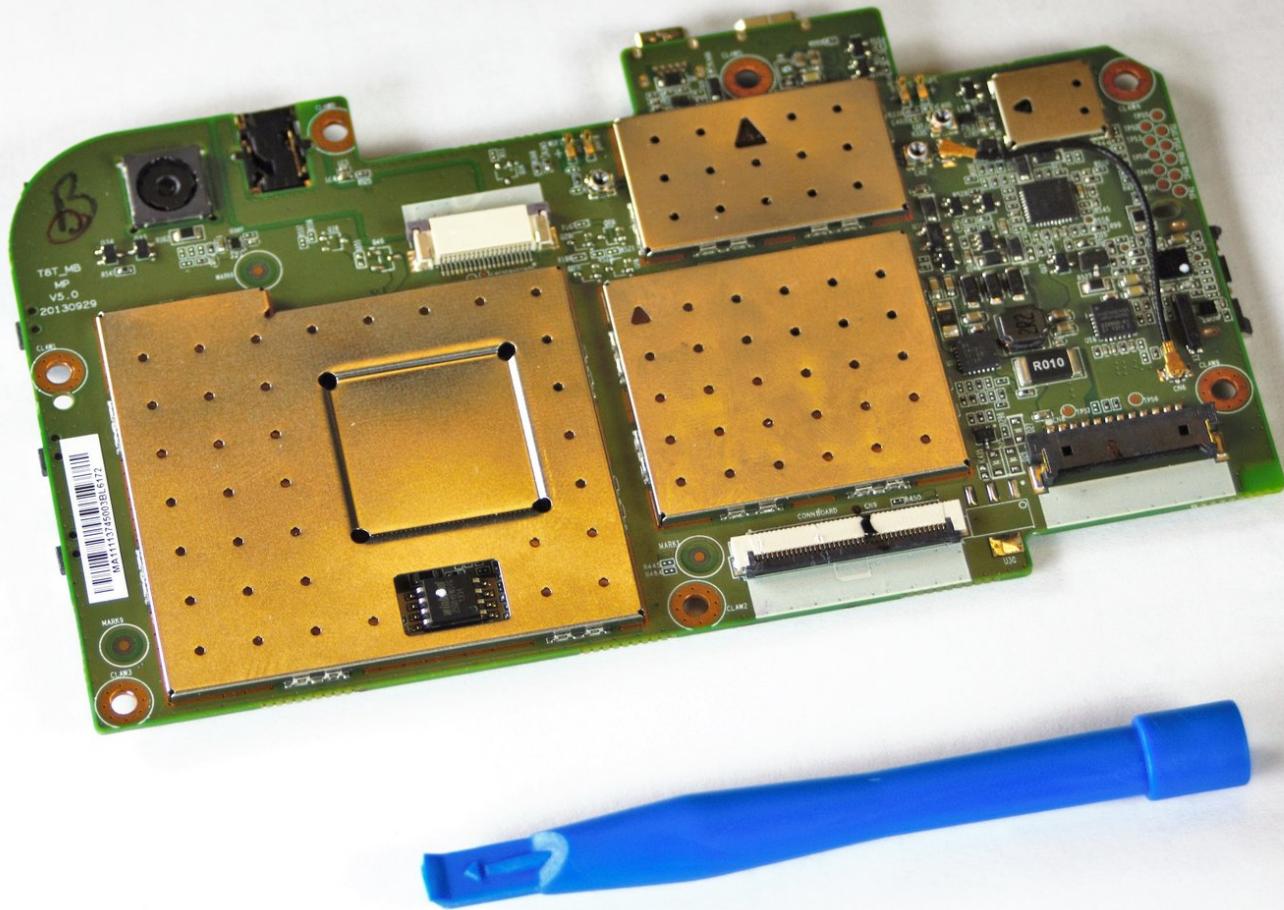

 **TOOLS:**


- Metal Spudger (1)
- iFixit Opening Tools (1)
- Tweezers (1)
- Phillips #0 Screwdriver (1)

Step 1 — Motherboard

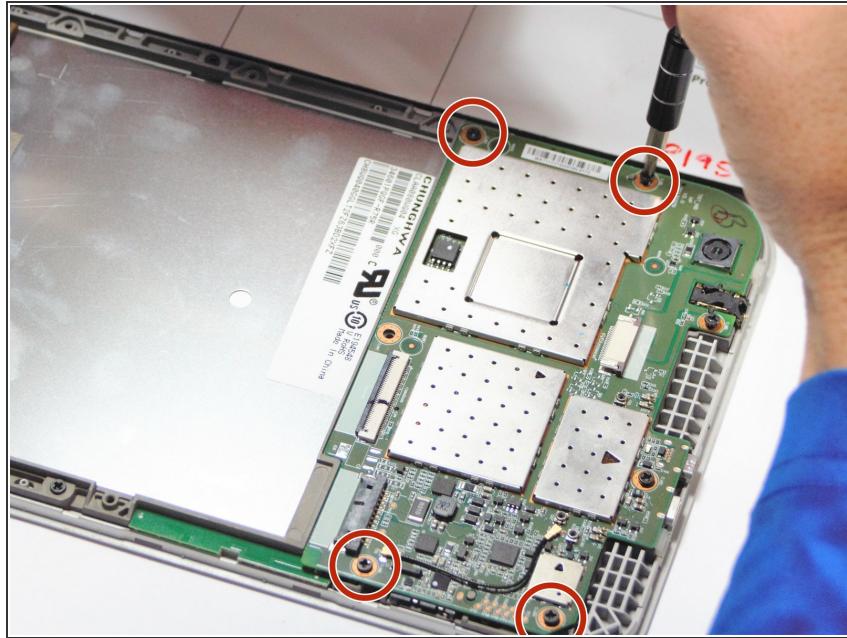


- Remove the 4 – 4.5 mm screws from the motherboard assembly.

Step 2

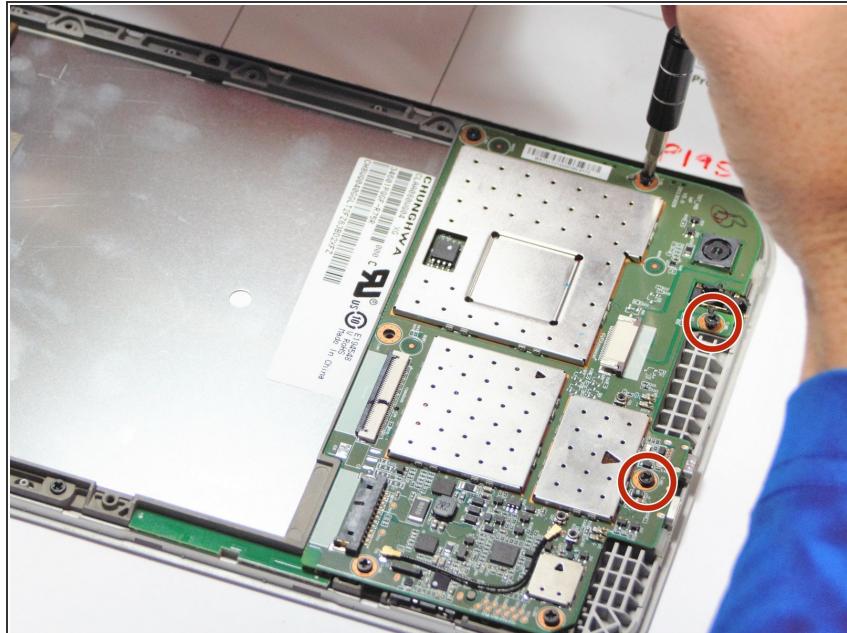


- Remove the 2 – 3.5 mm screws from the motherboard assembly.

Step 3

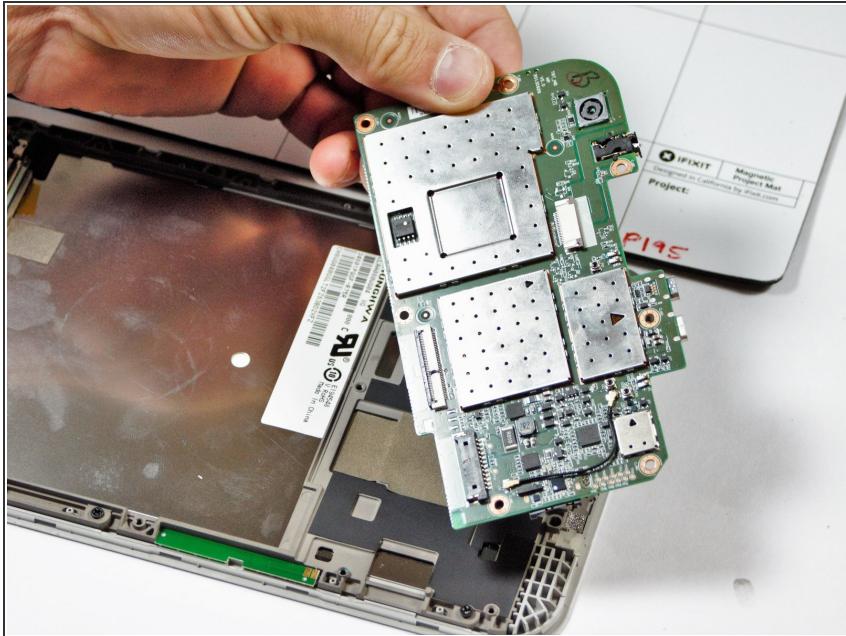


- The motherboard should come free at this point.

Step 4 — Camera

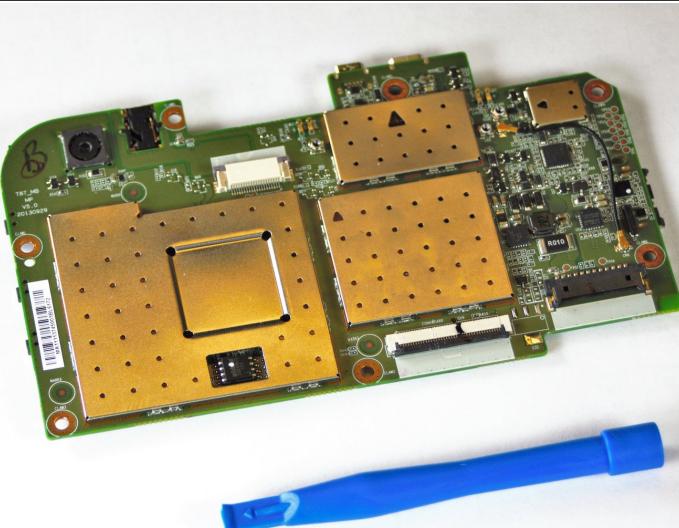


- Use small plastic opening tool for the following steps.

Step 5

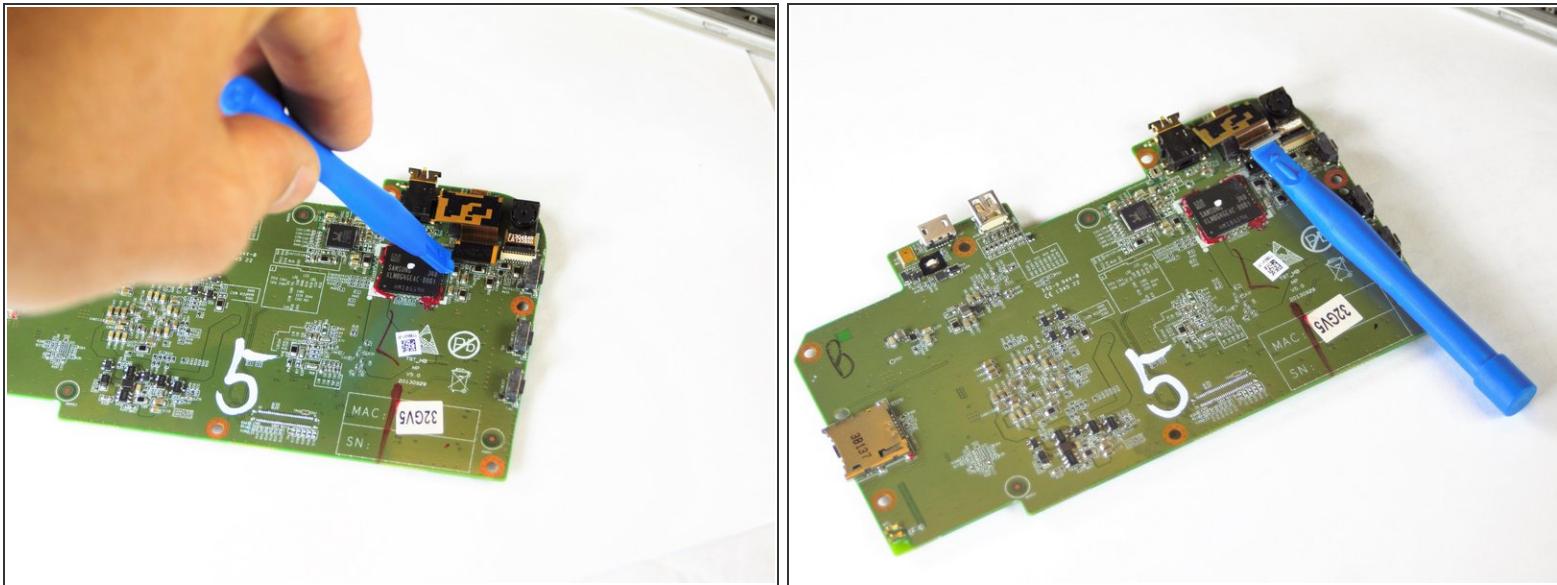


- Use small plastic opening tool to pry rear facing camera flat top connector from motherboard.

Step 6

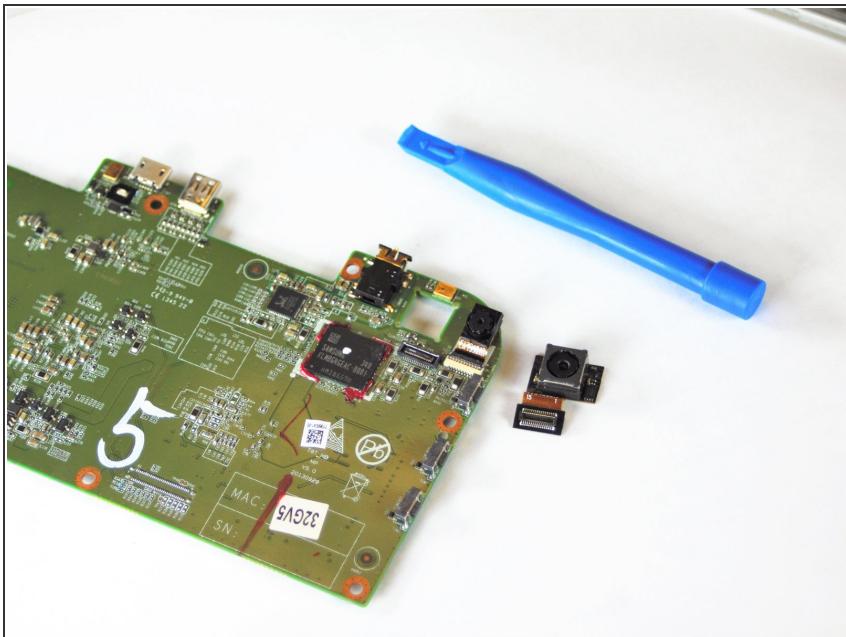


- The rear facing camera should come free at this point.

Step 7

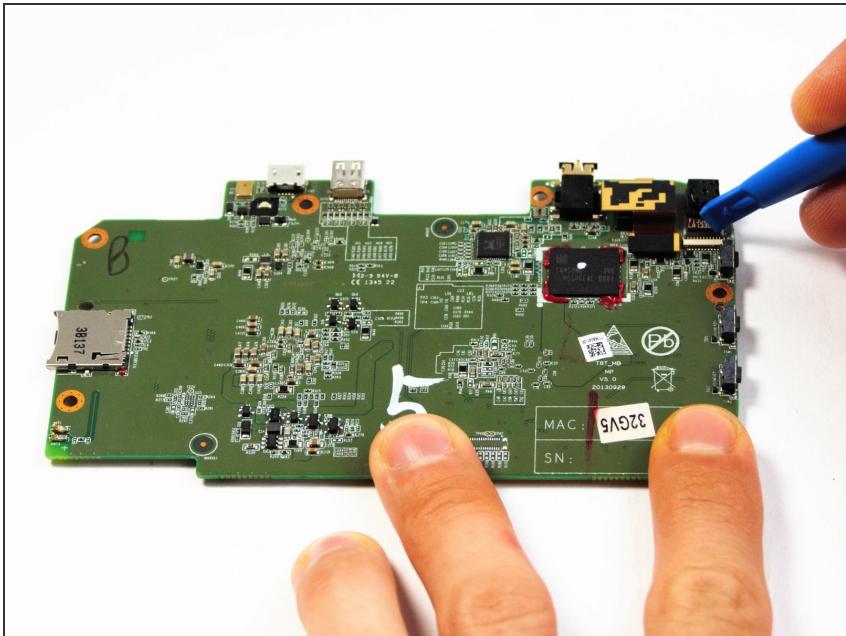

- Use small plastic opening tool to pry front facing camera flat top connector from the motherboard

Step 8

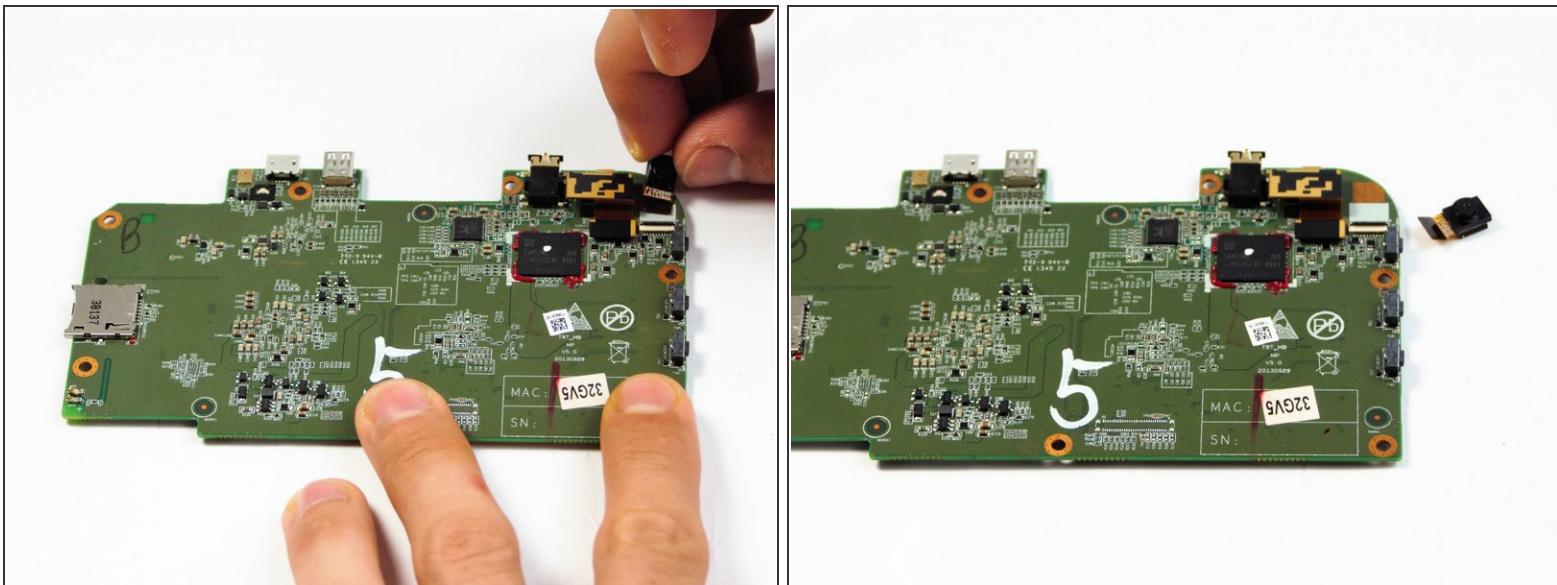

- The front facing camera should come free at this point.

To reassemble your device, follow these instructions in reverse order.