



Toshiba Excite 7 Battery Removal

How to remove the battery of a Toshiba Excite 7.

Written By: osmel fermin



INTRODUCTION

The battery is the main power source of your device. After replacing your battery you should receive up-to 13 hours of battery life assuming normal usage.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [64 Bit Driver Kit](#) (1)
- [Magnetic Project Mat](#) (1)
- [Tweezers](#) (1)

Step 1 — Battery Removal





- Remove the back cover.
- Work your fingernail or flat object under the cover's seal. Start at the top right corner just above the front facing camera this is the device "Weak Spot".
- After you pry open the first clip slide the flat object along the perimeter of the cover until the cover is removable. You should hear the clips pop open.

Step 2 — Remove Tape

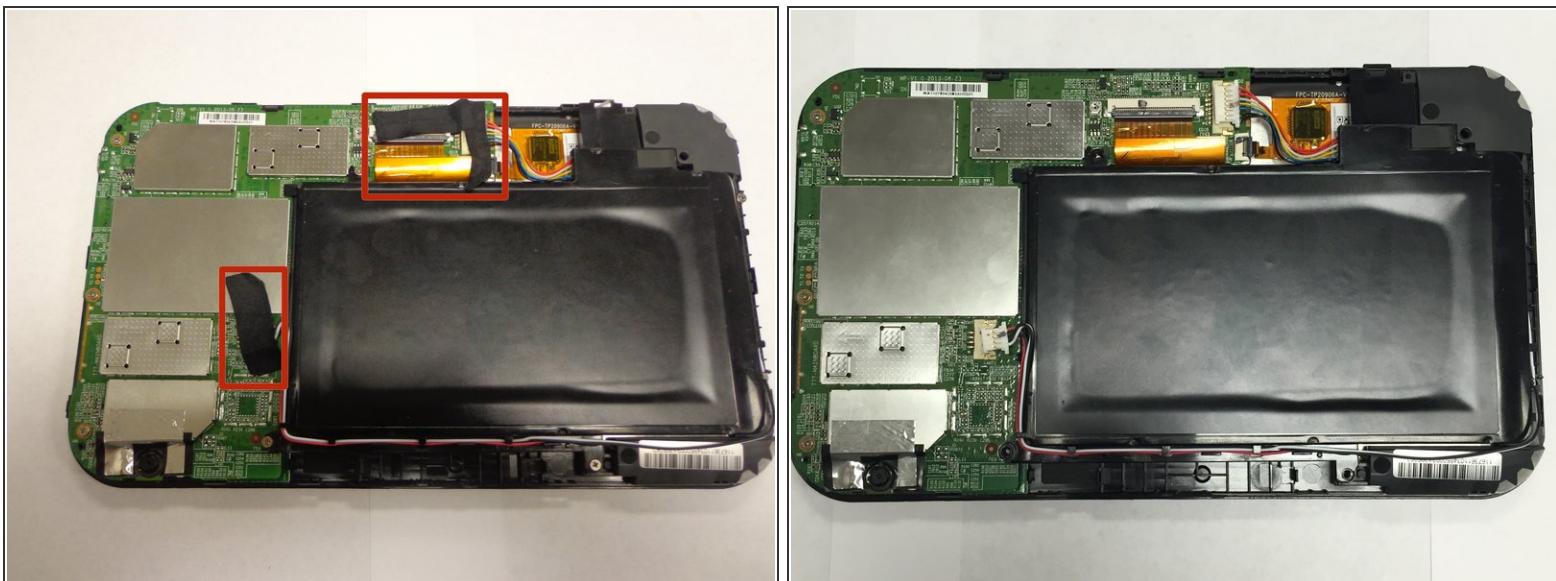



- Remove any black tape from the device.
- Keep the tape, you will need to put it back on when you are done.

Step 3 — Unplug Wires

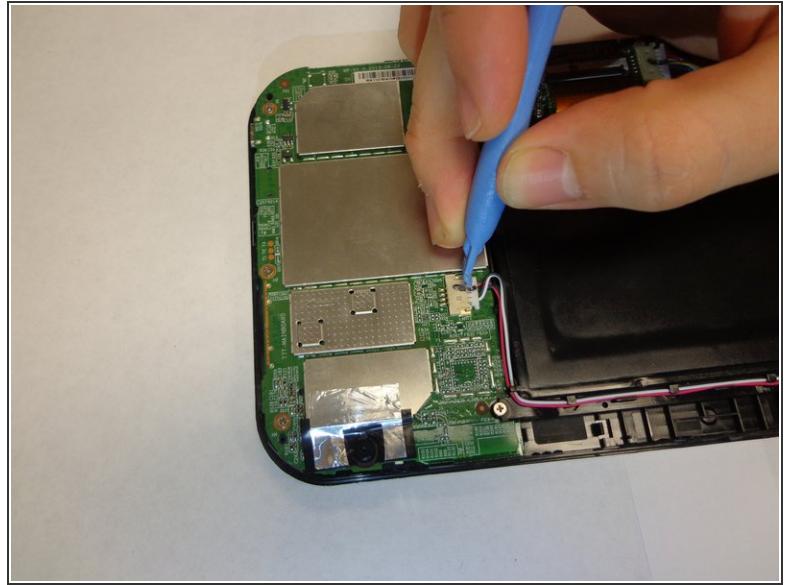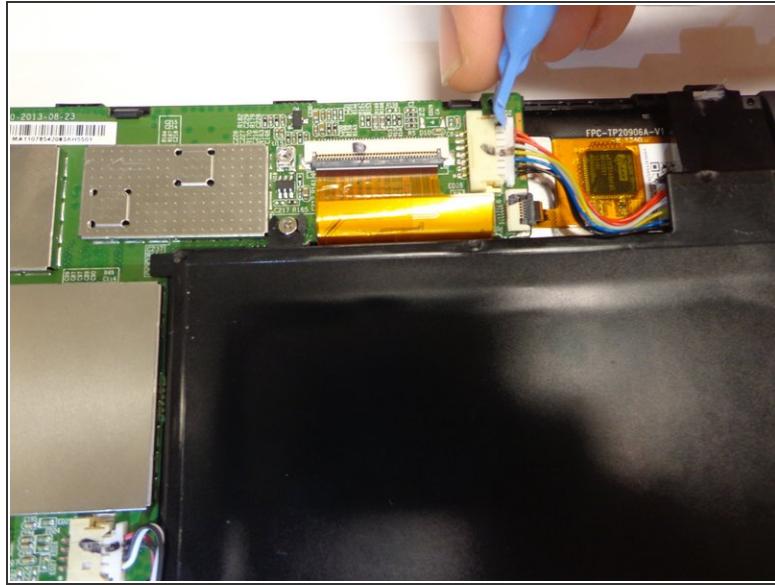



- Unplug the wires from the battery.
- The battery is the black rectangle in the middle of the device.
- The device has two wiring harnesses attached to it, one just above the battery and one just to the right.

Step 4 — remove screws

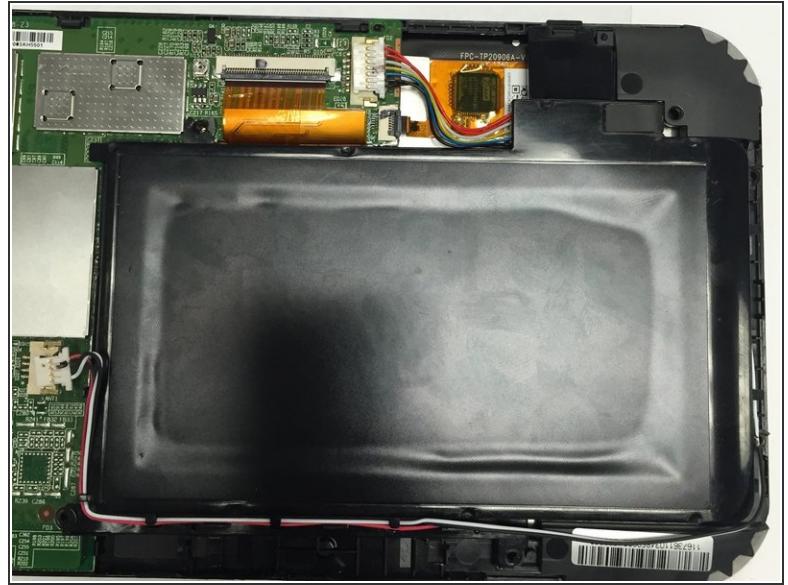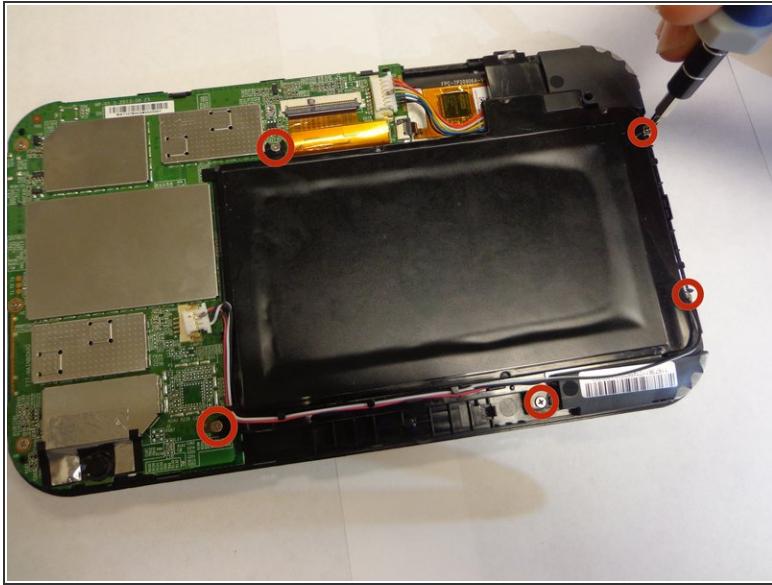

- Unscrew the battery from the device.
- The device has 5 screws to remove, keep the screws.

Step 5 — Unclip and remove battery

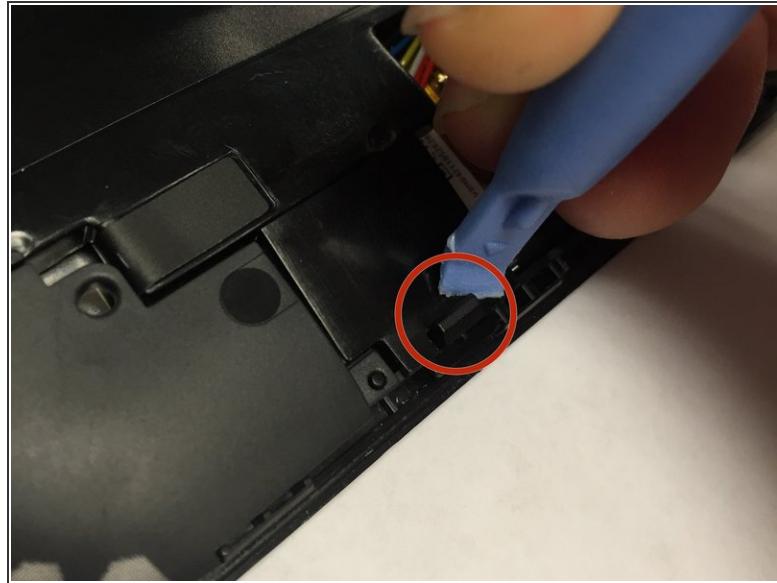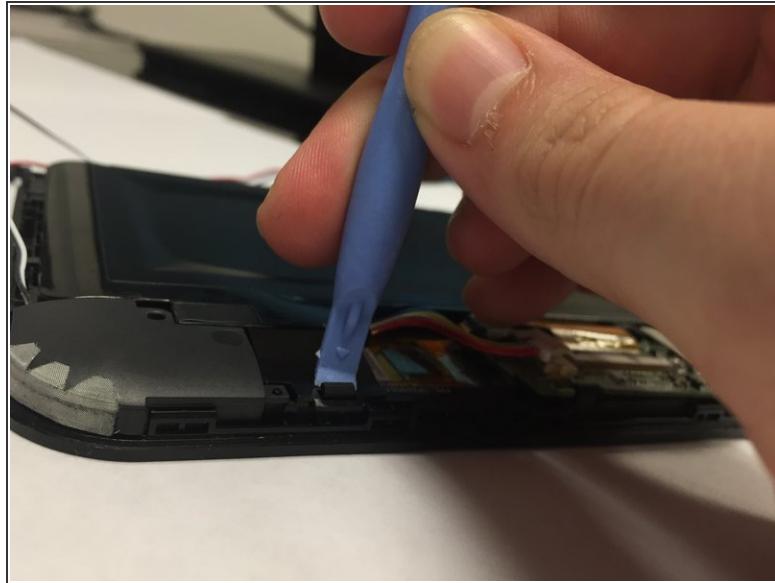

- The battery has one clip you will need to remove .
- The clip is located at the bottom right corner of the battery just above the right speaker.
- Push the clip back then lift the battery up.
- The speakers and wires are not secured to the battery, they may fall off.

To reassemble your device, follow these instructions in reverse order.