




Toshiba Excite 7c Camera Replacement

This guide will show you how to replace the camera on your tablet.

Written By: Reyna Serrato

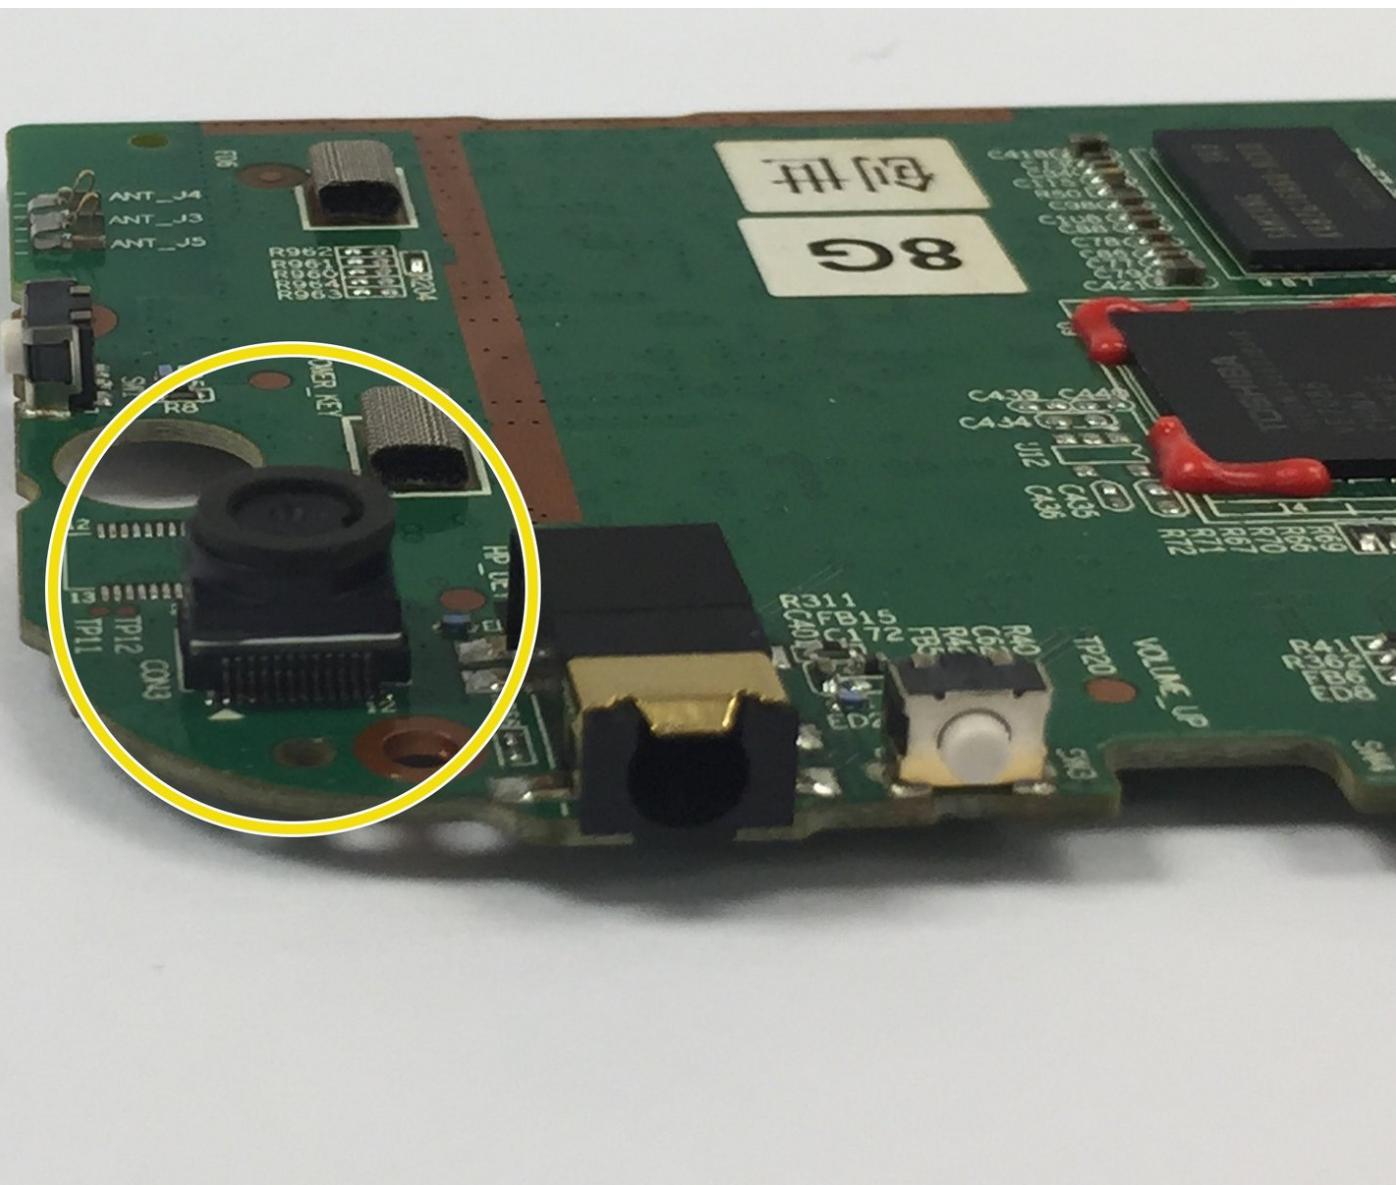


INTRODUCTION

This guide will show you how to replace the camera on your Toshiba Excite 7c. The camera itself plugs directly into the motherboard and can be slightly more difficult to replace than other components.

TOOLS:


- Tweezers (1)
- iFixit Opening Tools (1)

Step 1 — Motherboard

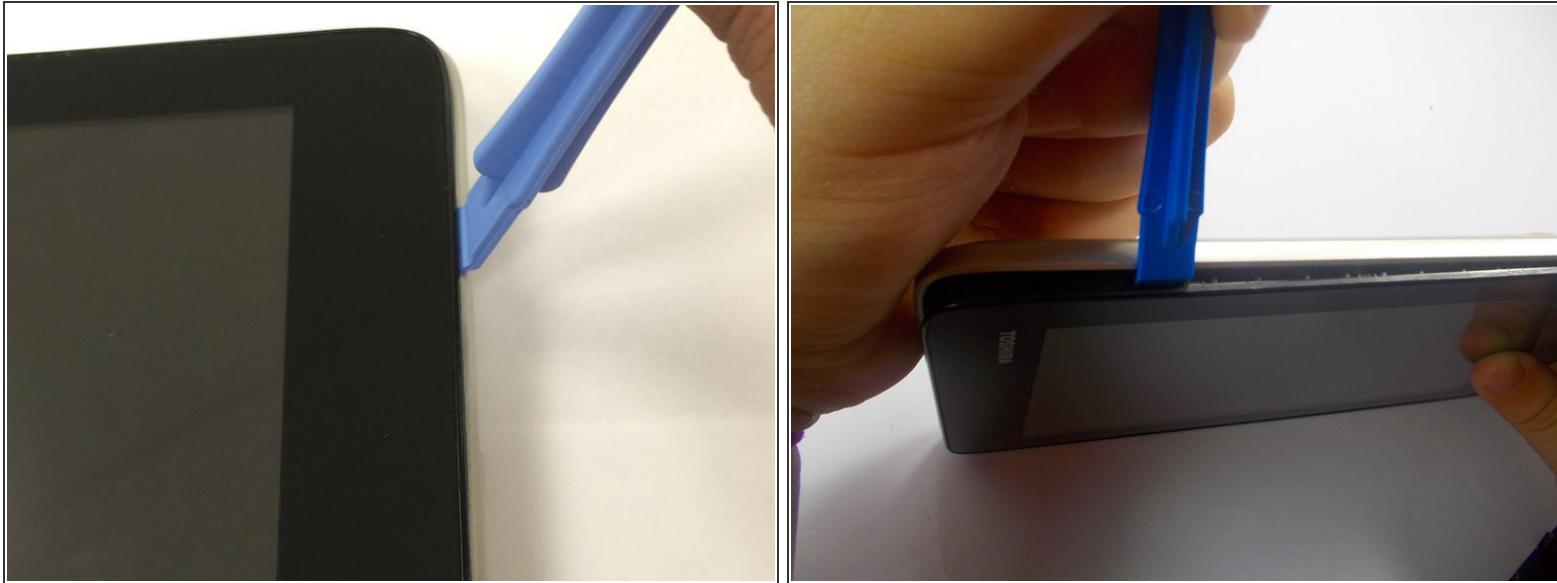


- To open your device use the plastic opener. Locate the seam on your device and gently separate, applying pressure down all four sides.
- The back casing will start to peel away from the screen.
- Carefully lift and remove the back panel with tablet lying face down on a table. This will reveal the back side.

Step 2

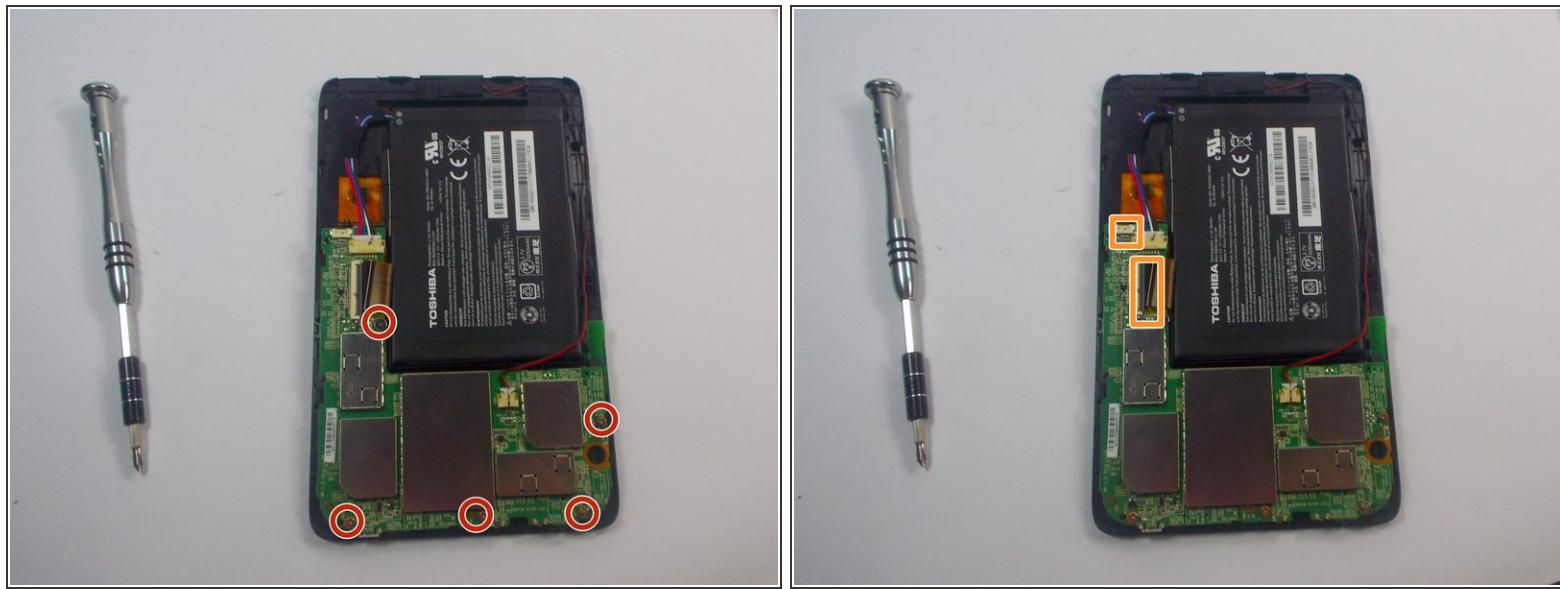

- Using a screw driver unscrew the five 6mm phillips head screws on the motherboard
- Gently remove the two wiring connectors with tweezers.
- Pull straight up to remove the board.

Step 3 — Camera

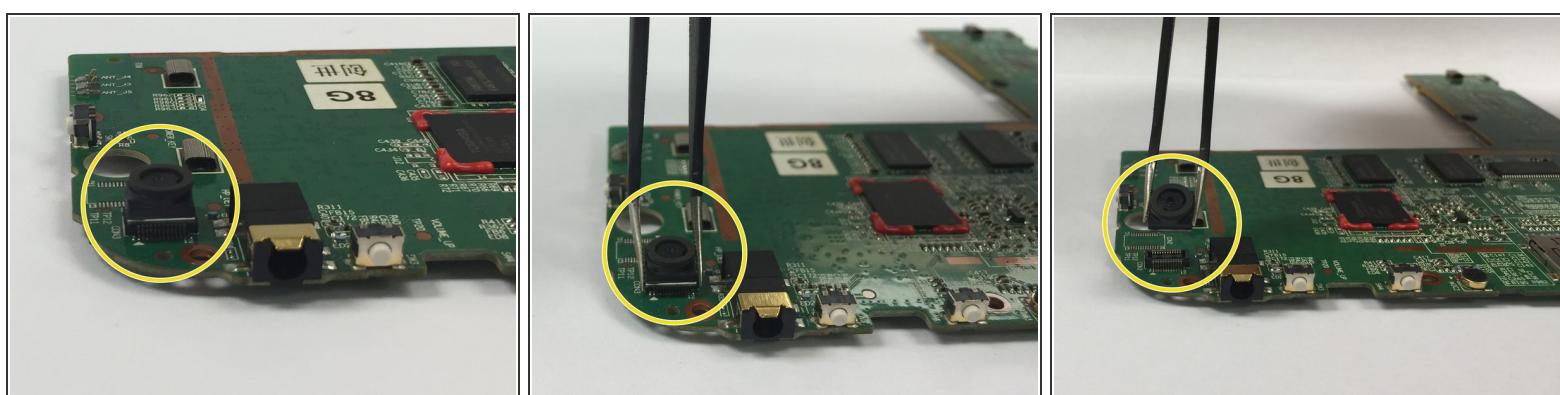

- Locate the camera on the top portion of the motherboard as seen here.
- Grip using the tweezers and pull directly up applying as much force as necessary to remove the camera.

To reassemble your device, follow these instructions in reverse order.