



Toshiba Excite 7c Screen Replacement

This guide will show you how to replace the screen on a Toshiba Excite 7c.

Written By: Jessica




INTRODUCTION

Replacement screens were not commercially available as of publication, but this guide will show you how to replace the screen if you are able to source parts. The screen many need to be replaced due to cracking, lack of touch screen sensitivity, or other damage.

TOOLS:


- Essential Electronics Toolkit (1)

Step 1 — Motherboard

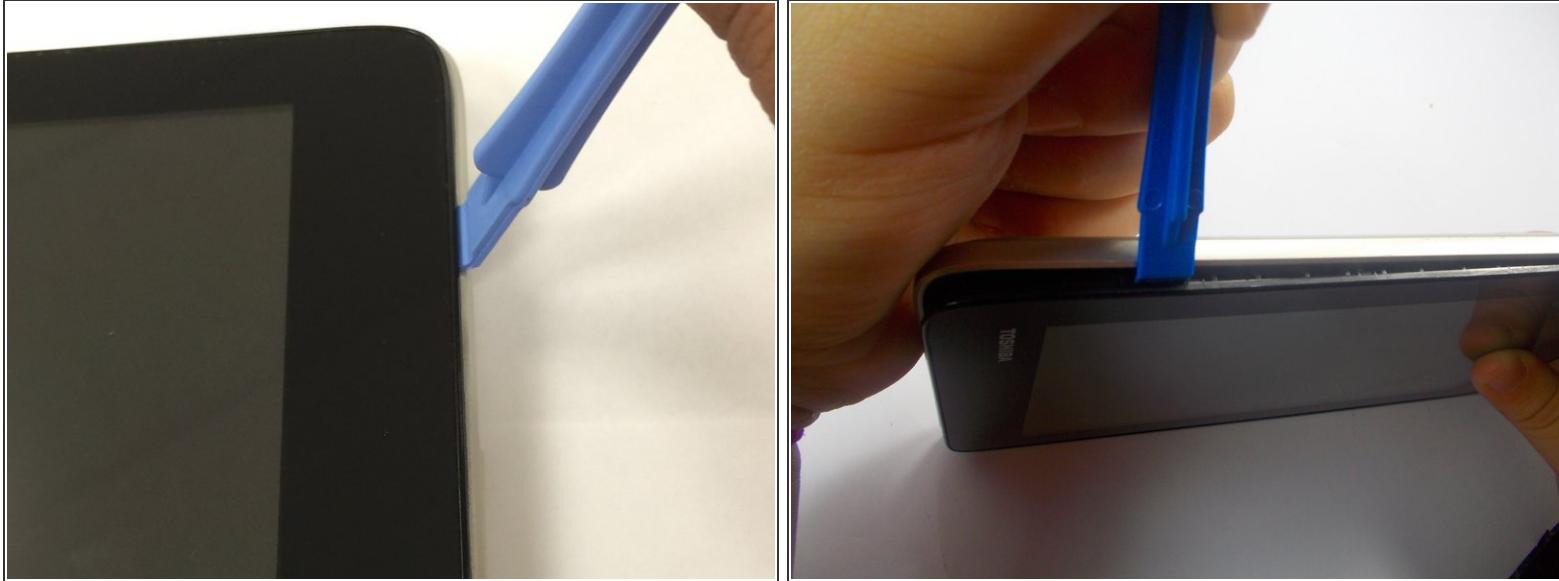


- To open your device use the plastic opener. Locate the seam on your device and gently separate, applying pressure down all four sides.
- The back casing will start to peel away from the screen.
- Carefully lift and remove the back panel with tablet lying face down on a table. This will reveal the back side.

Step 2

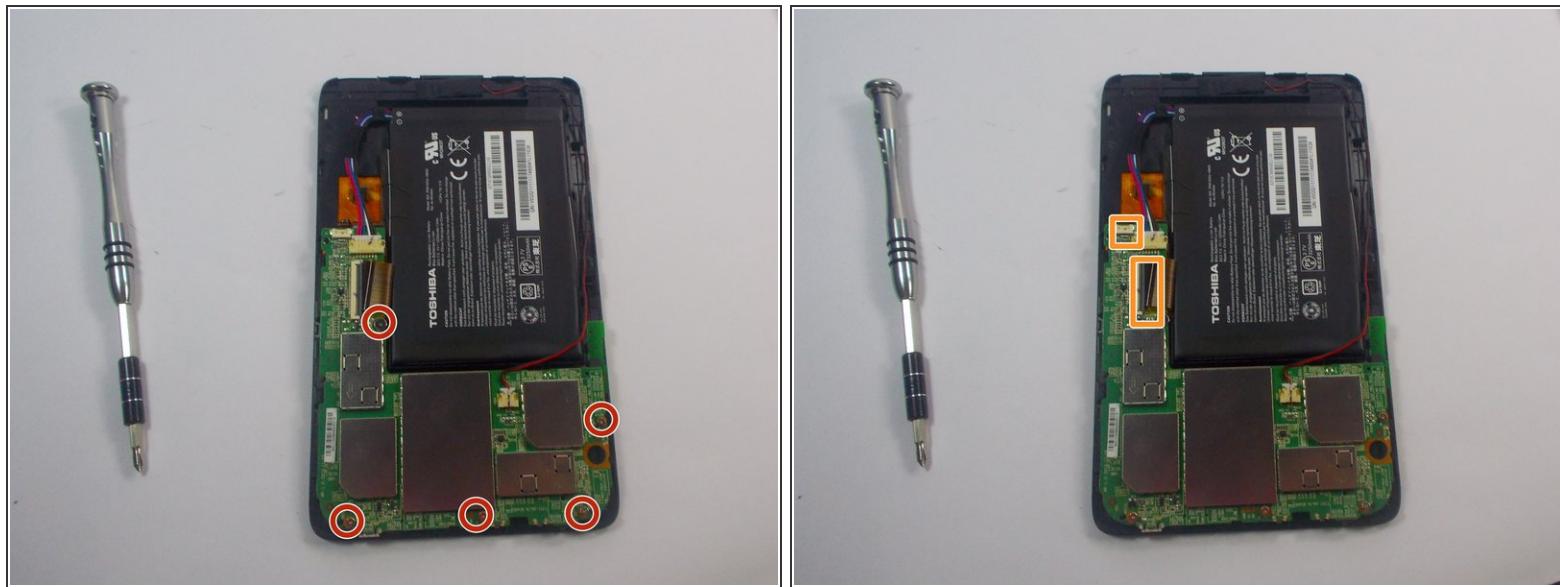

- Using a screw driver unscrew the five 6mm phillips head screws on the motherboard
- Gently remove the two wiring connectors with tweezers.
- Pull straight up to remove the board.

Step 3 — Screen

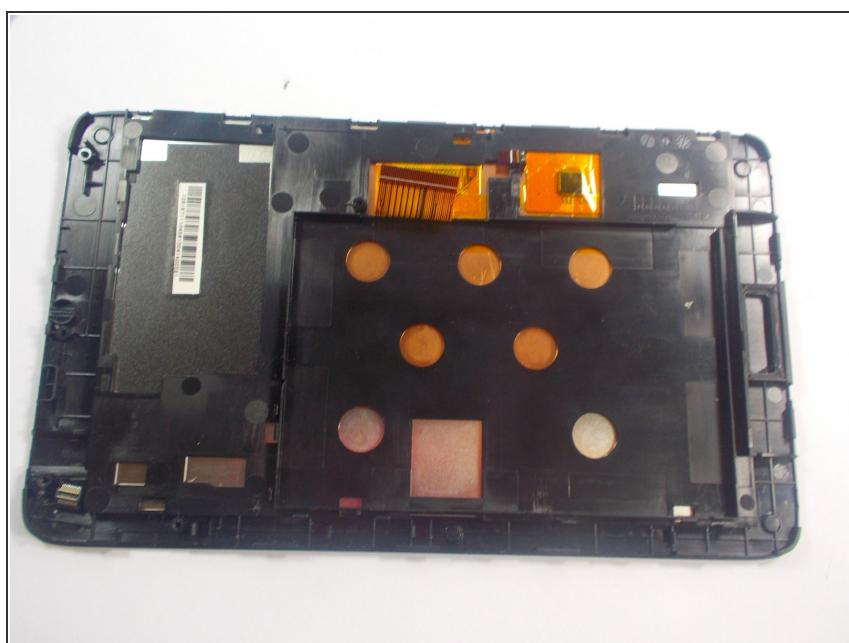

i With the logic board removed the old screen is all that remains. Reassemble using a new screen as the base.

To reassemble your device, follow these instructions in reverse order.