




# Toshiba Excite 7c Screen Replacement

This guide will show you how to replace the screen on your Toshiba Excite 7c.

Written By: Reyna Serrato

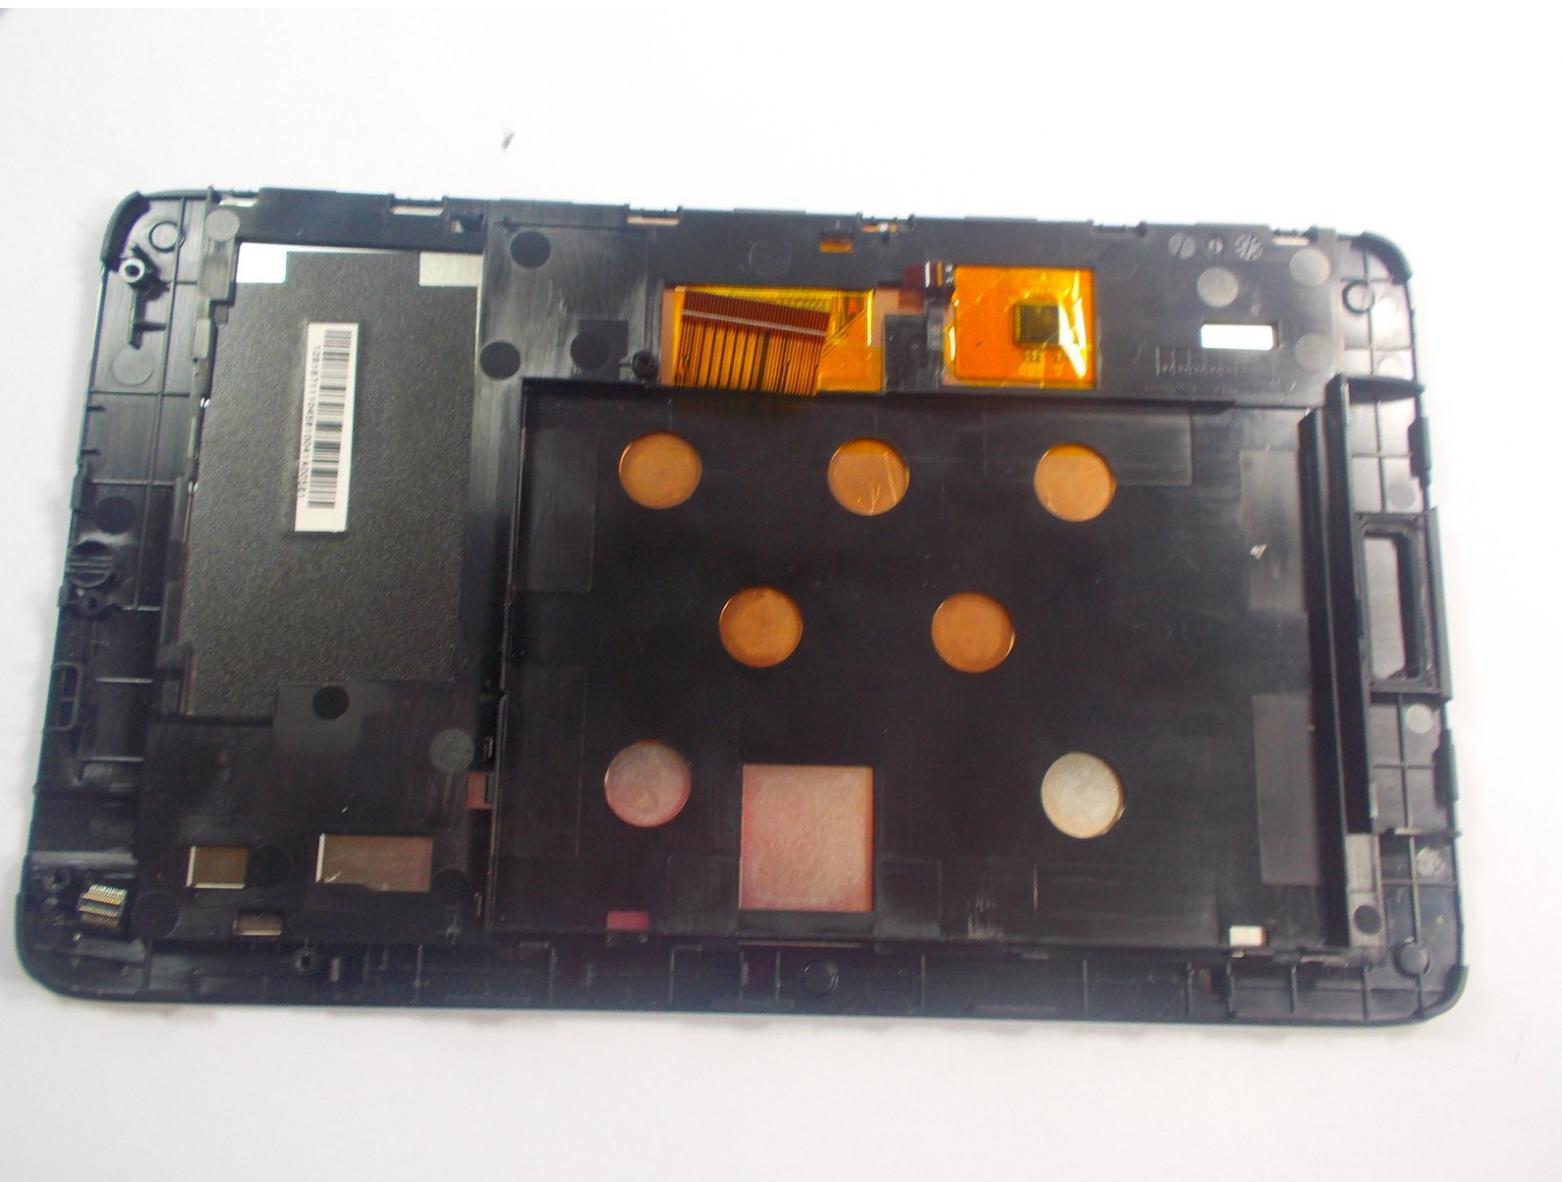


## INTRODUCTION

This guide will show you how to replace the screen on your Toshiba Excite 7c. There are no commercially available parts as of publication, but one could be scavenged from a tablet that has a different issue.

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Screwdriver](#) (1)

## Step 1 — Motherboard

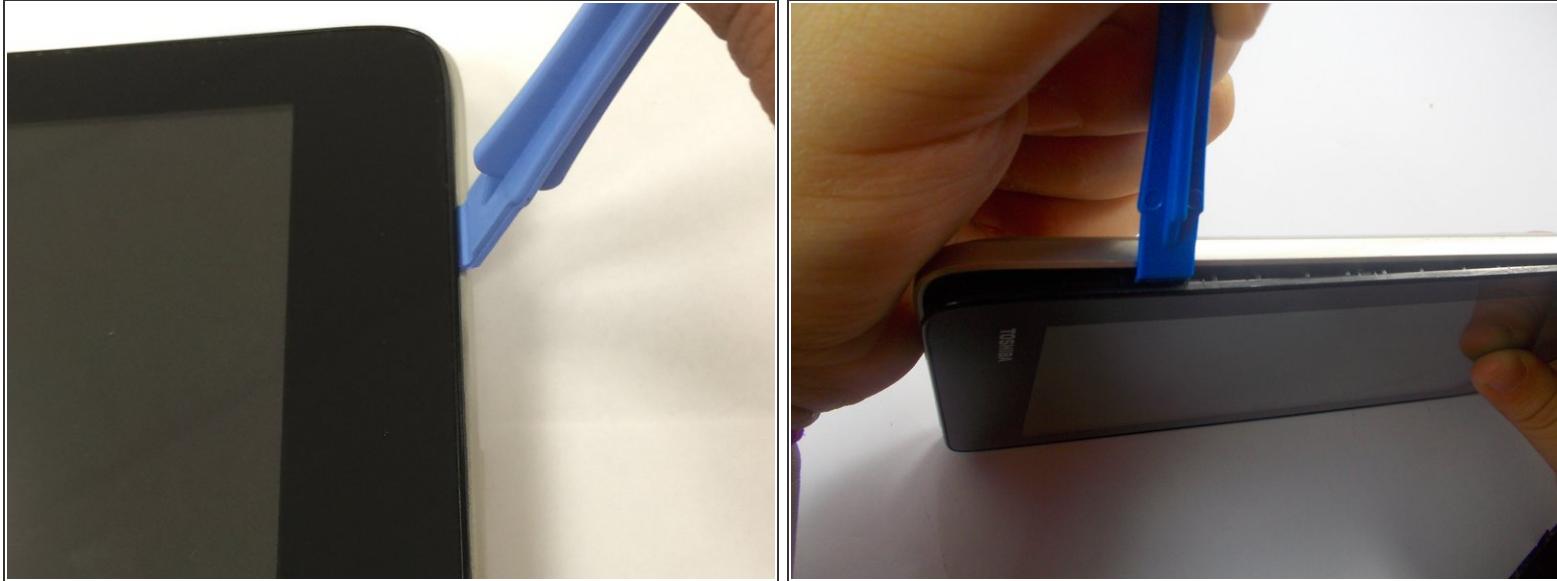


- To open your device use the plastic opener. Locate the seam on your device and gently separate, applying pressure down all four sides.
- The back casing will start to peel away from the screen.
- Carefully lift and remove the back panel with tablet lying face down on a table. This will reveal the back side.

## Step 2

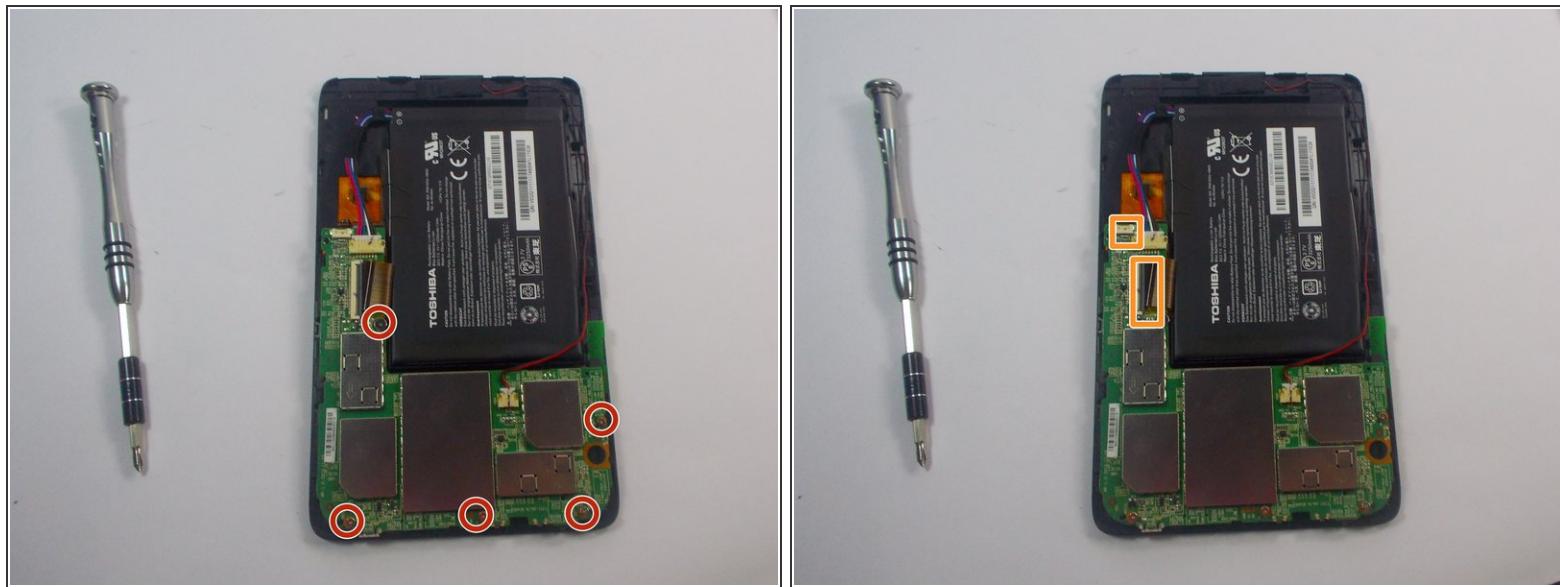

- Using a screw driver unscrew the five 6mm phillips head screws on the motherboard
- Gently remove the two wiring connectors with tweezers.
- Pull straight up to remove the board.

## Step 3 — Screen

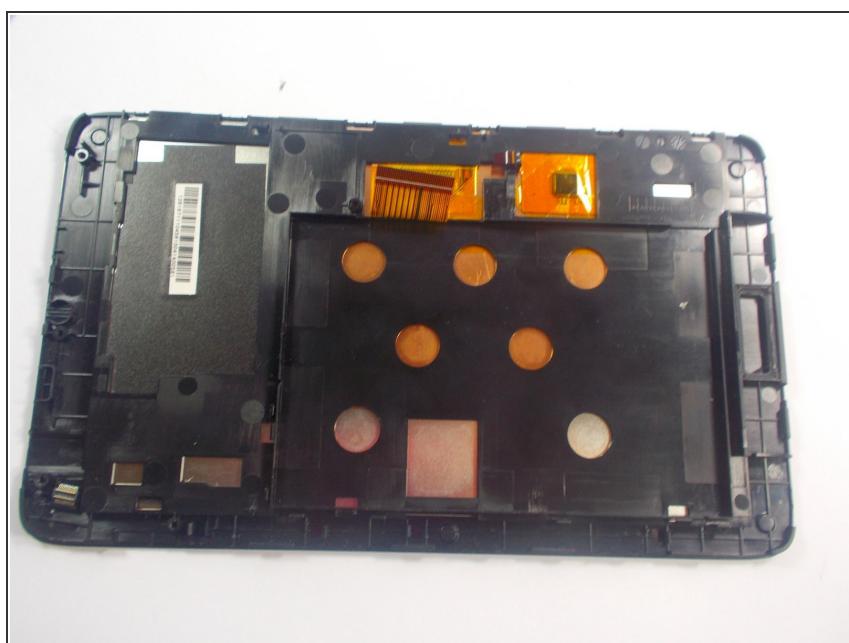

 With all of the components removed continue with reassembly using a new screen as the base for reassembly.

To reassemble your device, follow these instructions in reverse order.