



Toshiba HD-A2 Fan Replacement

Replace the broken fan to avoid overheating of the DVD player.

Written By: Nouriyah Saleh



INTRODUCTION

If you find that your DVD player is overheating, use this guide to remove and replace the fan.

TOOLS:

- Phillips #1 Screwdriver (1)

Step 1 — Top Panel



- Remove the three 6mm Phillips head screws on the back of the DVD player with a Phillips #1 screwdriver.

Step 2




- Remove the two 3mm Phillips screws on each side of the DVD player using the Phillips #1 screwdriver.

Step 3




- Using your hand, gently lift the black top panel and safely place it off to the side.

Step 4 — Fan

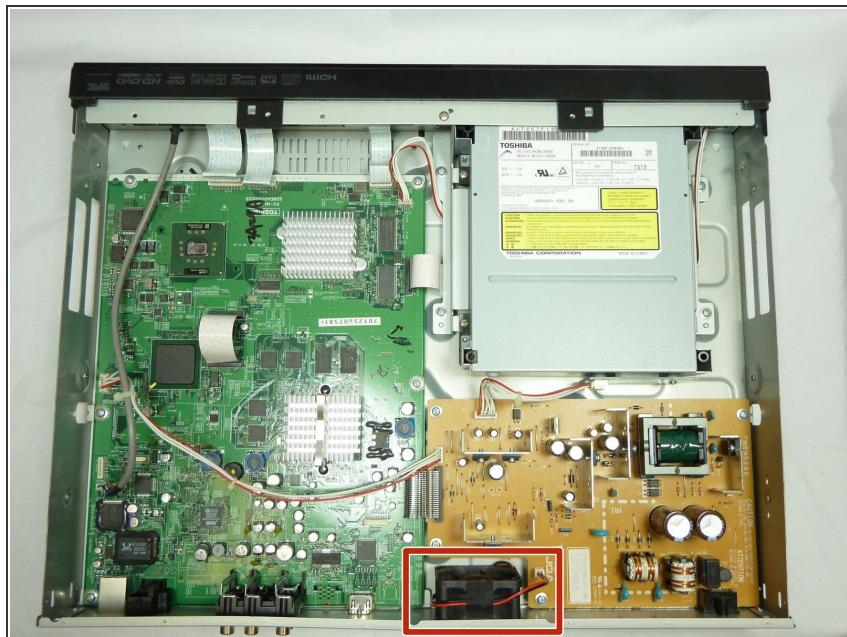


- The fan will be attached to the case, connected to the yellow circuit board.

Step 5

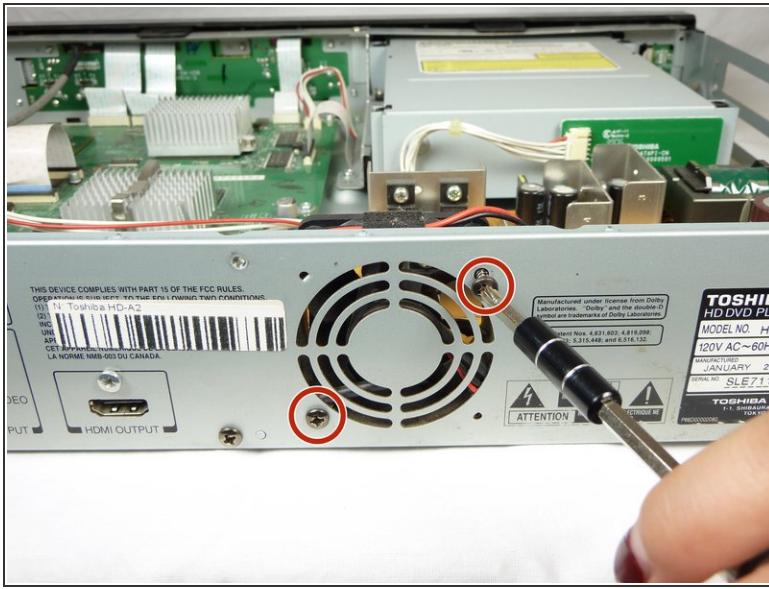

- Remove the two 7mm Phillips head screws attaching the fan to the case of the DVD player.

Step 6

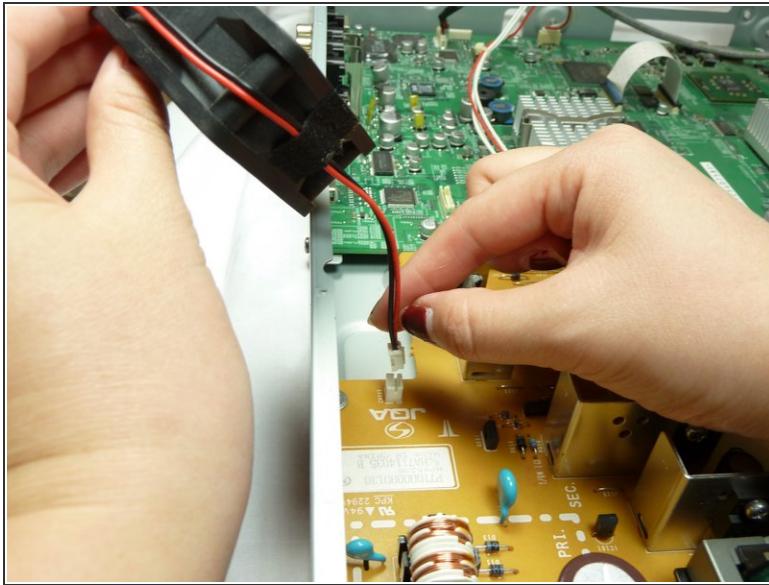

- Use your fingers to unplug the red and black wire from the yellow circuit board to completely remove the fan.

To reassemble your device, follow these instructions in reverse order.