




Toshiba NB205 N330PK RAM Replacement

This guide outlines how to remove and replace the RAM chip (4 Steps).

Written By: Mason McCaskill

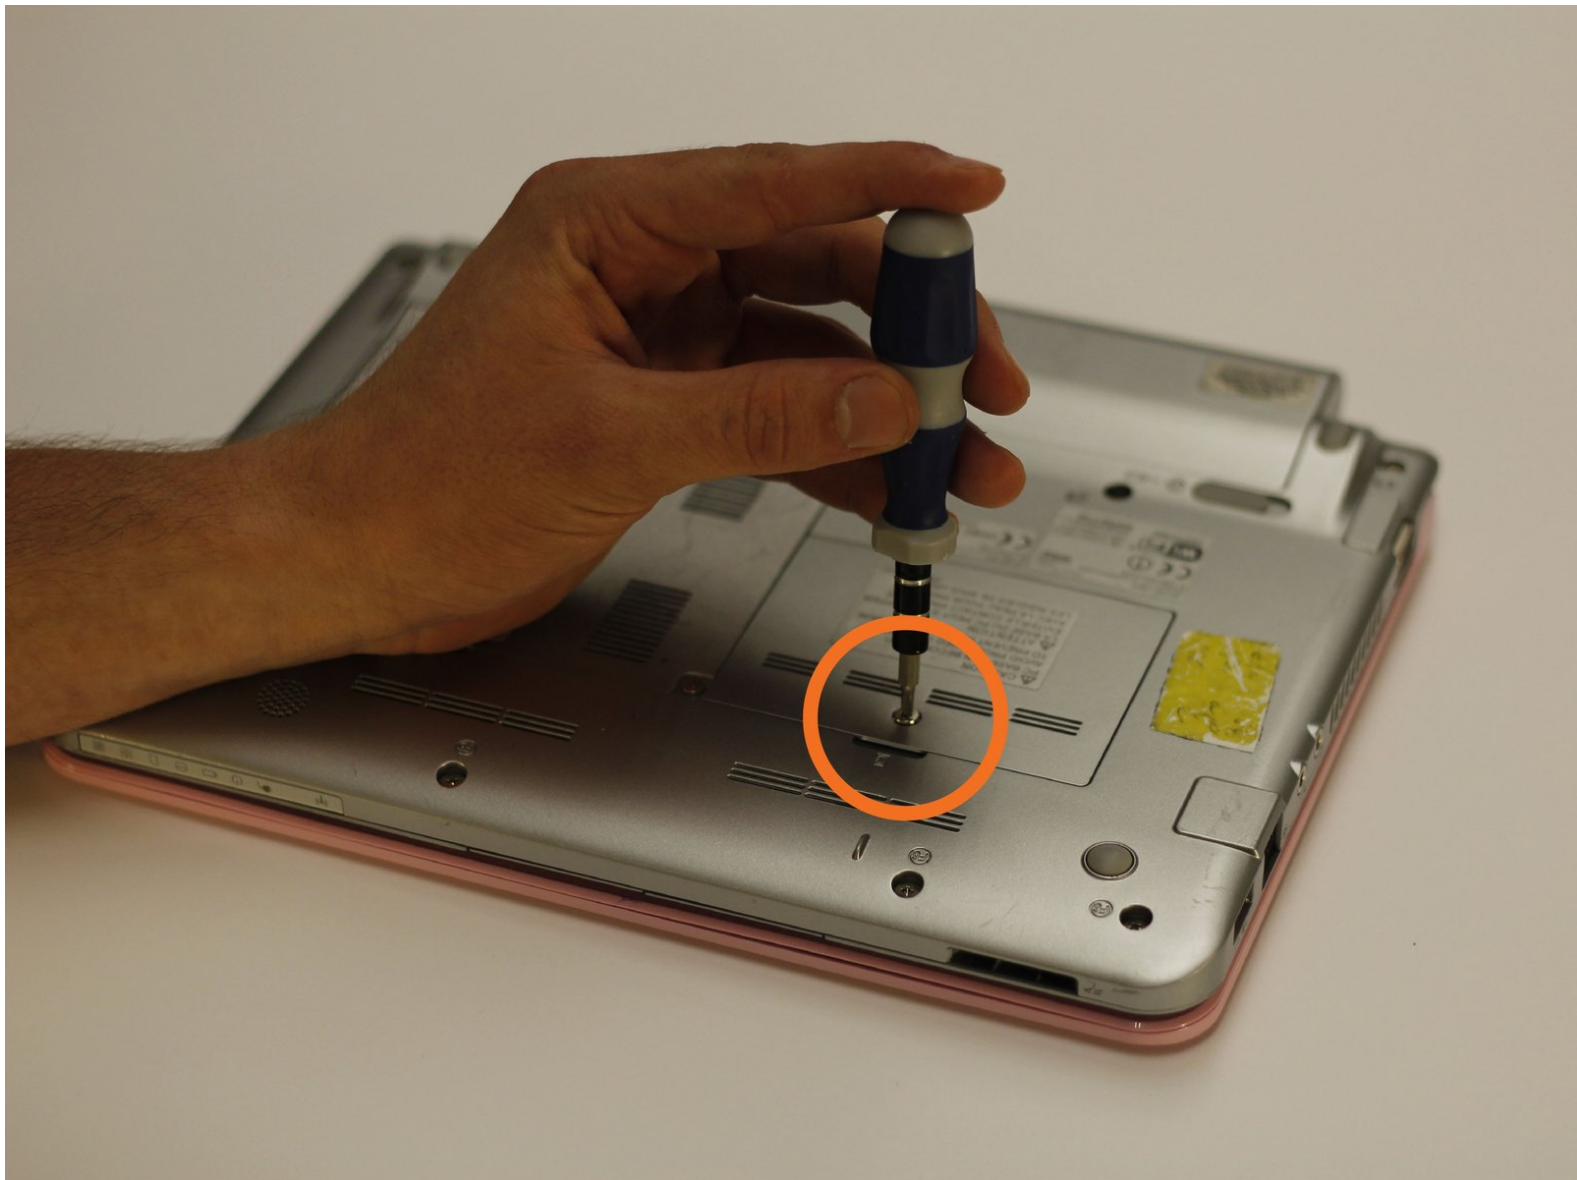



TOOLS:



- [64 Bit Driver Kit](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [RAM](#) (1)

Step 1 — RAM

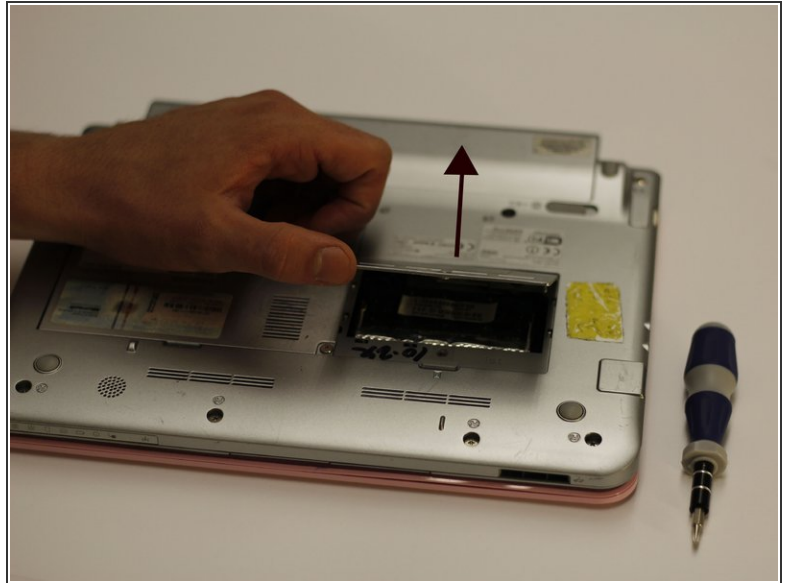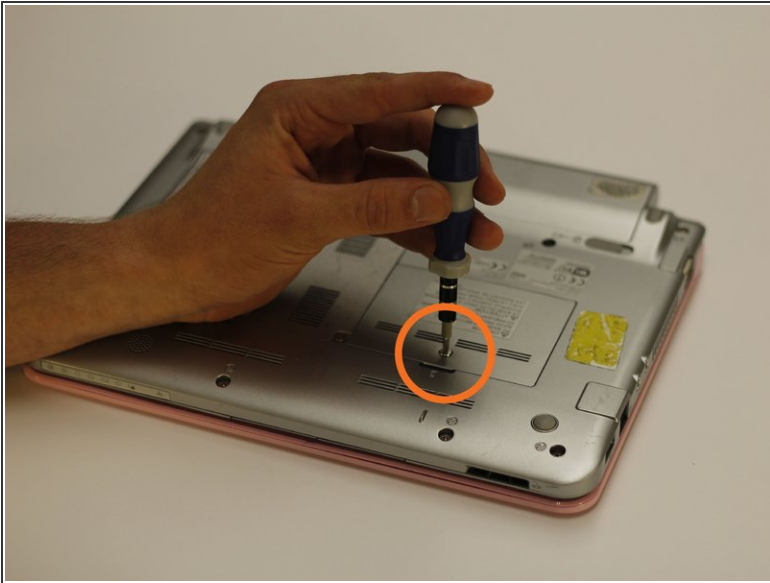



- Use a bit driver and a Phillips #0 bit to remove the one 5 mm retaining screw.
- Lift the panel up and out of the way.

Step 2

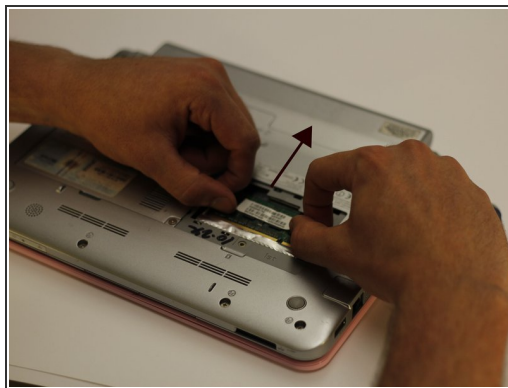



- The RAM chip is secured by two retaining arms that run parallel with the chip. Gently pull these arms in opposite directions off of the chip.
- After the retainer arms are free, push the chip towards the top of the netbook. This will free the chip for removal.

Step 3

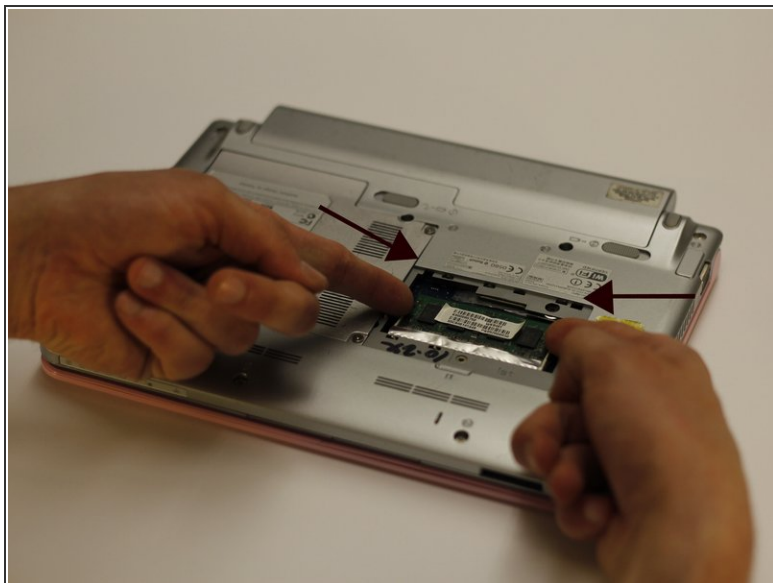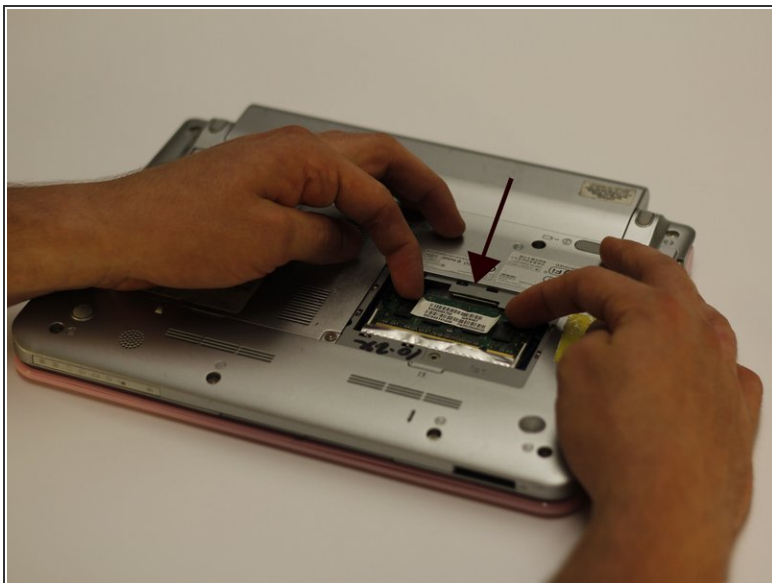

- Push the replacement RAM into the original position.
- Reattach both securing arms onto the sides of the RAM chip.

Step 4

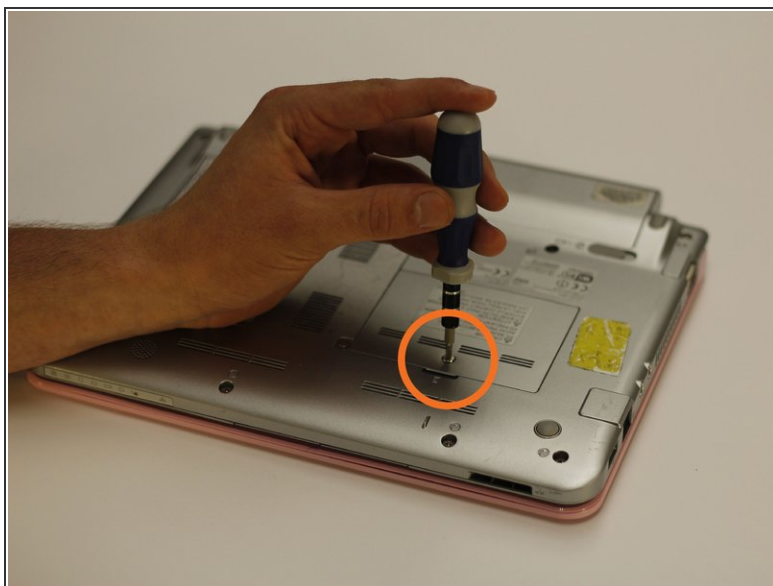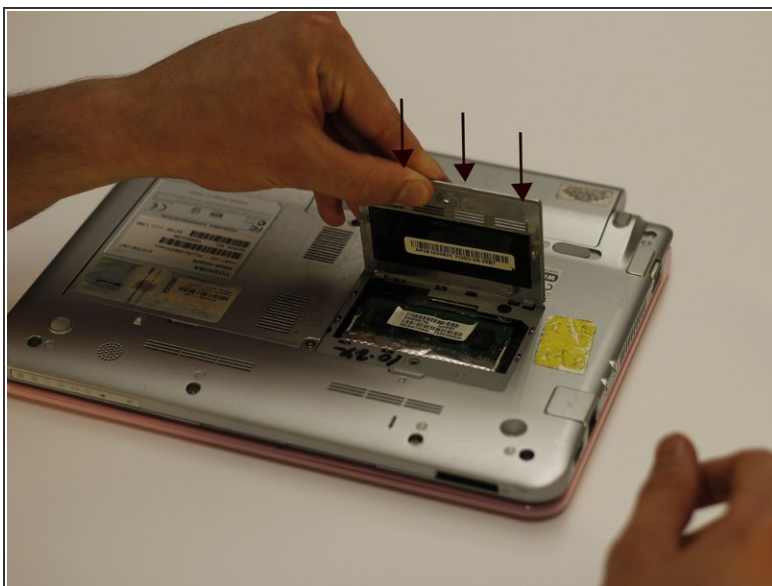

- Place the panel back into the securing slots and let it rest in its original position.
- With the bit driver and Phillips #0 bit, secure the panel down with one screw.

To reassemble your device, follow these instructions in reverse order.