


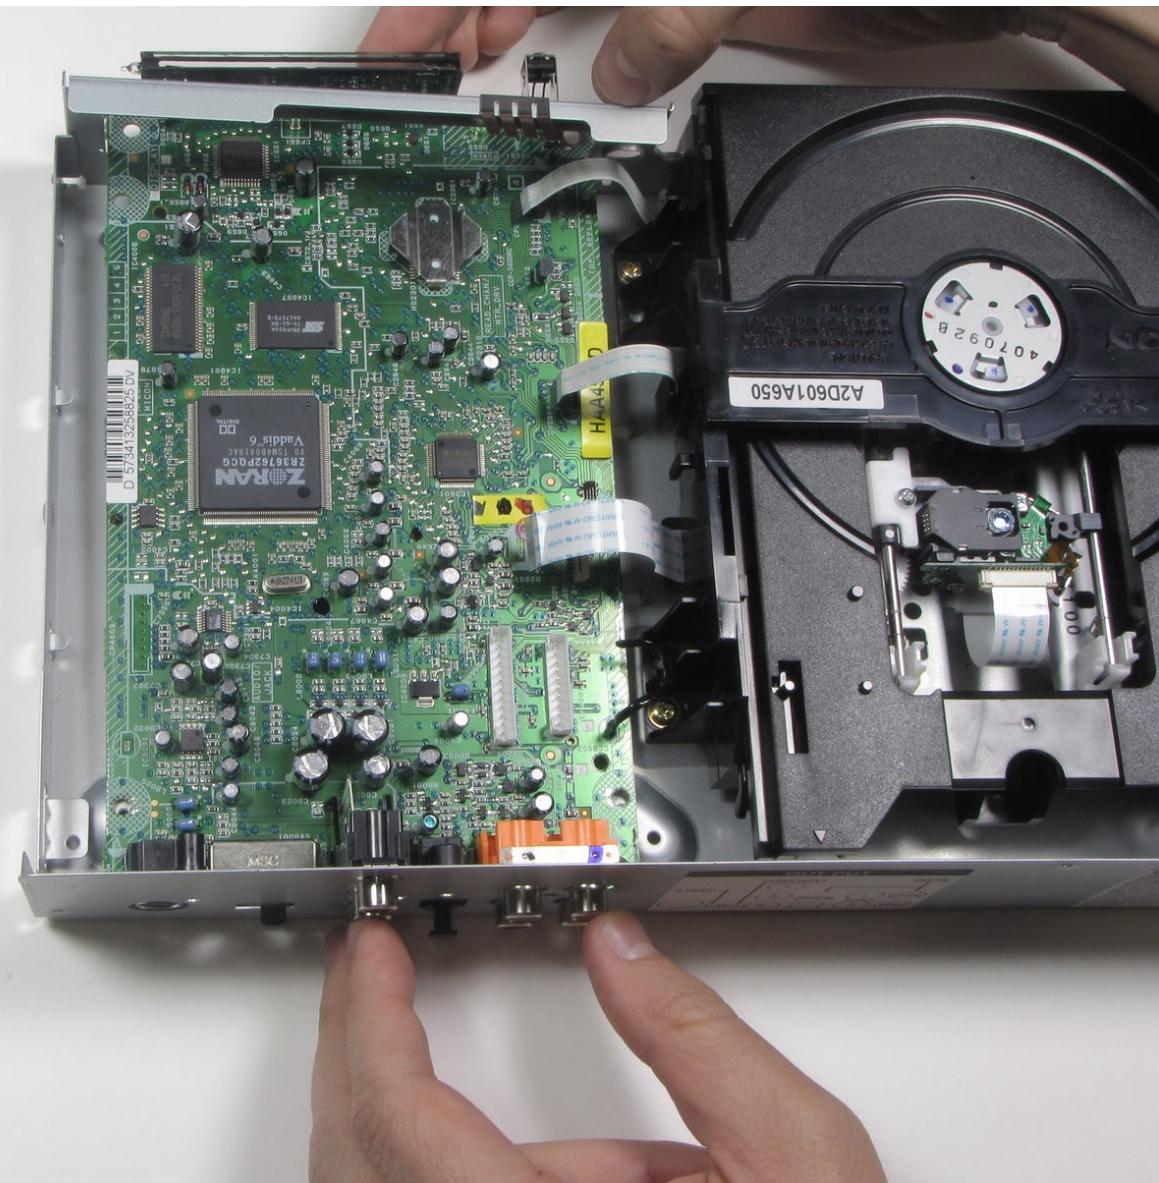

# Toshiba SD-K740 Motherboard Replacement

This is a guide to remove the Left-Side Motherboard (Green) of the Toshiba SD-K740 DVD player.

Written By: Joe Murphy



## INTRODUCTION

This guide gives instructions on how to remove the Left-Side Motherboard (Green) of the Toshiba SD-K740 DVD player, which controls the display and disc drive function.

### TOOLS:

- [Phillips #2 Screwdriver \(1\)](#)

## Step 1 — Top Panel



**⚠** Make sure the DVD player is unplugged before beginning.

- Remove the three .303 inch screws from the back panel using a #0 Phillips head screwdriver.

## Step 2



① Turn the DVD player on its side.

- Remove the .303 inch screw.

① Now flip the DVD player onto its other side.


- Remove the .303 inch screw from this side.

## Step 3



- ⓘ Flip the DVD player over onto its front face.
- Remove the back panel by lifting up and pulling it towards yourself.

## Step 4 — Front Panel

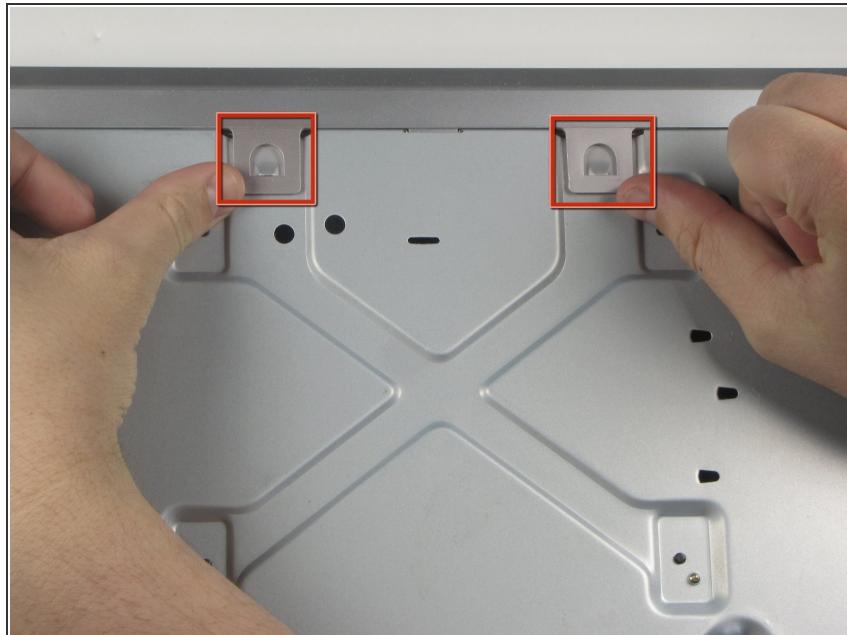

- ⓘ Flip the DVD player so its top is sitting on your working surface.
- Lift and push away each of the two tabs located in the middle of the player.



**⚠** The front panel will not come off during this step, so do not force it.

## Step 5




- ⓘ Flip the DVD player on its side.
- Lift and slide forward a single tab on the side.
- ! The front panel will not come off during this step, so do not force it.

## Step 6

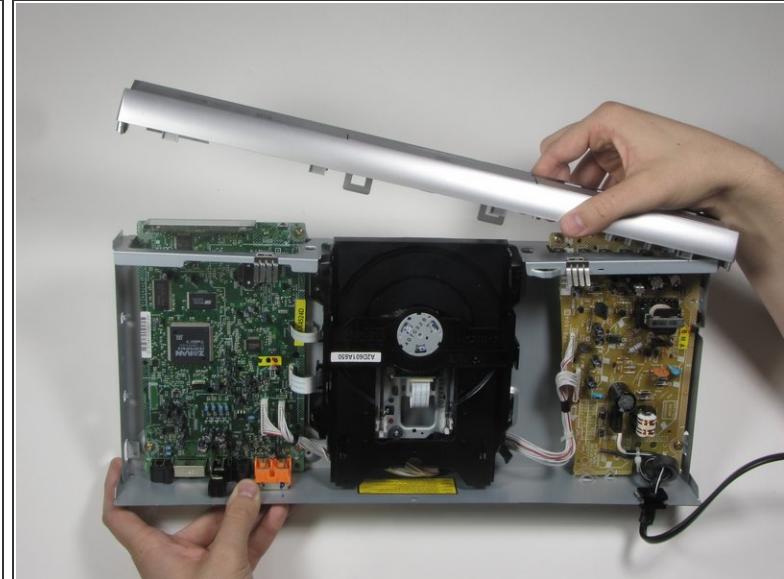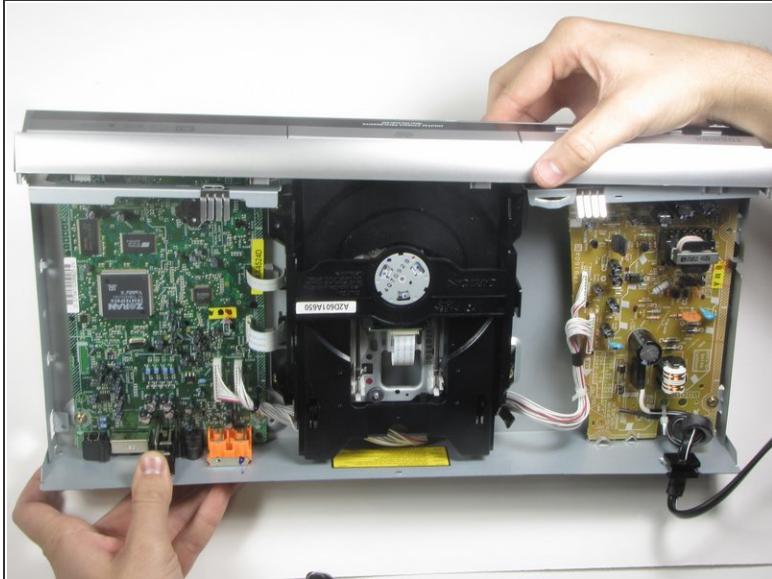



- Grasp the front panel and pull forward and to your right to remove.

## Step 7 — Motherboard

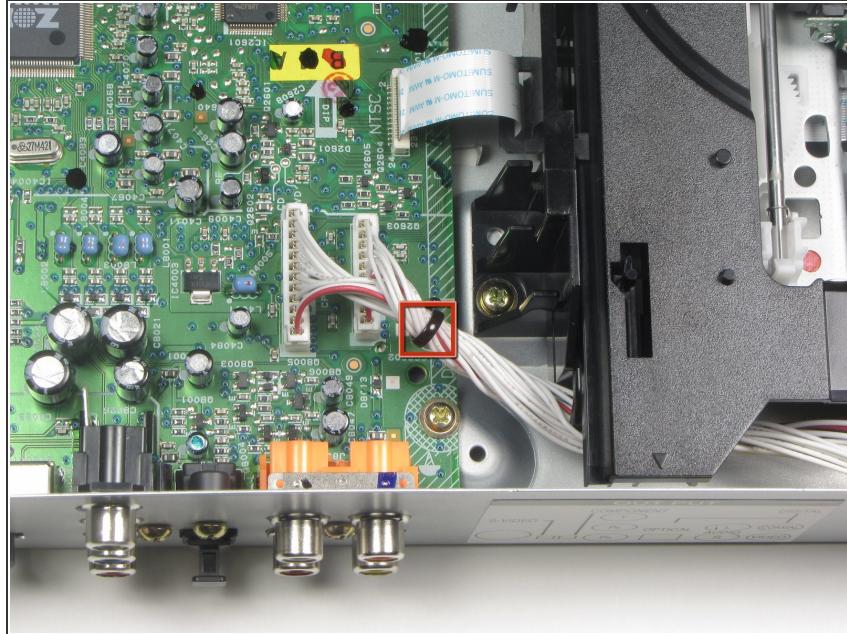



- Remove the black tie holding the two rear ribbon cables together by untwisting it.

## Step 8

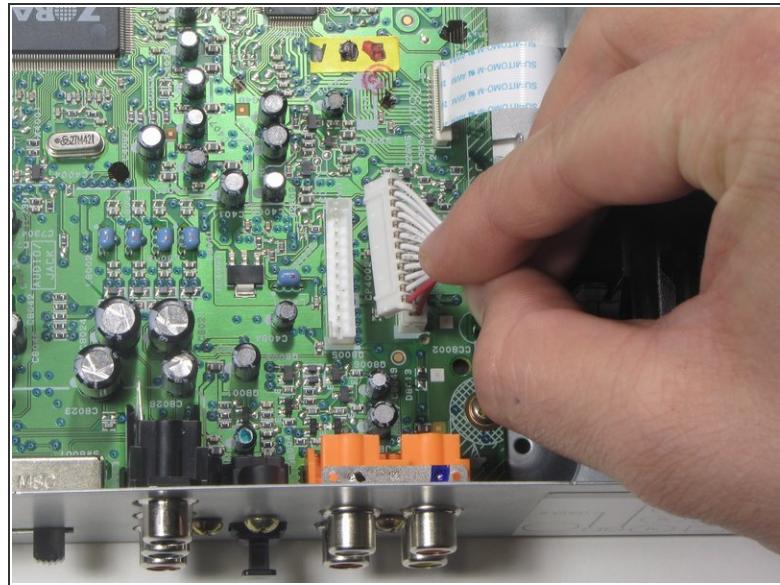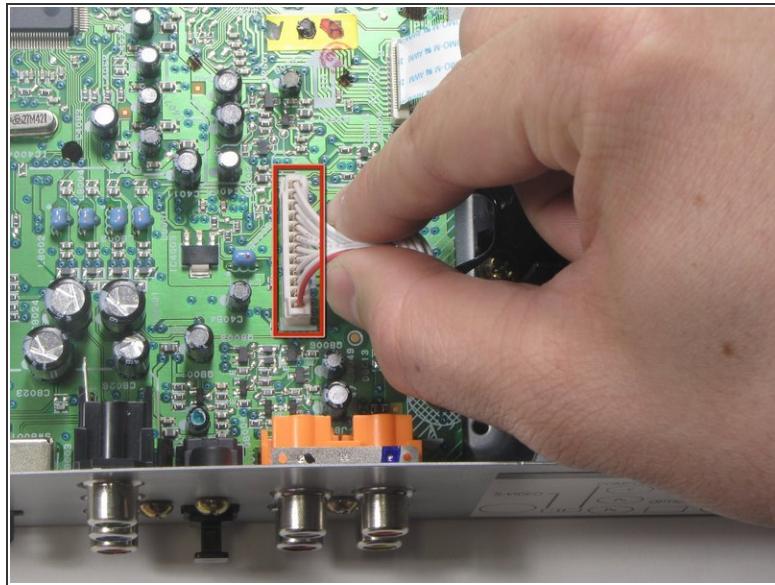


- Remove the first of two ribbon cables connected to the Left-Side Motherboard (Green) by pulling vertically.

## Step 9

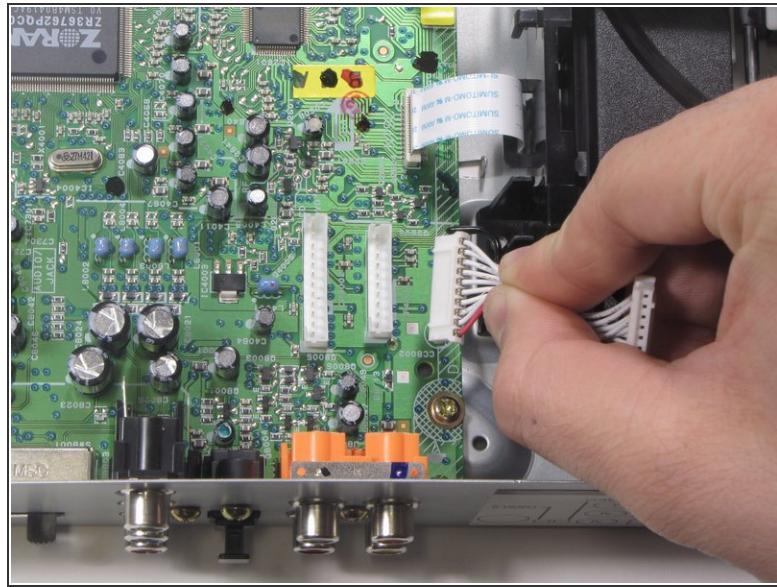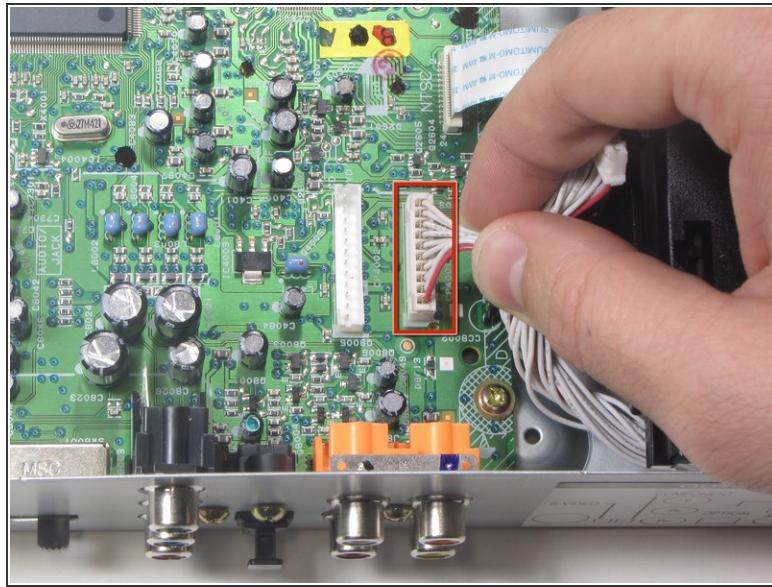

- Remove the second of two ribbon cables connected to the Left-Side Motherboard (Green) by pulling vertically.


## Step 10

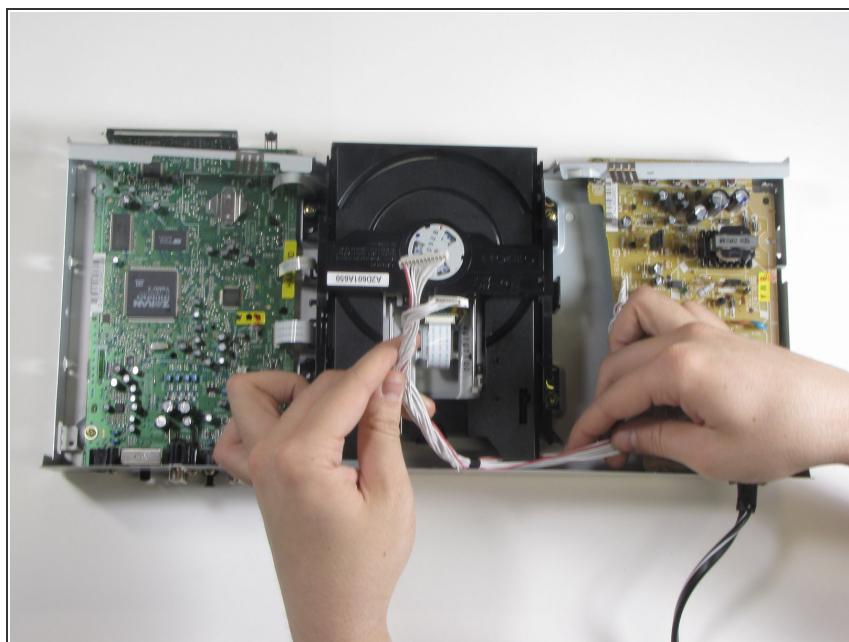

- Pull the two cables to the right to disentangle from the disc drive.


**⚠** Do not tug, pull, or force the cable, it should slide out with minimal force.

## Step 11

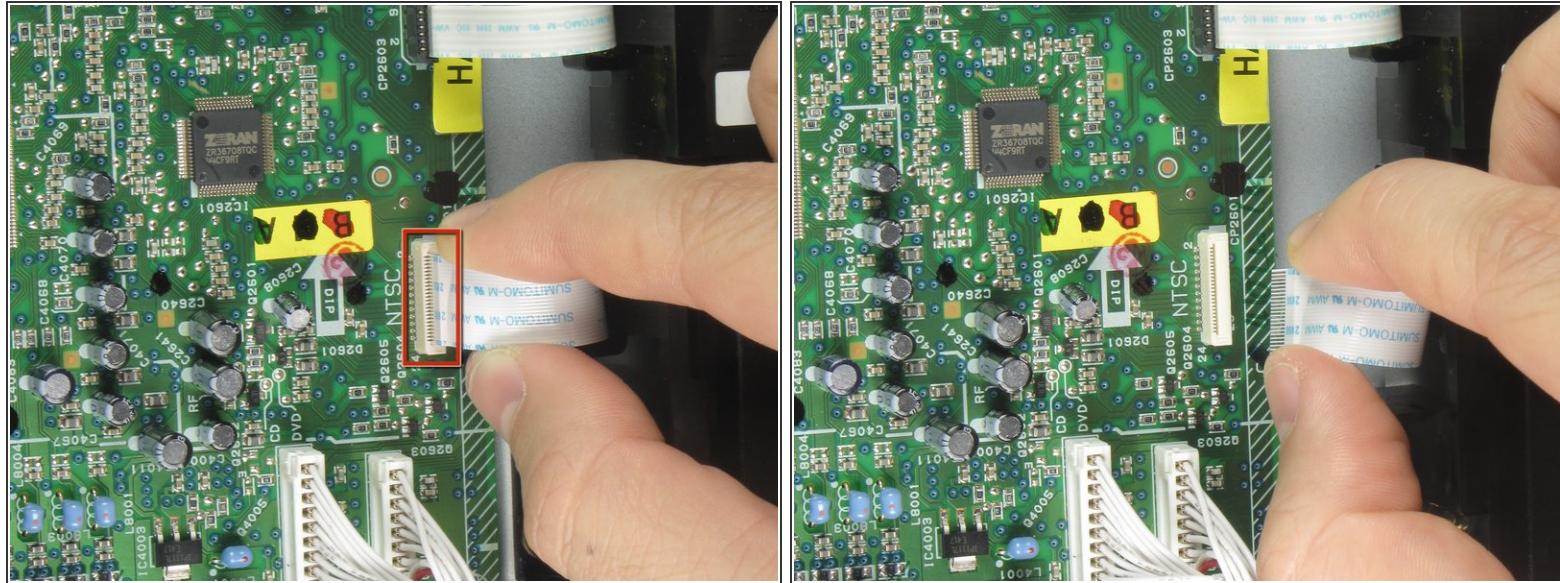


- Remove the first of three ribbon cables on the left hand side of the disc drive by pulling vertically.

## Step 12

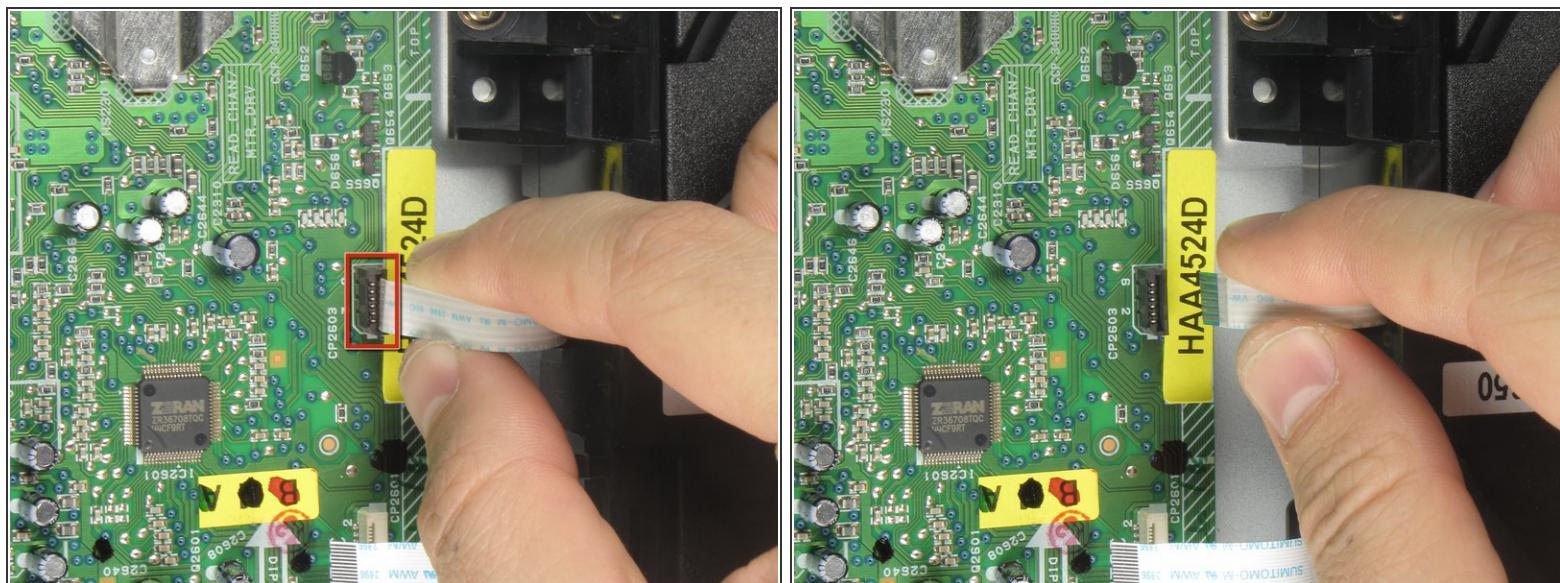

- Remove the second of three ribbon cables on the left hand side of the disc drive by pulling vertically.

## Step 13

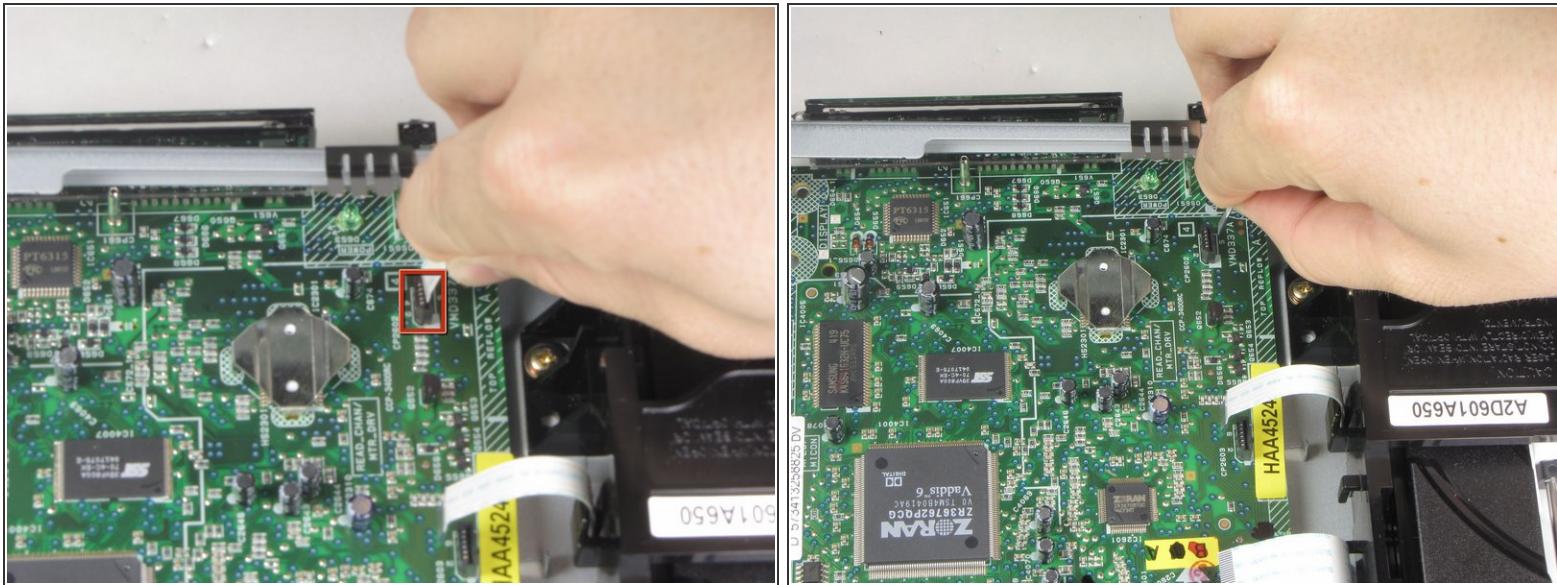

- Remove the third of three ribbon cables on the left hand side of the disc drive by pulling vertically.

## Step 14




- *i* Flip the DVD player so it is resting on its front face (so the back is facing you).
- Remove the four .320 inch screws holding the motherboard to its casing.

## Step 15



- Push the motherboard forward a couple inches to detach it from the casing.

## Step 16

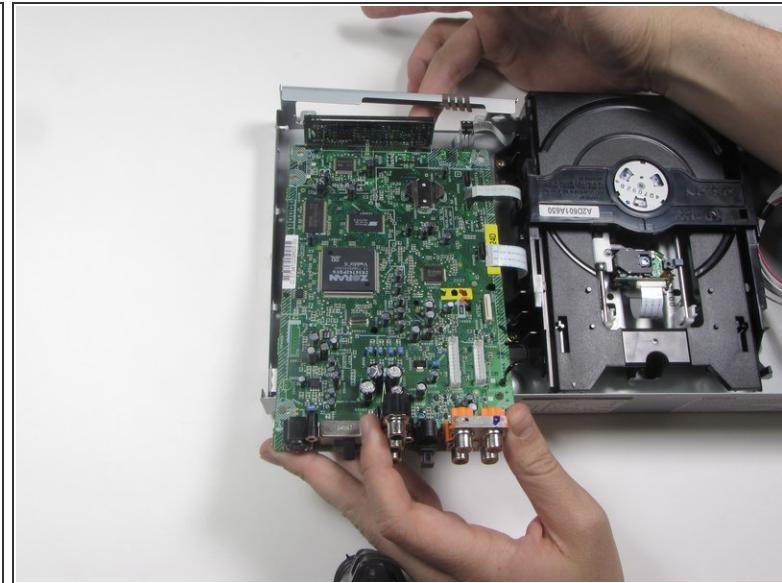

- Lift the motherboard from the rear and pull backwards (towards you) to remove entirely from the casing.

To reassemble your device, follow these instructions in reverse order.