



Toshiba SD-K740 Top Panel Replacement

This is a guide to remove the back panel of the Toshiba SD-K740 DVD player.

Written By: Joe Murphy



This document was generated on 2019-09-17 06:02:57 AM (MST)

INTRODUCTION

This guide gives instructions on how to remove the back panel of the Toshiba SD-K740 DVD player, a necessary step to access all parts for repair/replacement.

TOOLS:

- Phillips #0 Screwdriver (1)


Step 1 — Top Panel



⚠ Make sure the DVD player is unplugged before beginning.

- Remove the three .303 inch screws from the back panel using a #0 Phillips head screwdriver.

Step 2

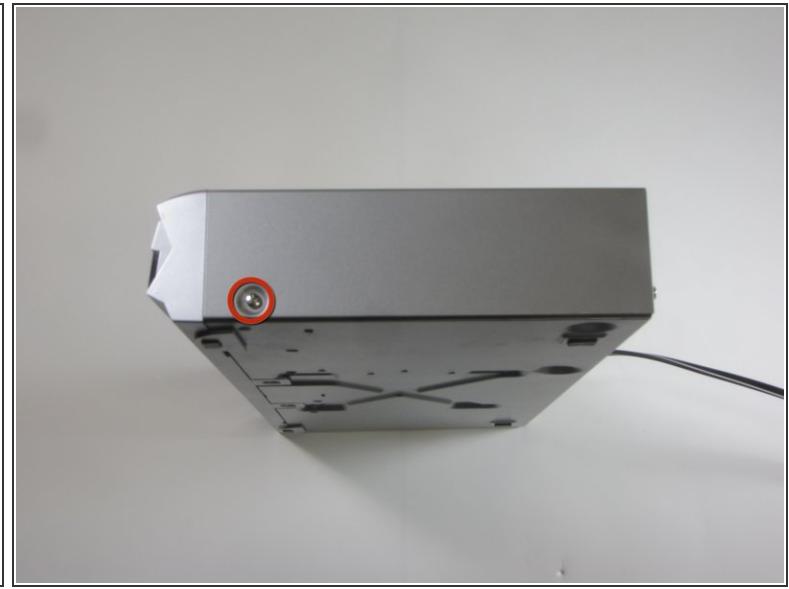

(i) Turn the DVD player on its side.

- Remove the .303 inch screw.

(i) Now flip the DVD player onto its other side.

- Remove the .303 inch screw from this side.

Step 3



- ⓘ Flip the DVD player over onto its front face.
- Remove the back panel by lifting up and pulling it towards yourself.

To reassemble your device, follow these instructions in reverse order.