



Toshiba Satellite C55-A5100 Optical Drive Replacement

This guide will demonstrate how to successfully uninstall your Toshiba Satellite laptop's optical drive and replace it with a new one.

Written By: Walker Tortorigi



This document was generated on 2019-11-07 04:20:47 PM (MST).

INTRODUCTION

Replacing the optical drive in a Toshiba Satellite laptop should not be seen as difficult, but does involve opening one of the panels on the underside of the laptop.

TOOLS:


- Phillips #1 Screwdriver (1)

Step 1 — Battery



- Press down with your fingers while also applying a sliding motion on the latch buttons near the battery on the underside of your laptop.

Step 2

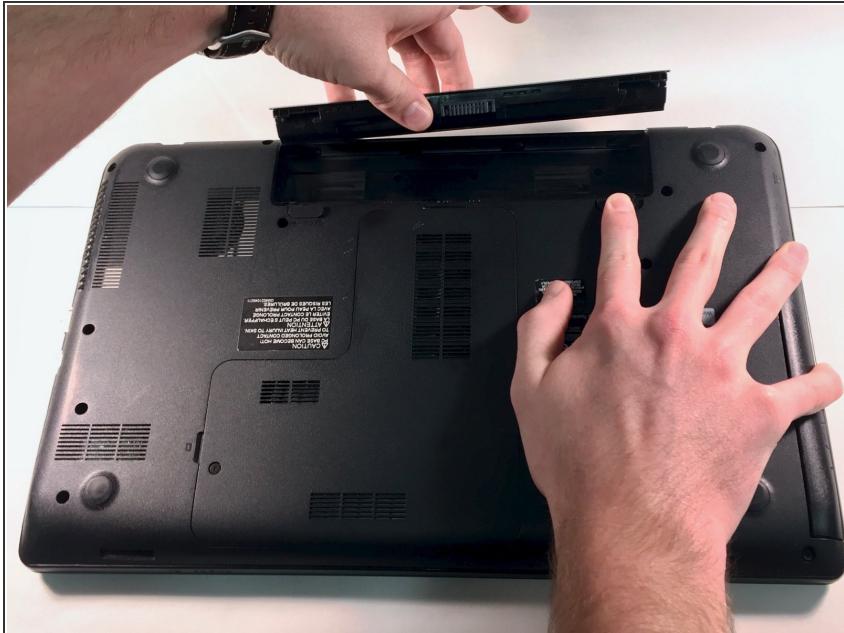


- Lift the battery upward with your fingers out of the battery compartment.

Step 3 — Optical Drive



- Place laptop with the bottom of it facing up.
- Remove the single 6mm Phillips #1 screw keeping the laptop panels in place.

Step 4

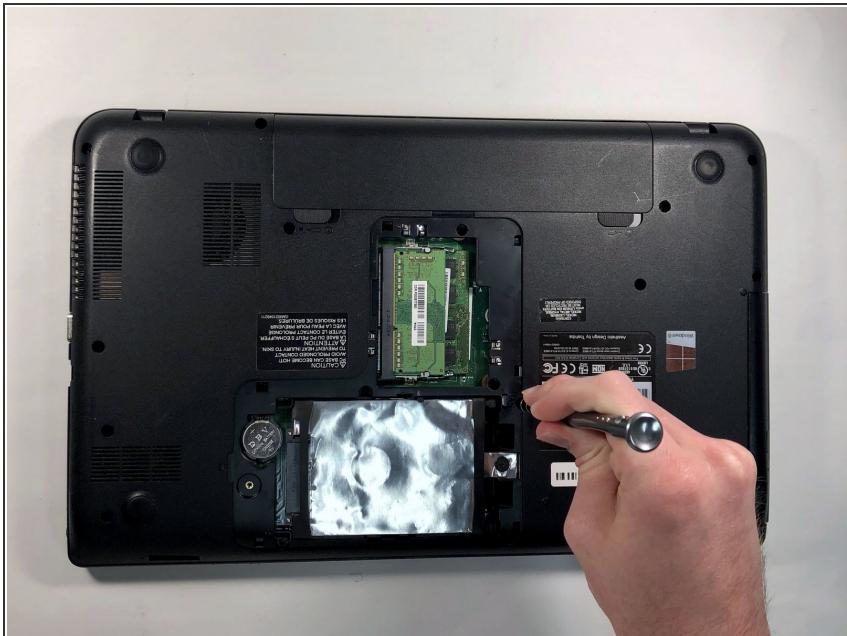

- Remove the 4mm Phillips #1 screw on the side of the now exposed area.

Step 5



- Remove the disc drive from the device.

To reassemble your device, follow these instructions in reverse order.