



Toshiba Satellite C55D-B5206 Back Casing Replacement

Prerequisite Only Guide Step-by step pre-requisite guide to remove the back casing of the Toshiba Satellite C55D.

Written By: Tayyaba



INTRODUCTION

Prerequisite only guide.

This guide will show how to remove the back of the Toshiba Satellite C55D to access various internal components including the hard drive, fan and CD drive.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

Step 1 — Battery



- Turn the laptop upside down so the battery faces upwards.
- Remove the two 7 mm Phillips screws that secure the battery.

Step 2



- Place your thumbs on both sides of the battery's edges where the battery meets the device
- Push the battery away from the laptop.


(i) The battery should slide out with little resistance.

Step 3 — Back Casing



- Remove the thirteen 7 mm Phillips #1 screws from the bottom of the chassis.

Step 4

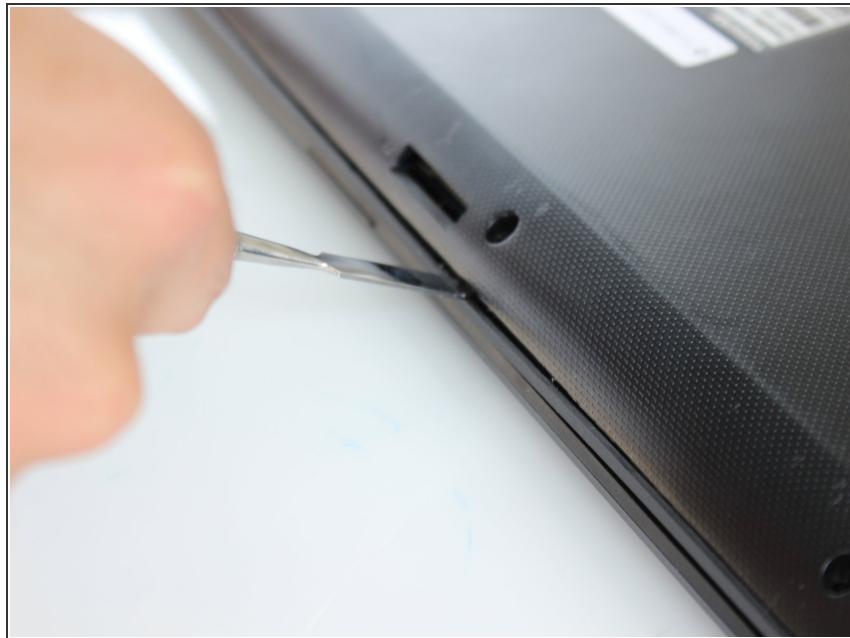

- Starting at the center, insert a spudger into the crevice between the bottom casing and the keyboard and pry upwards.
- Gently slide the spudger along the entire perimeter of the device and pry the casing loose to unhook six clips.

 These images show a metal spudger, which has the potential to damage the device. Use a plastic opening tool or standard spudger instead.

 Do not be alarmed if you feel a gentle tug or hear a click as you slide your spudger. These sounds are the clips detaching from the casing.

Step 5



- Use your fingers to finish removing the casing from the device.

To reassemble your device, follow these instructions in reverse order.