



Toshiba Satellite C55D-B5310 Hard Drive Replacement

How to replace the hard drive in a Toshiba Satellite C55D-B5310.

Written By: Crystal Loomis



INTRODUCTION

If the hard drive in your laptop begins to make a loud clicking noise known as "the Click of Death", use this guide to remove and replace your hard drive.

TOOLS:

- Phillips #1 Screwdriver (1)
- Magnetic Project Mat (1)
- iFixit Opening Tools (1)


Step 1 — Battery



 Turn off your laptop before starting.

- Flip the laptop over so the model stickers face the ceiling.

Step 2

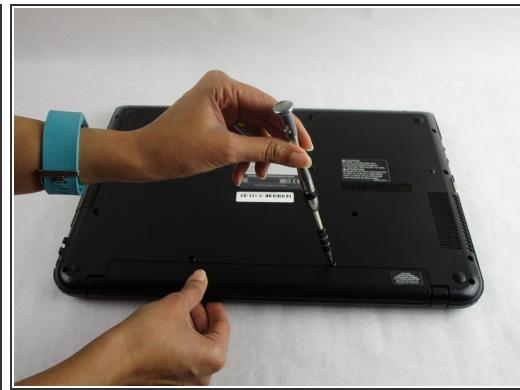

- Use a Phillips #1 screwdriver (PH1 bit) to remove the two 7 mm screws that secure the battery.

Step 3




- Carefully slide the battery out of the laptop.

Step 4 — CD/DVD Drive



- Use a Phillips #1 screwdriver (PH1 bit) to remove the single 7 mm screw that secures the CD/DVD drive.

Step 5

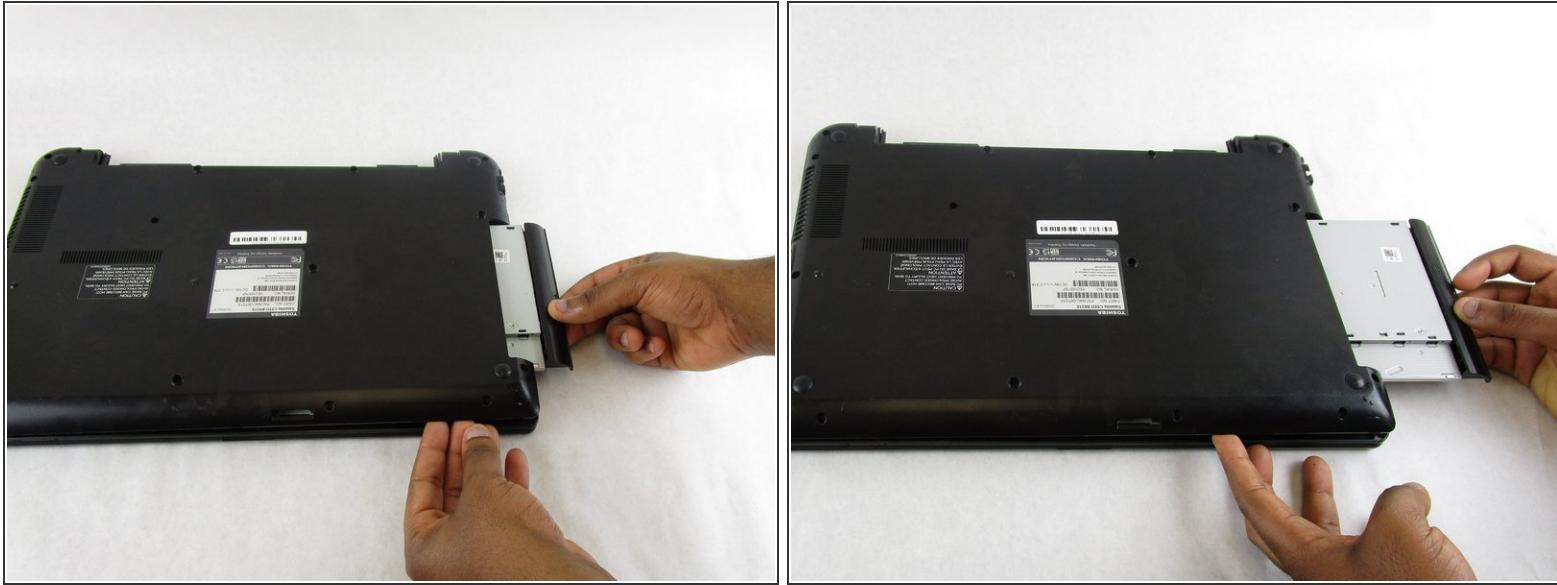

- Slide the CD/DVD Drive out of the laptop.

Step 6 — Hard Drive





- Use a Phillips #1 screwdriver (PH1 bit) to remove the thirteen 7 mm screws that secure the bottom cover.

Step 7



- Use a plastic opening tool to separate the back cover from the laptop.
- *i* It is recommended that you start from a corner, and run the tool along the edge of the cover.
- ⚠ Be careful not to bend or crack the plastic back cover.

Step 8

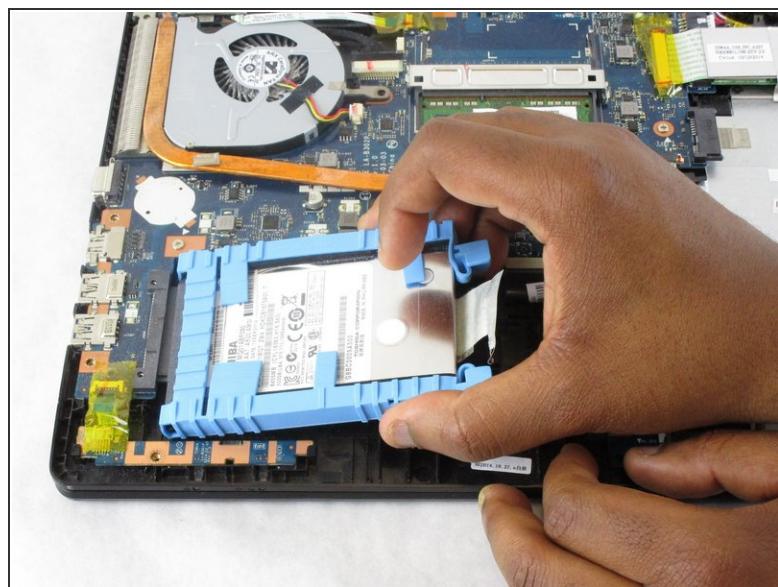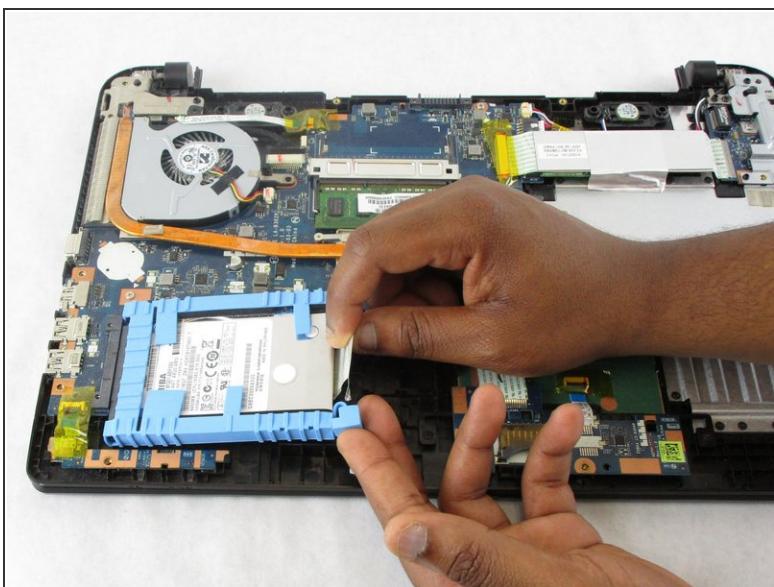

- Using the ribbon beneath the hard drive lift it upwards and pull the hard drive out.

Step 9



- Remove the hard drive from the blue rubber mount.

To reassemble your device, follow these instructions in reverse order.