



# Toshiba Satellite C675-S7106 Battery Replacement

This guide allows a user to remove and replace their battery, a prerequisite to other replacements in this laptop.

Written By: Joshua Steakelum



This document was generated on 2020-01-06 04:55:53 PM (MST).

## INTRODUCTION



Removing the battery is almost always the first step in repairing or replacing any part of a laptop, as well as troubleshooting a faulty charging circuit. No special tools are required.

## Step 1 — Battery



- Flip the laptop over, so that the "top" of the laptop is against your working surface.
- Orient the laptop so that the silver label is in the bottom-left corner, with the battery facing you.

## Step 2

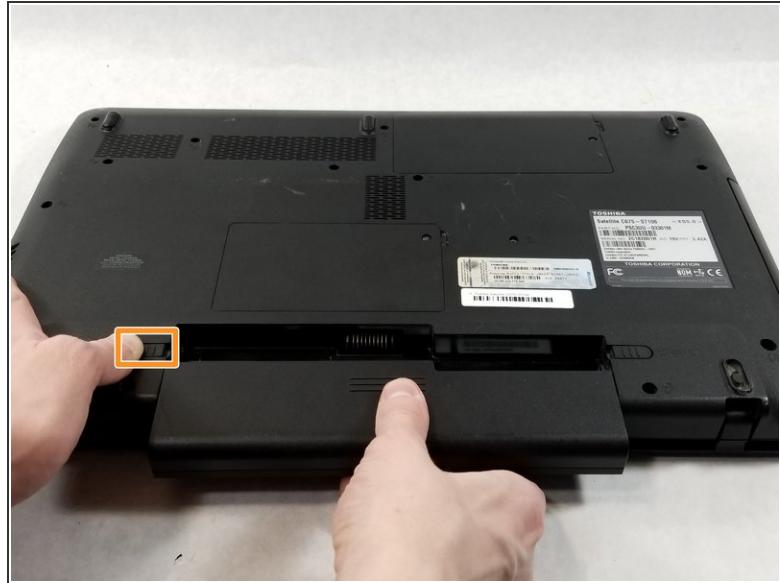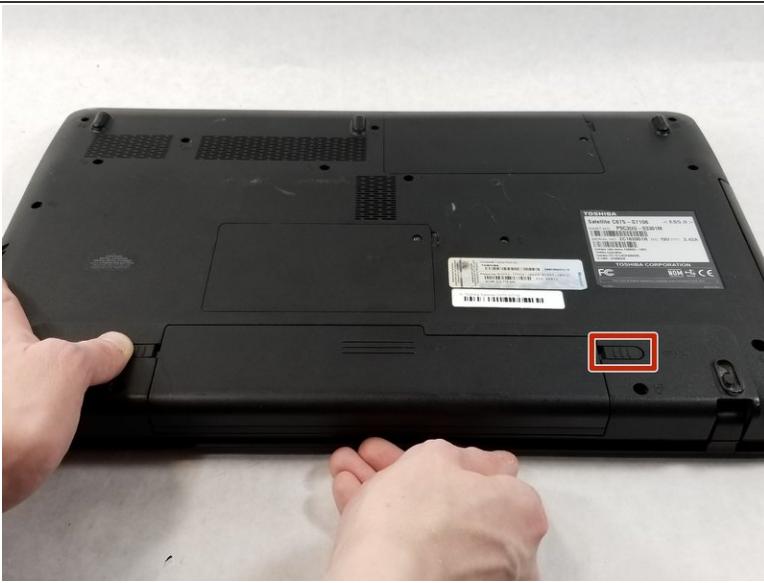

- On the right side of the battery, move the tab marked 1 to the right, unlocking the battery.
- On the left side of the battery, hold the tab marked 2 to the left while pulling the battery towards you.

To reassemble your device, follow these instructions in reverse order.