



Toshiba Satellite C675-S7106 CMOS Battery Replacement

This guide allows the user to replace or re-seat a discharged or faulty CMOS battery.

Written By: Joshua Steakelum



INTRODUCTION

Sometimes a CMOS battery needs to be replaced or re-seated - in this laptop, that's a fairly simple and straightforward process. You'll need a PH0-head screwdriver and a plastic tool to pry the battery from its socket.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Battery




- Flip the laptop over, so that the "top" of the laptop is against your working surface.
- Orient the laptop so that the silver label is in the bottom-left corner, with the battery facing you.

Step 2



- On the right side of the battery, move the tab marked 1 to the right, unlocking the battery.
- On the left side of the battery, hold the tab marked 2 to the left while pulling the battery towards you.

Step 3 — CMOS Battery

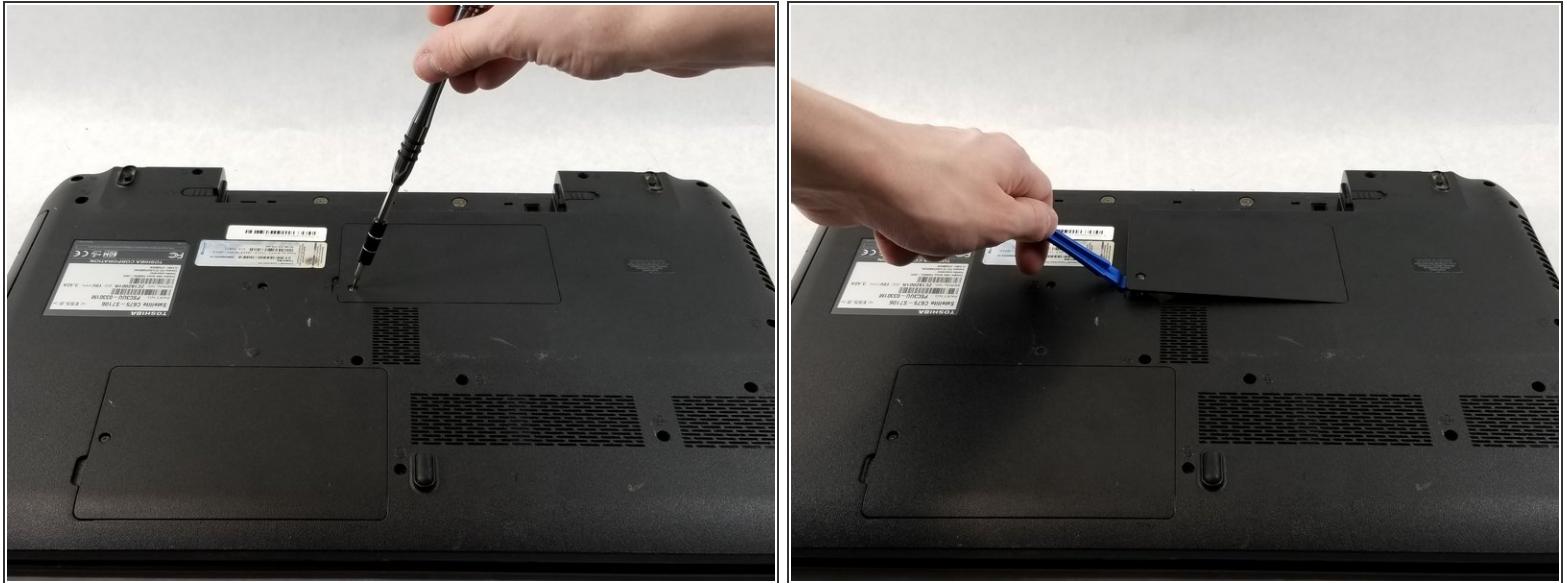


- Rotate the laptop so that the battery cavity faces away from you.
- Unscrew the single PH0-head screw connecting the center panel to the laptop.

(i) This screw does not need to be completely removed, as it's permanently attached to the device.

- Using a plastic spudger, unclip and remove the panel from the device.

Step 4

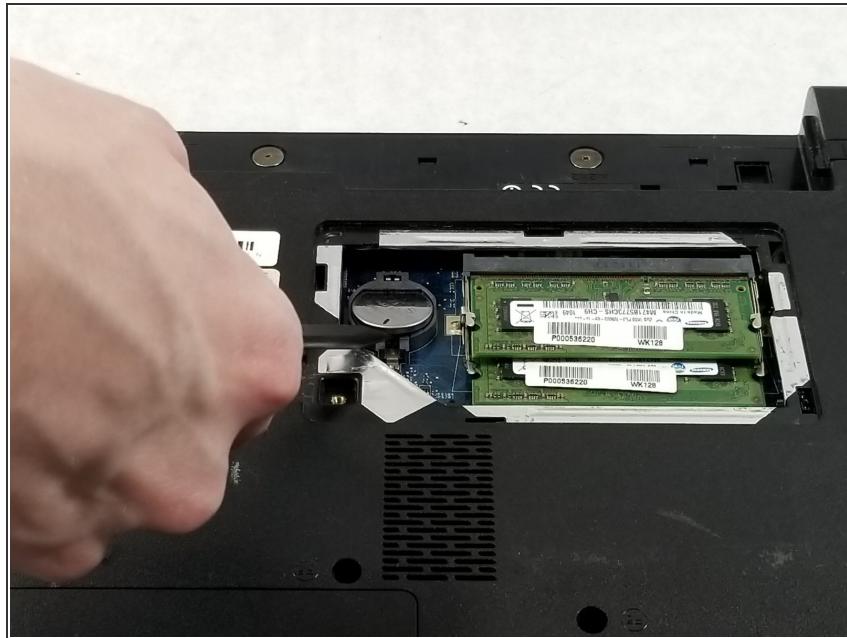

- Using a thin pry tool, gently remove the battery from its socket.

To reassemble your device, follow these instructions in reverse order.