



Toshiba Satellite C75D-A7370 Battery Replacement

This guide will show how to remove and replace the battery of a Toshiba Satellite C75D-A7370.

Written By: Chris Purdie



INTRODUCTION

Before beginning battery replacement make sure that the laptop is not connected to any power source, so that electrical shock is avoided.

TOOLS:

- Spudger (1)


Step 1 — Battery



- To begin replacing your battery, flip the laptop over so that the back is visible. Locate the battery at the bottom center of the laptop.

 Before beginning battery removal, make sure that no power source is connected to the laptop. This will avoid electrical shock.

Step 2

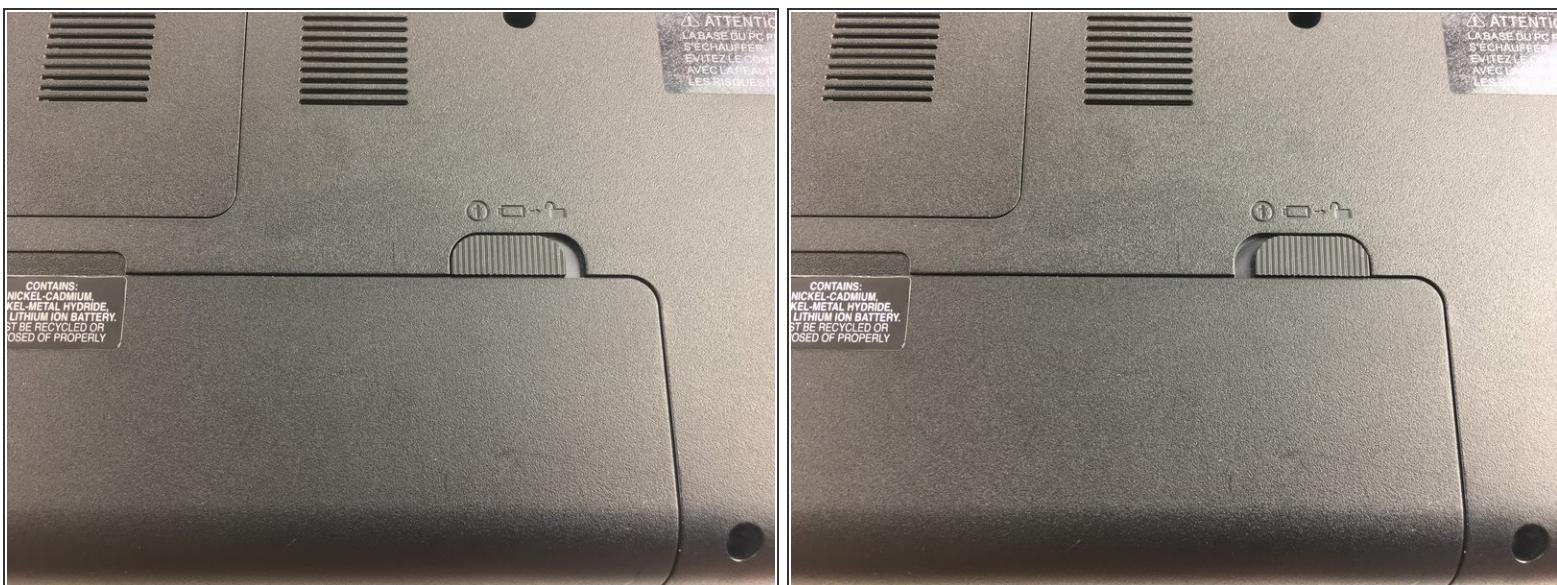

- On the right side of the battery there will be a locking switch. Slide the switch into the unlocked position.

Step 3



- Using your left hand, move the switch on the left side of the battery towards the center of the laptop while simultaneously prying up on the center of the battery with a spudger. The battery will flip out and can be removed.

To reassemble your device, follow these instructions in reverse order.