


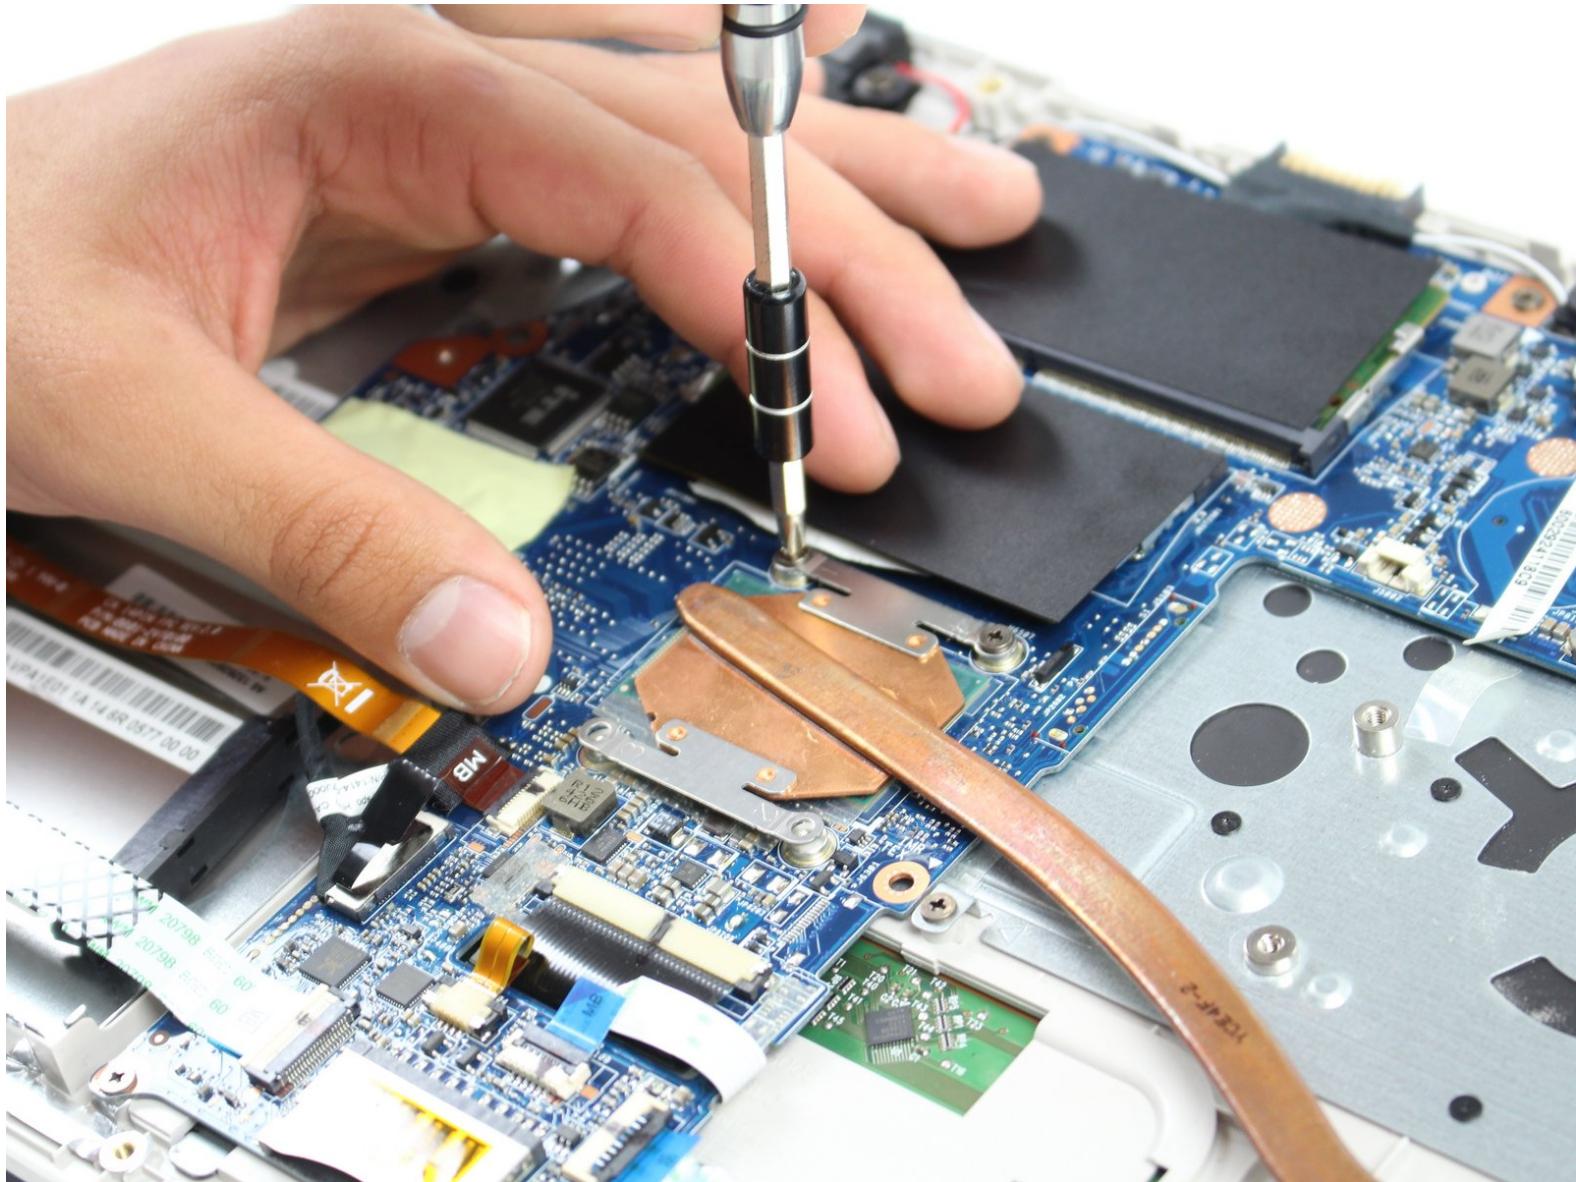

# Toshiba Satellite E45t-B4204 Thermal Paste Replacement

Thermal paste is a heat conductive paste that is used between the CPU and the heatsink of the laptop.

Written By: Eduardo



This document was generated on 2019-12-28 09:28:25 PM (MST).

## INTRODUCTION

This will be a quick guide on how to replace the thermal paste of a Toshiba Satellite E45t-B4204. Replacing the thermal paste will help transfer the heat from the CPU to the heatsink and out of the laptop.

### TOOLS:


- [Arctic Silver Thermal Paste \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)
- [Spudger \(1\)](#)

## Step 1 — Back Case



- Remove all 14 of the 4 mm screws on the back side of the laptop with a Phillips #1 screwdriver.

## Step 2

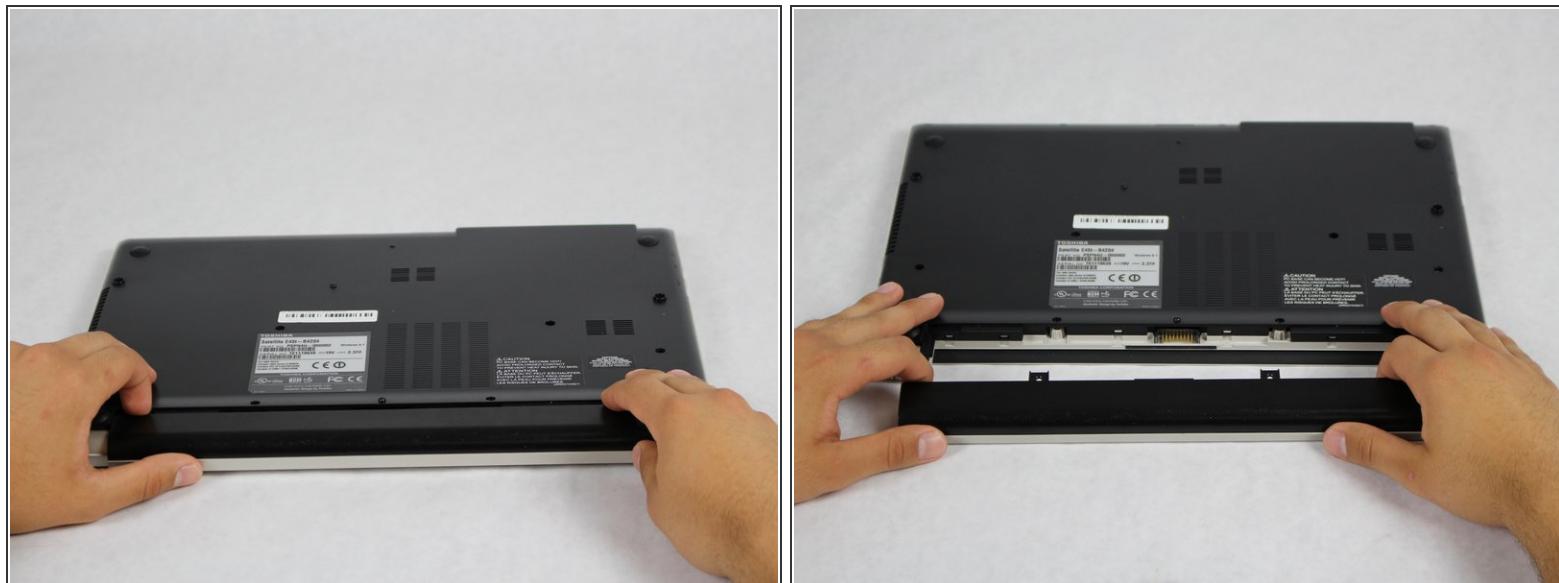


- Gently pull out the battery.

## Step 3





- Lift up in the spaces left by the battery to create a gap between the back case and the laptop body.
- Run a spudger along both sides of the laptop to widen the separation and release the clips holding the back case on.
- Remove the back case.

## Step 4 — Thermal Paste

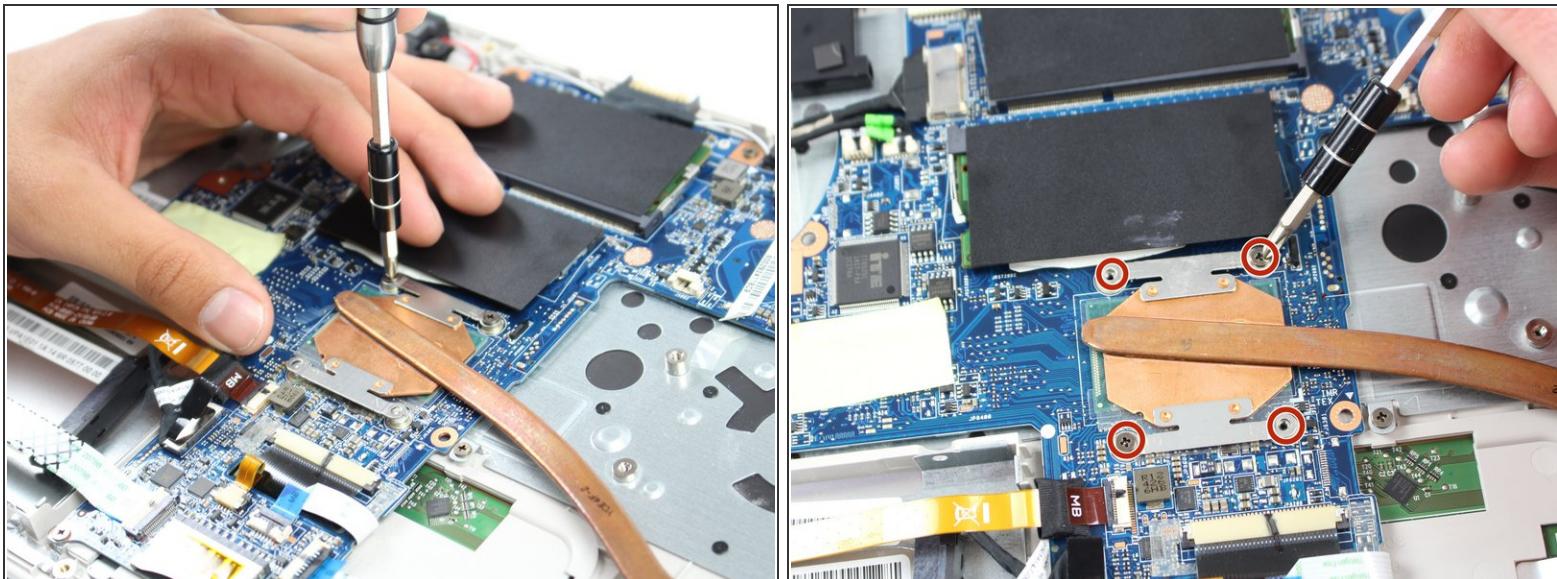



- Locate and remove the four 3 mm screws around the CPU.
- The CPU is located beneath the copper heatsink.

## Step 5

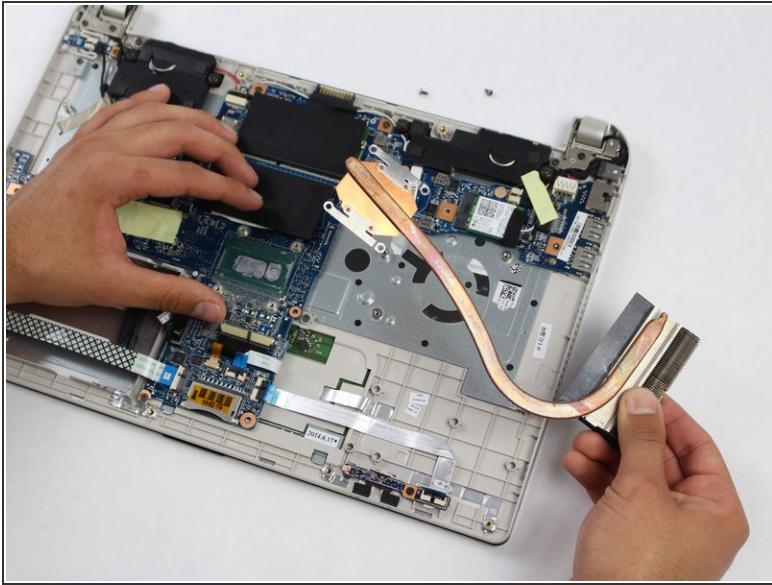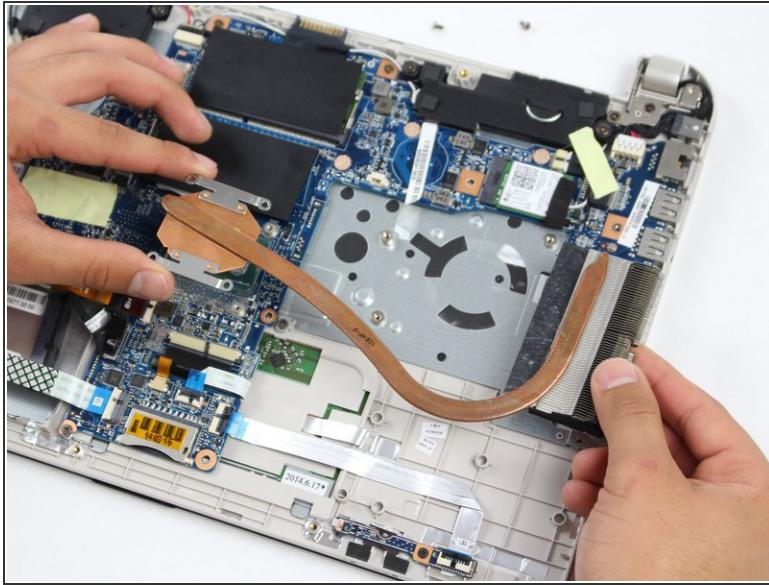

- Carefully remove the heatsink from the rest of the motherboard and casing.

## Step 6

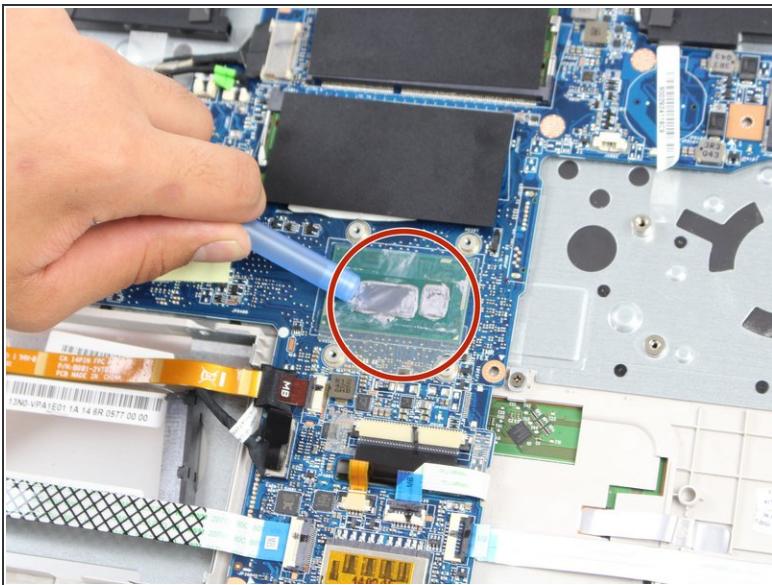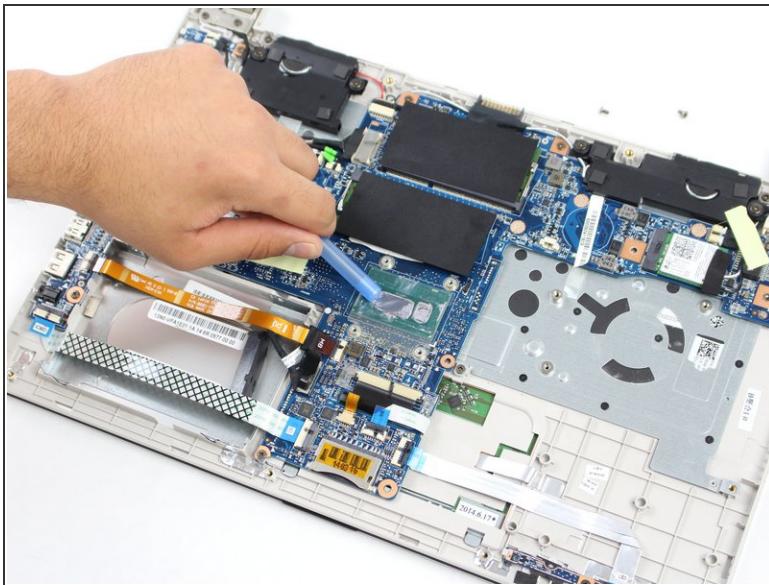

- Now that the heatsink has been removed the CPU is visible. The CPU is the green square with silver metal in the center.
- Reapply thermal paste above the CPU.

To reassemble your device, follow these instructions in reverse order.