



# Toshiba Satellite L455D-S5976 WiFi Card Replacement

This guide will show you how to replace the wifi card in your device.

Written By: NateJohnson



## INTRODUCTION

The wifi card enables the computer to be compatible with wifi. If the card is malfunctioning, the computer will not receive a signal from any wifi sources. This guide shows how to remove the wifi card so it can be replaced.

### TOOLS:

- Phillips #1 Screwdriver (1)

### PARTS:

- New wifi card (1)

## Step 1 — WiFi Card




- Unscrew the Phillips #1 4mm screw from the middle panel using a Phillips #1 screwdriver.

## Step 2




- Remove the middle panel by lifting up and out.

## Step 3

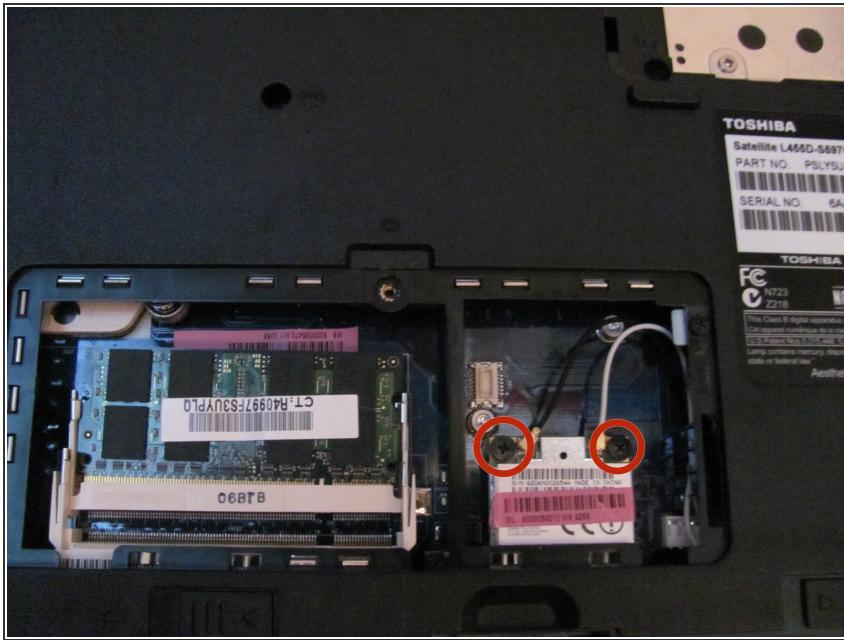


- Remove the two Phillips #1 6mm screws from the wifi card using a Phillips #1 screwdriver.

## Step 4

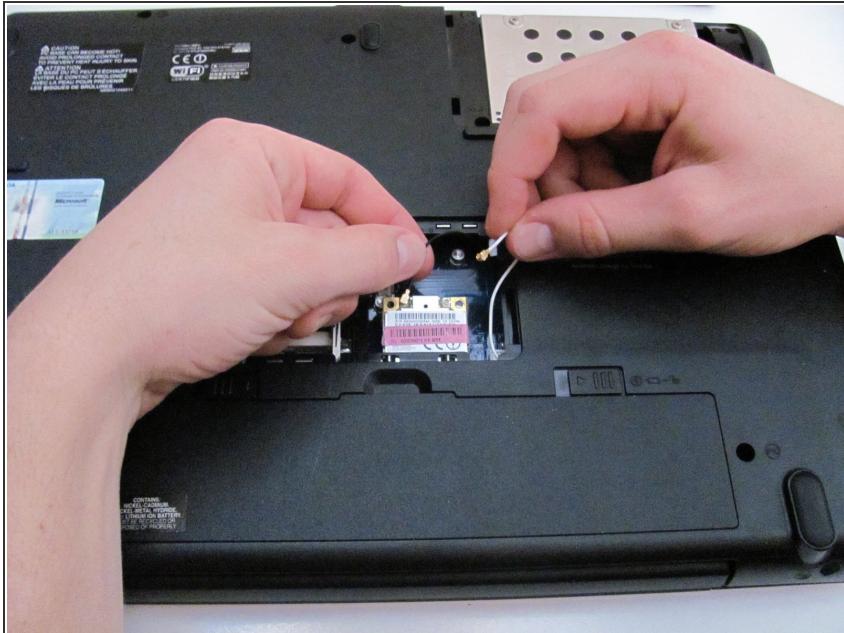

- Unsnap the two cables from the wifi card.

## Step 5

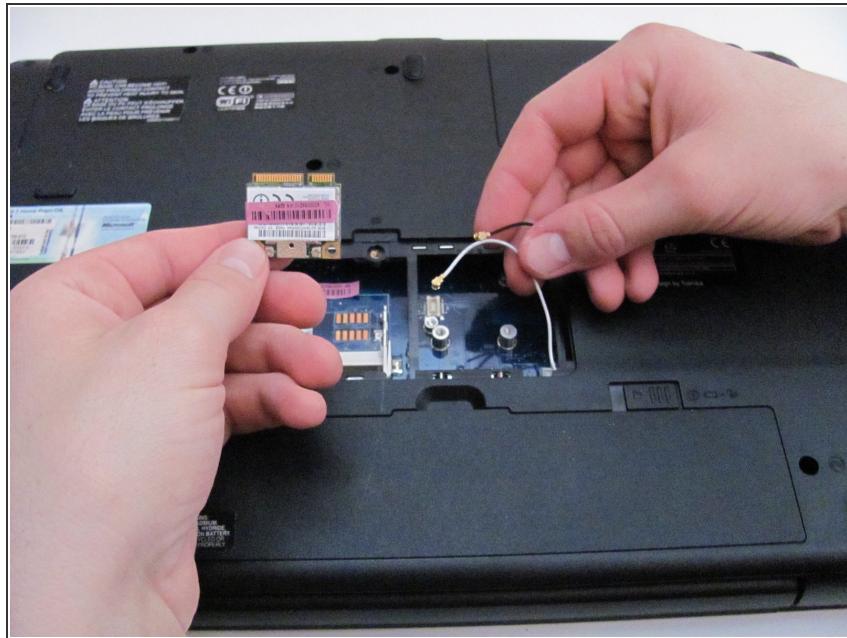

- Remove the wifi card using your hands.

To reassemble your device, follow these instructions in reverse order.