



Toshiba Satellite L755D-S5150 RAM Replacement

RAM is what allows your computer to store stuff. So when it goes bad or you don't have enough, your computer may not run correctly!

Written By: Kyler Clonts



INTRODUCTION

Follow this guide if you need to replace or upgrade your RAM. Sometimes people want to upgrade their RAM rather than replace it because the RAM helps your computer read data faster.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery




- After shutting down your laptop, turn your laptop over and click the left tab left, then pull the right tab right as you pull the battery out.
- *(i)* This step should always be done before working on your laptop to minimize electrostatic shock.

Step 2 — RAM Chip



- Using the Phillips PH00 screwdriver unscrew the three 4mm screws for the cover of the Ram compartment.
- Now remove the cover for the Ram compartment.

Step 3

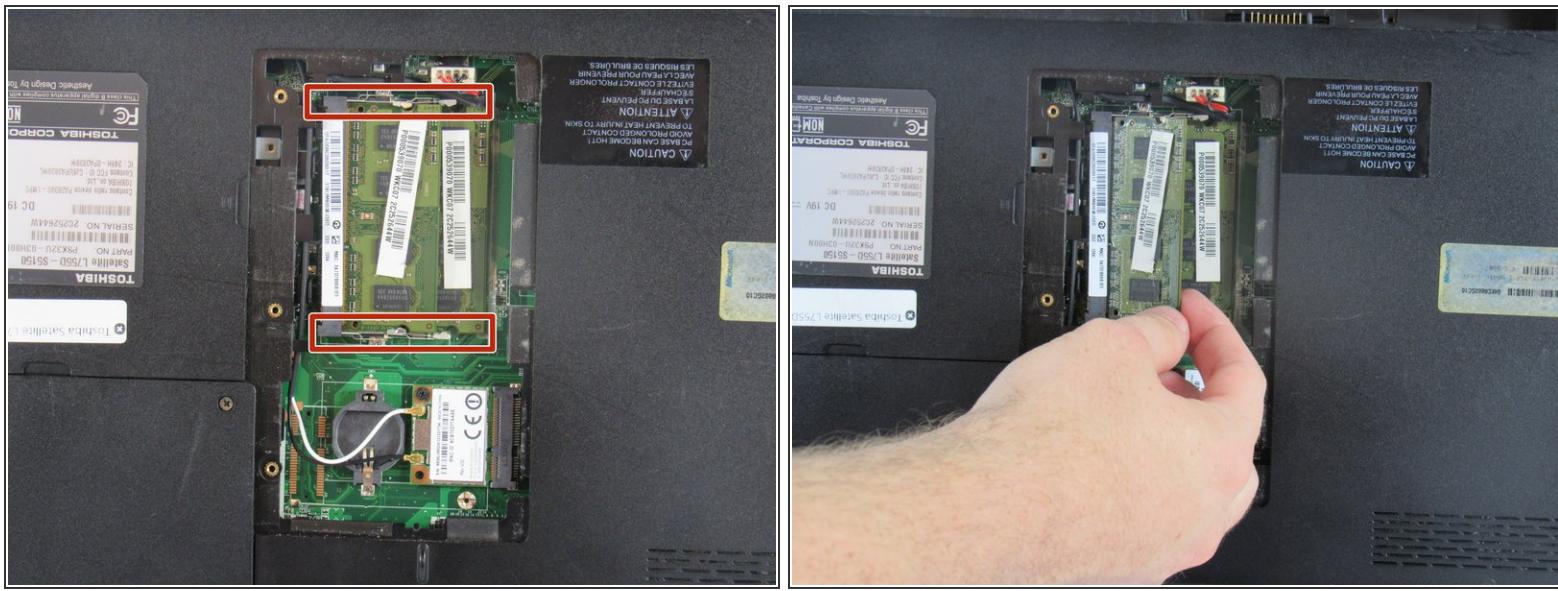

- Using both hands, gently push the two metal claps on either side of the top RAM chip outward.
- The RAM chip will then pop up at an angle, allowing you to pull it out.
- Repeat the above step for the second RAM chip

To reassemble your device, follow these instructions in reverse order.