



# Toshiba Satellite L775D-S7340 Battery Replacement

If your Toshiba Satellite L775D-S7340 is not holding a charge your battery probably needs to be replaced.

Written By: Elizabeth Sadewasser



## INTRODUCTION

This guide will show you how to remove and replace the battery.

## Step 1 — Battery



- Make sure the laptop is unplugged and powered off.
- Locate the battery latches on the underside of the laptop.

## Step 2



- Slide the right latch to the right until you hear it lock into place.
- Slide the left latch to the left and hold it.

## Step 3



- Slide the battery out towards you.

To reassemble your device, follow these instructions in reverse order.