


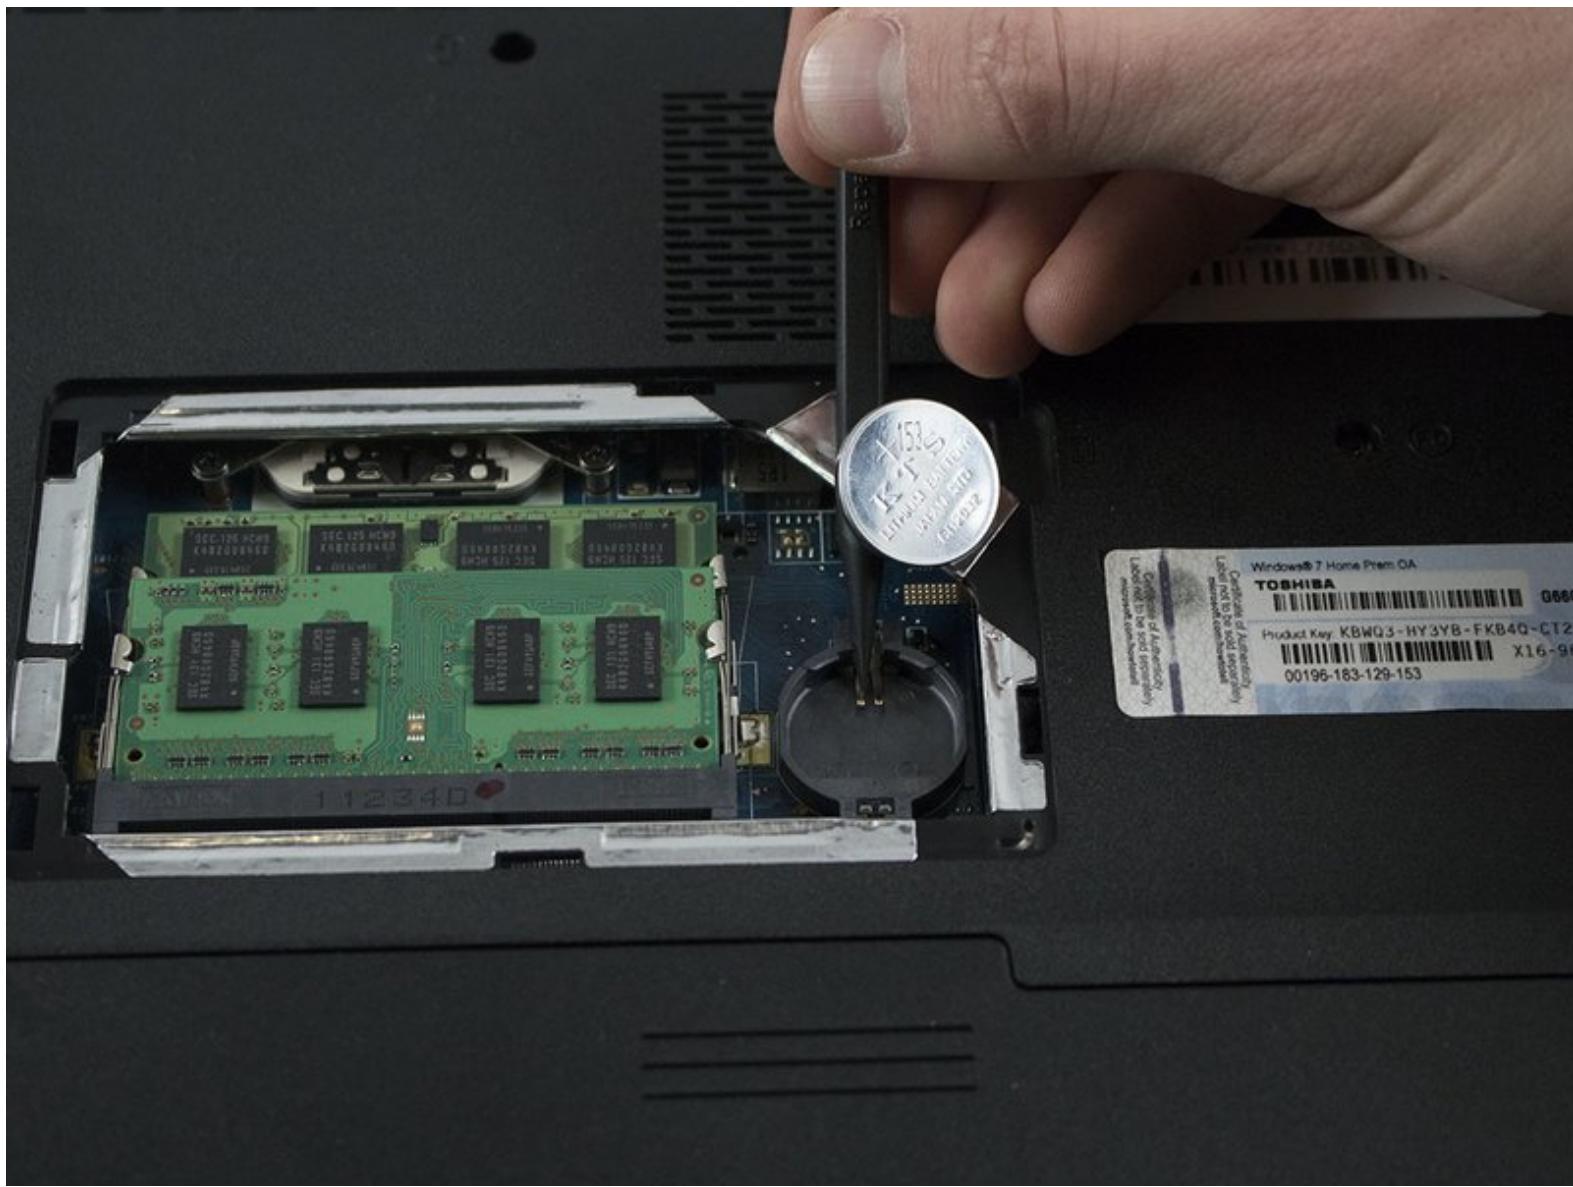

# Toshiba Satellite L775D-S7340 CMOS Battery Replacement

If your Toshiba Satellite L775D-S7340 screen is not turning on even though your computer is on and running, you may need to replace the CMOS battery.

Written By: Elizabeth Sadewasser



This document was generated on 2019-09-30 05:29:56 PM (MST).

## INTRODUCTION

This guide will show you how to remove and replace the CMOS battery.

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Battery



- Make sure the laptop is unplugged and powered off.
- Locate the battery latches on the underside of the laptop.

## Step 2



- Slide the right latch to the right until you hear it lock into place.
- Slide the left latch to the left and hold it.

## Step 3




- Slide the battery out towards you.

## Step 4 — CMOS Battery




- Use the Phillips #1 screwdriver to remove the one 4.6 mm screw holding on the cover located on the bottom center of the laptop.

## Step 5

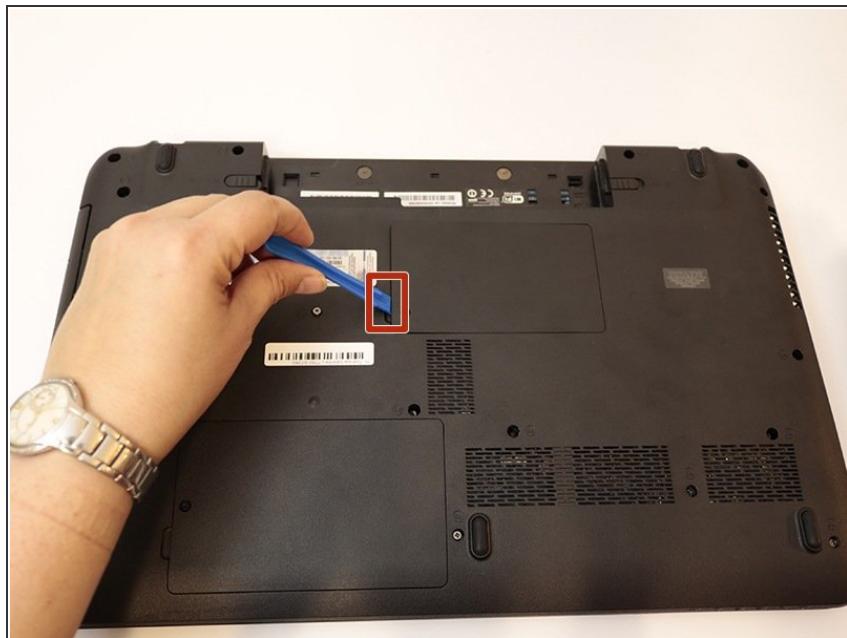


- Use the plastic opening tool to pry open the CMOS battery cover. Wedge the prying tool in, beginning at the indent in the cover.

## Step 6

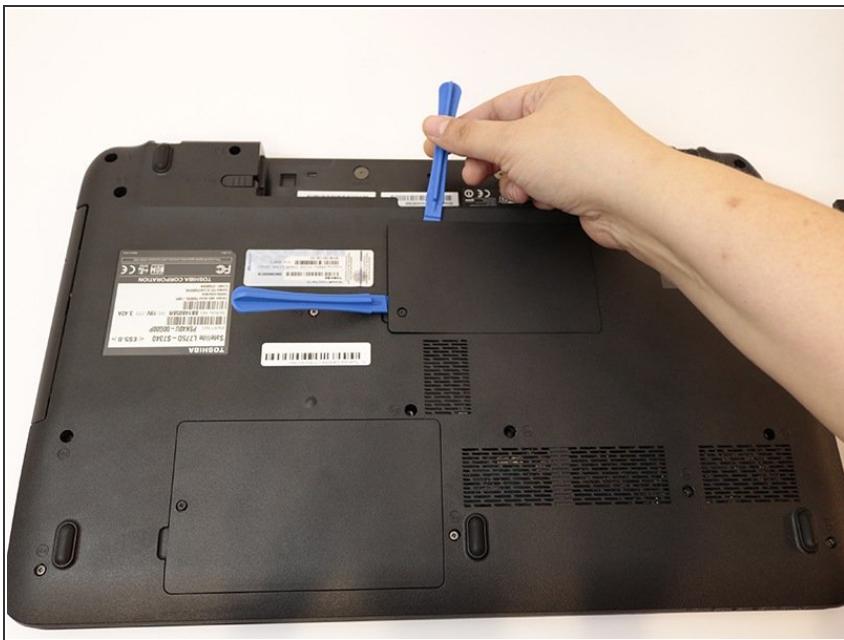

- Use another prying tool to pry up along the edges of the cover. Continue prying up around the edges until the cover is open and remove it.

## Step 7

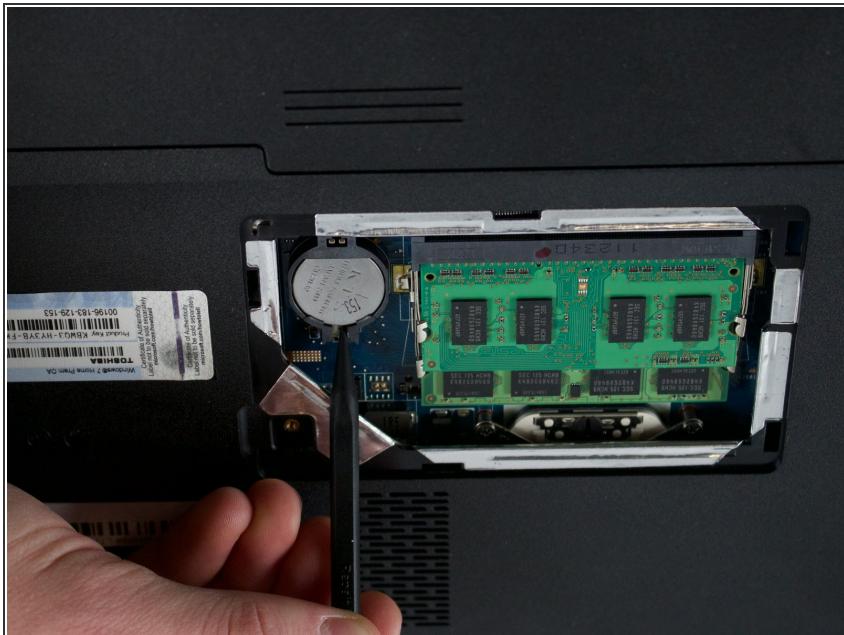

- Using the pointed side of the spudger, remove the CMOS battery by pushing down on the tab that secures the battery in place.

**i** The CMOS battery should pop up or out of its holder.

To reassemble your device, follow these instructions in reverse order.