



# Toshiba Satellite M305D-S4829 CD/DVD Drive Replacement

This guide will aid you in removing the CD/DVD Drive from the system.

Written By: Michael Jensen



 **TOOLS:**

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Battery



- Unlatch the battery by pushing outward on both latches.

## Step 2




- Slide battery out.

## Step 3 — CD/DVD Drive



- Remove the back panel by removing the three labeled screws with a Phillips #0 screwdriver.

## Step 4

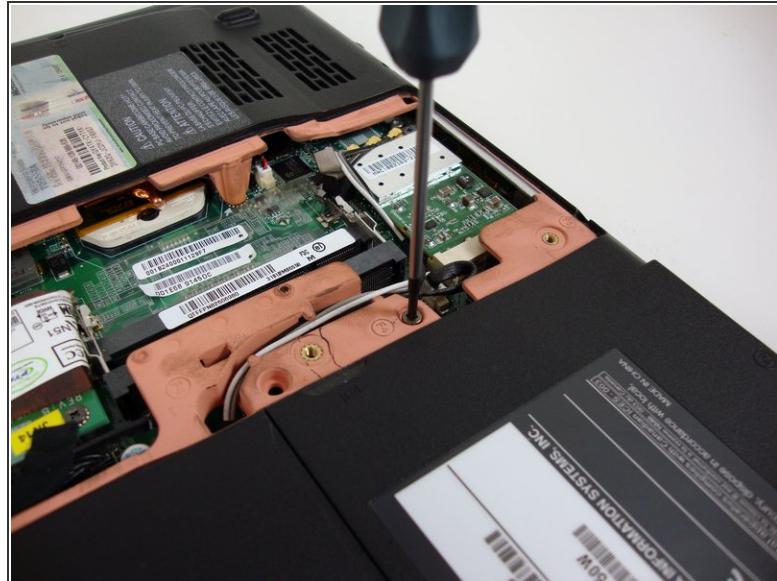

- Locate and remove the circled screw with a Phillips #0 screwdriver.

## Step 5



- Use the plastic opening tool to pry the CD/DVD drive out of the frame.

## Step 6



- Gently remove the CD/DVD drive from the laptop body.

To reassemble your device, follow these instructions in reverse order.