



# Toshiba Satellite M305D-S4829 RAM Replacement

This guide will assist in the removal of Random Access Memory.

Written By: Michael Jensen



 **TOOLS:**

- Phillips #0 Screwdriver (1)

 **PARTS:**

- PC2-6400 2 GB RAM Chip (1)

## Step 1 — RAM



- Unscrew the three screws from the back panel with Phillips #0 screwdriver.
- Remove the back panel.

## Step 2



- Locate the two clips holding the RAM chip in place.
- Apply pressure to each clip, pulling them away from the RAM.

① One end of the RAM will pop out.

## Step 3



- Gently pull RAM out as shown.

## Step 4



- To install a new stick of RAM, carefully insert it into the RAM slot.
- Gently push down on the RAM chip until it snaps securely into place.

To reassemble your device, follow these instructions in reverse order.