



# Toshiba Satellite M45 RAM Replacement

Written By: Sophie Schneider




## INTRODUCTION

Learn how to replace your laptop's RAM.

### TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — RAM

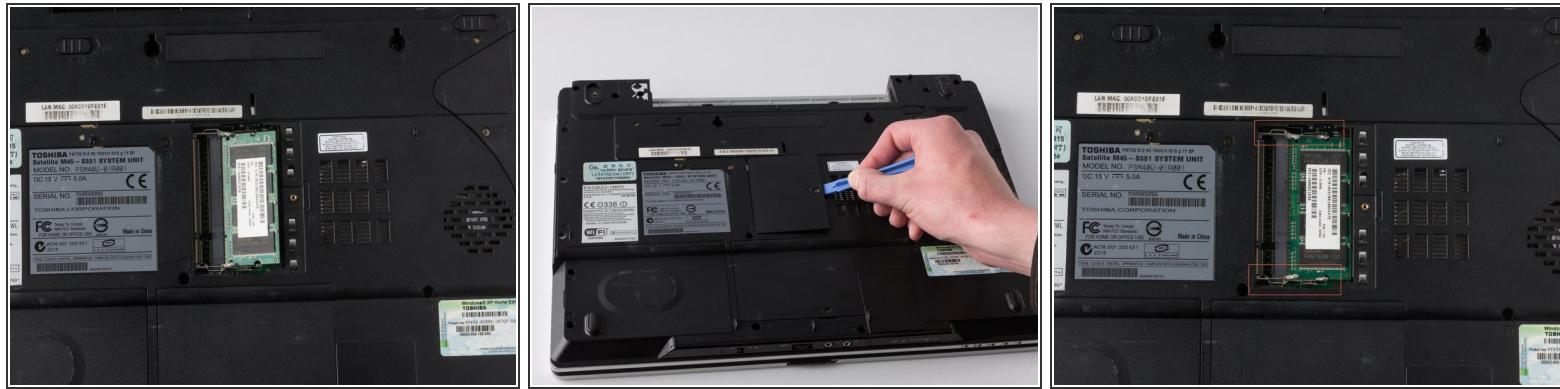

- Use a #1 Phillips head screwdriver to remove the screws on the RAM's cover panel, as seen in image.
- Then, use a flat edge tool to pry the cover off, as seen in image.
- Use your fingers to push the RAM tabs, as seen in image, that secure the RAM outward (away from the RAM). The RAM should then pop up.
- Finally, gently pull the RAM away from the connection. (Repeat this process until all the RAM has been removed from the device).

To reassemble your device, follow these instructions in reverse order.