


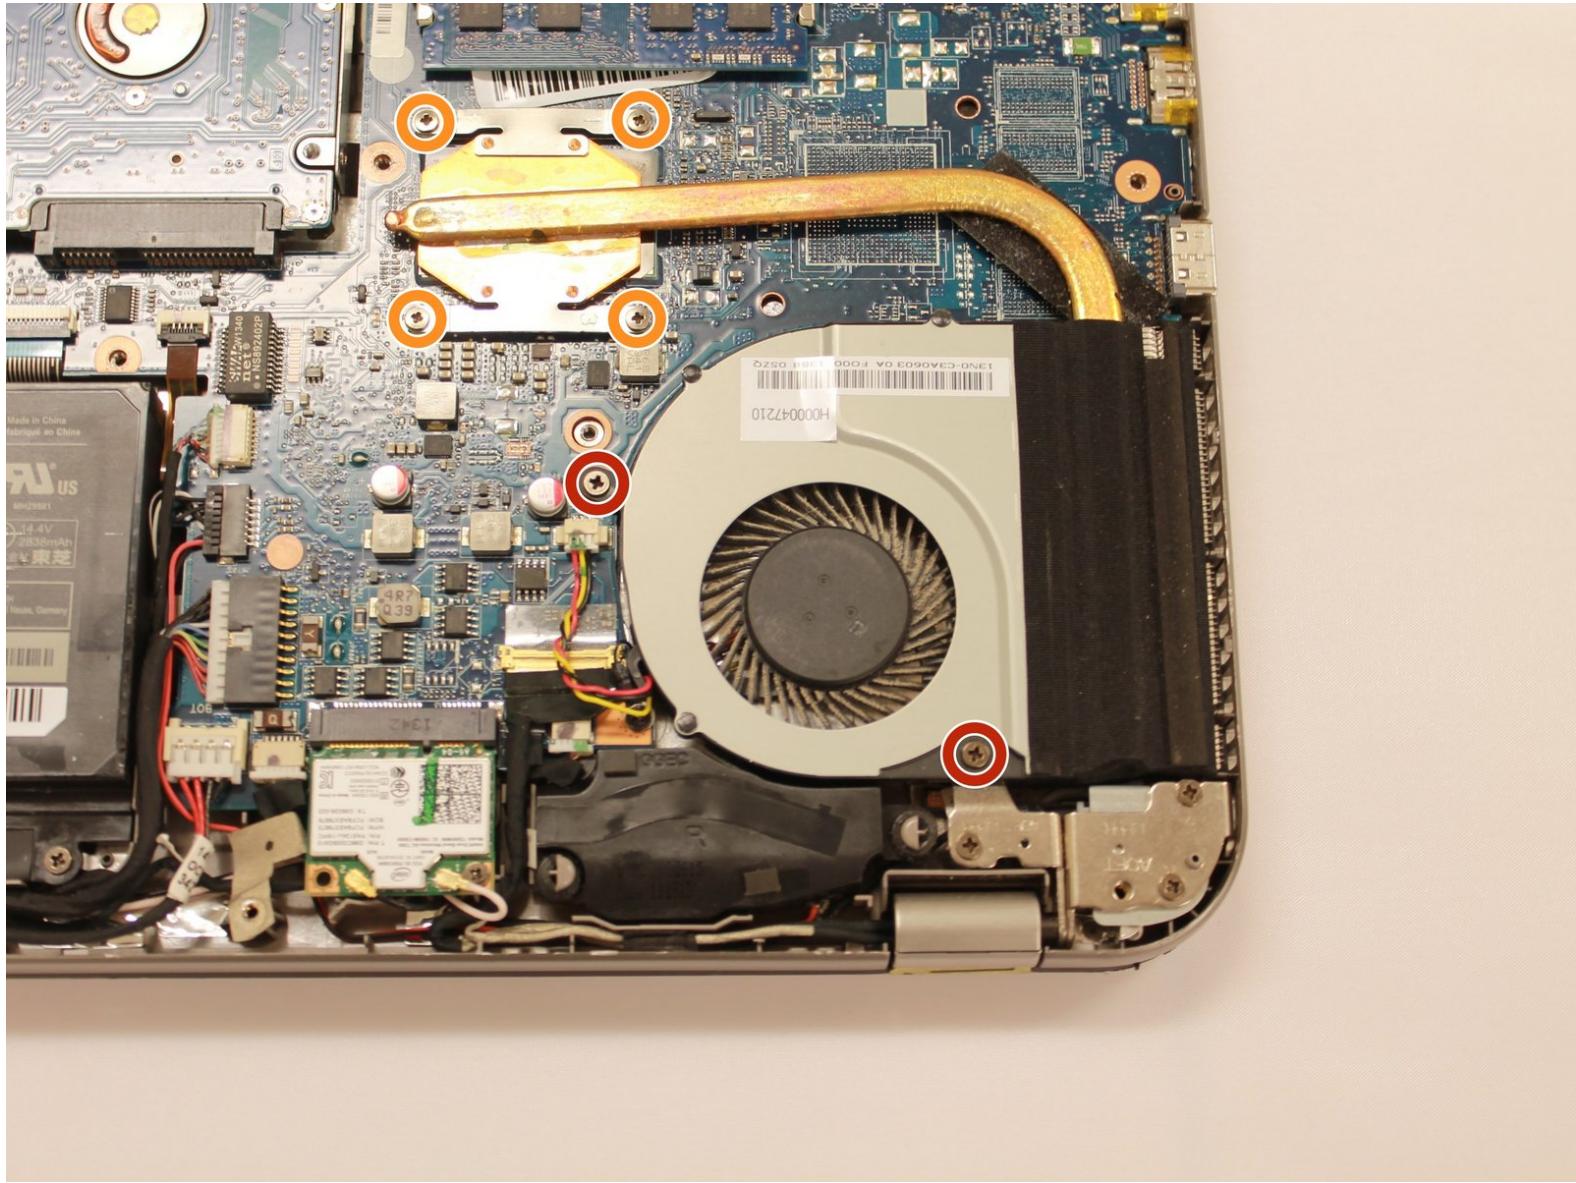

# Toshiba Satellite P55t-A5116 Fan & CPU Cooler Replacement

Use this guide to remove the Toshiba Satellite P55t-A5116 Fan and CPU cooler.

Written By: Brittany Castillo



## INTRODUCTION

Use this guide to remove the Toshiba Satellite P55t-A5116 Fan CPU cooler.

### TOOLS:


- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)

### PARTS:

- [Fan/ CPU cooler \(1\)](#)


Computer Part

## Step 1 — Back Casing

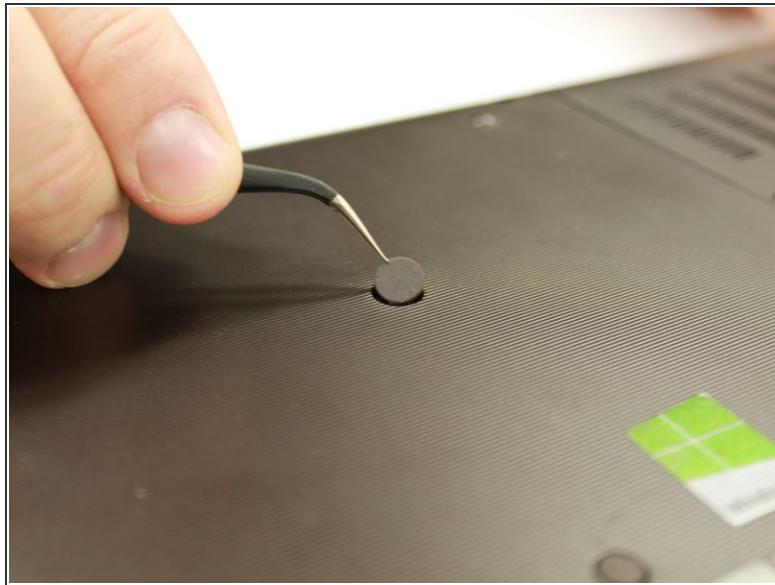

- Close laptop and turn it upside down
- Remove the 14 circular rubber covers with tweezers along with one smaller more cylindrical rubber cover.

## Step 2

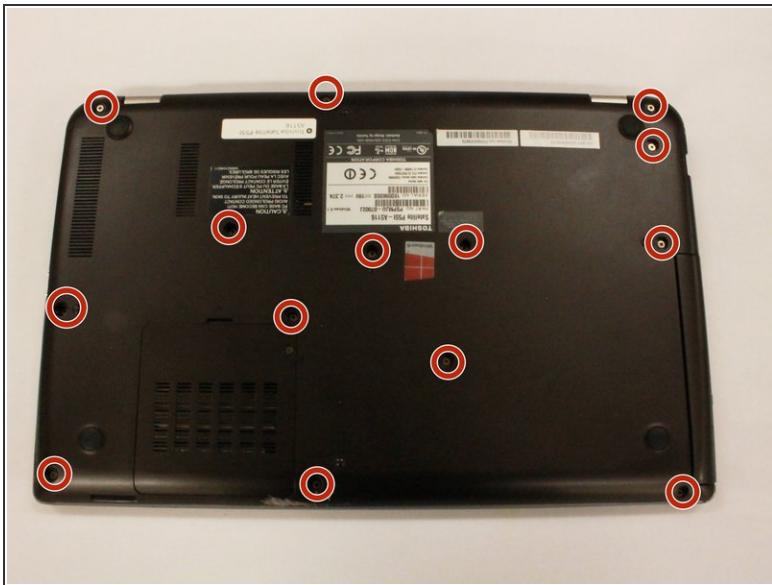


- Using the #PH0 screw head, remove 14 (5.7 mm) screws from the back casing.

## Step 3




- Gently pry off the bottom case with the plastic opening tools.
- Find the seam between the back case and the rest of the laptop casing.

## Step 4 — Battery

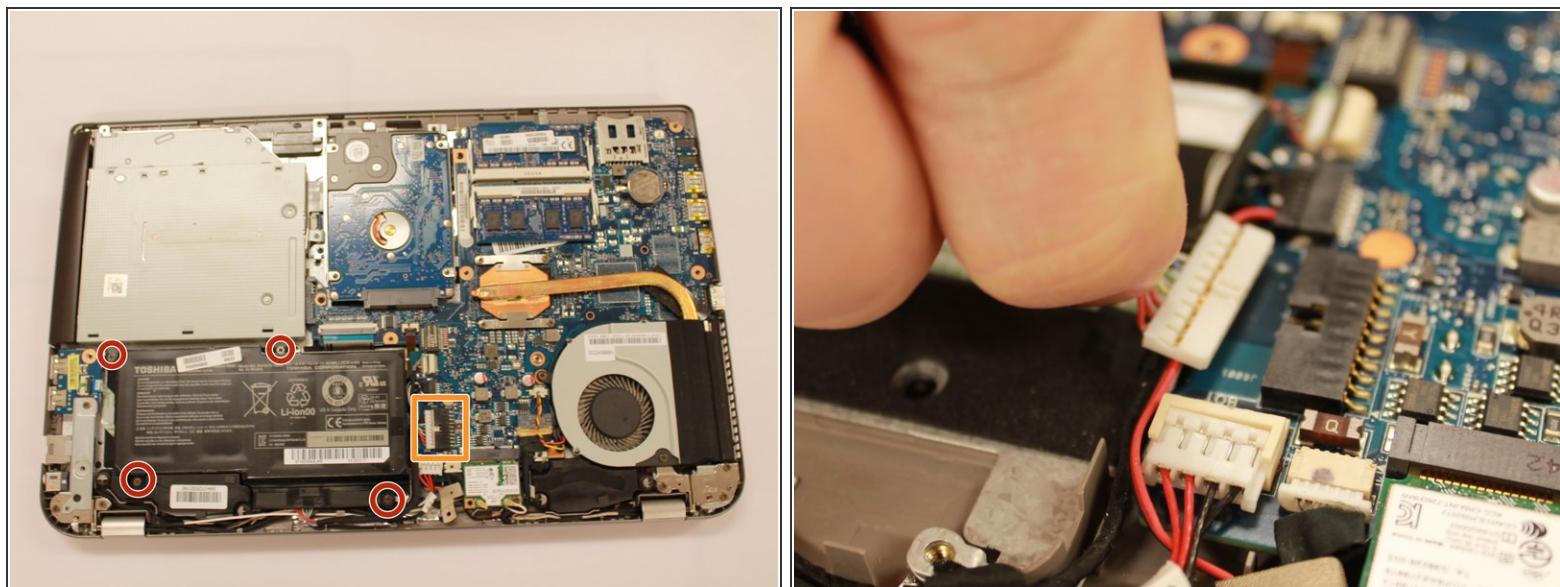

- Use the #PH0 screw head, remove 4 (5.7mm) screws.
- Unplug the battery's 10 pin connector and gently lift the battery out of the laptop.

## Step 5

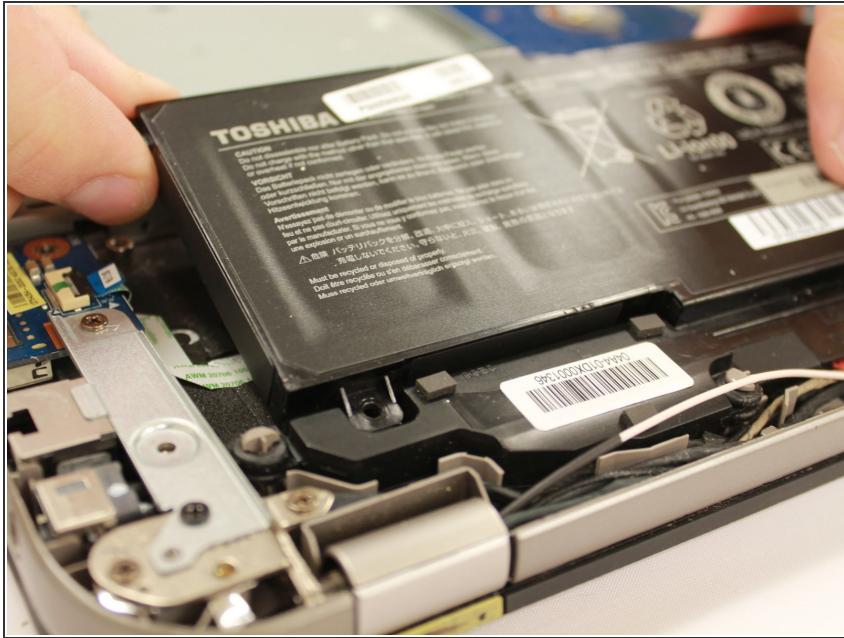



- Gently remove battery from the laptop.

## Step 6 — Fan & CPU Cooler



- Using a PH0 screwdriver, remove 2 (5.7mm) screws.
- Using a PH0 screwdriver, remove 4 (3.68mm) screws.

## Step 7

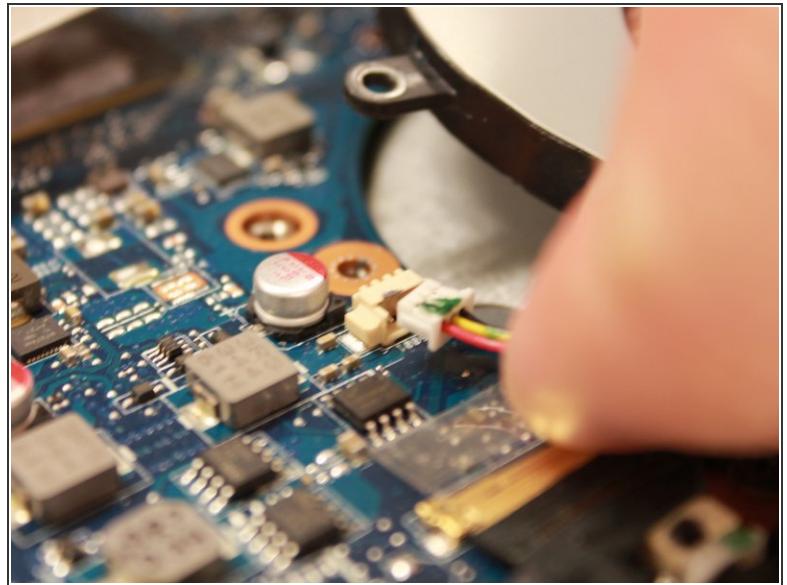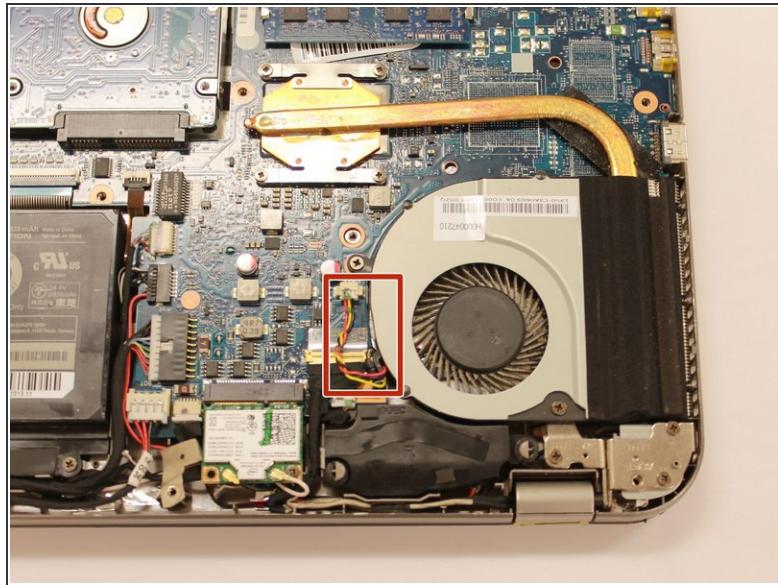

- Unplug the 3 pin connector
- Remove fan.

To reassemble your device, follow these instructions in reverse order.