


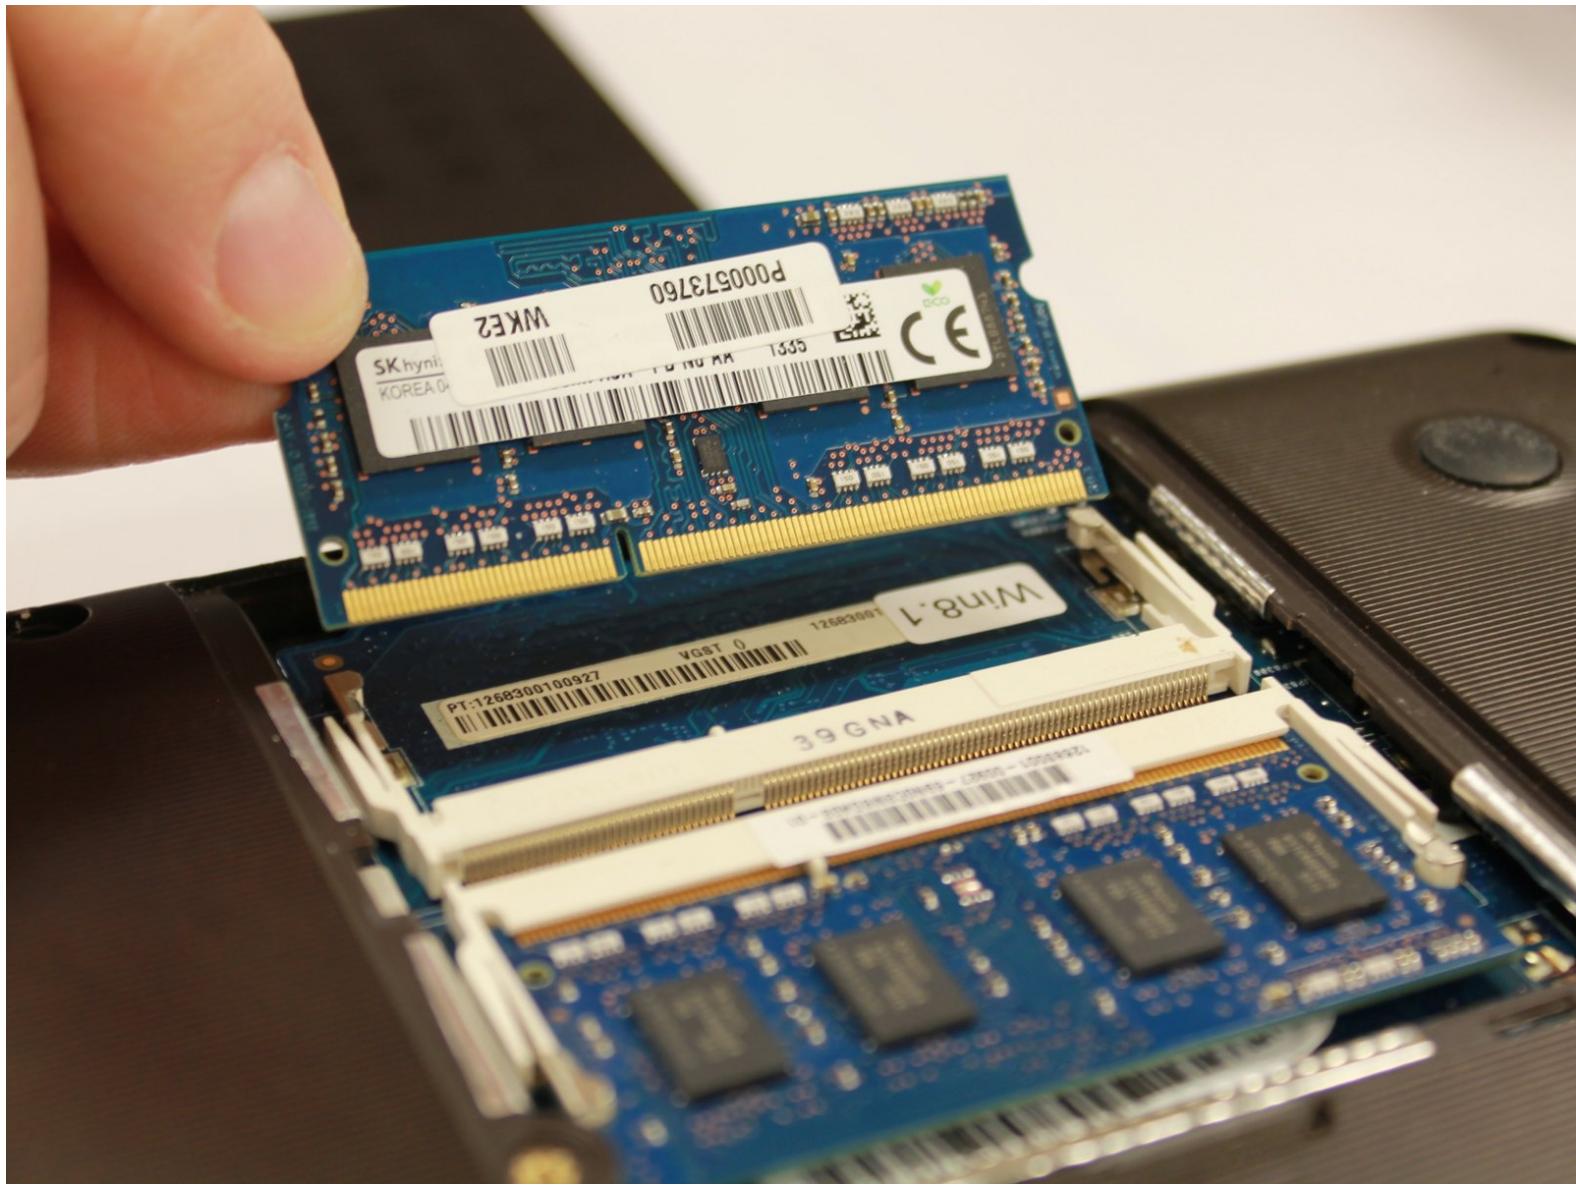

# Toshiba Satellite P55t-A5116 RAM Replacement

Use this guide to remove the Toshiba Satellite P55t-A5116 RAM.

Written By: Brittany Castillo



# INTRODUCTION

Use this guide to remove the Toshiba Satellite P55t-A5116 RAM.

## TOOLS:


- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)

## PARTS:

- [RAM \(2\)](#)


Computer Part

## Step 1 — Back Casing

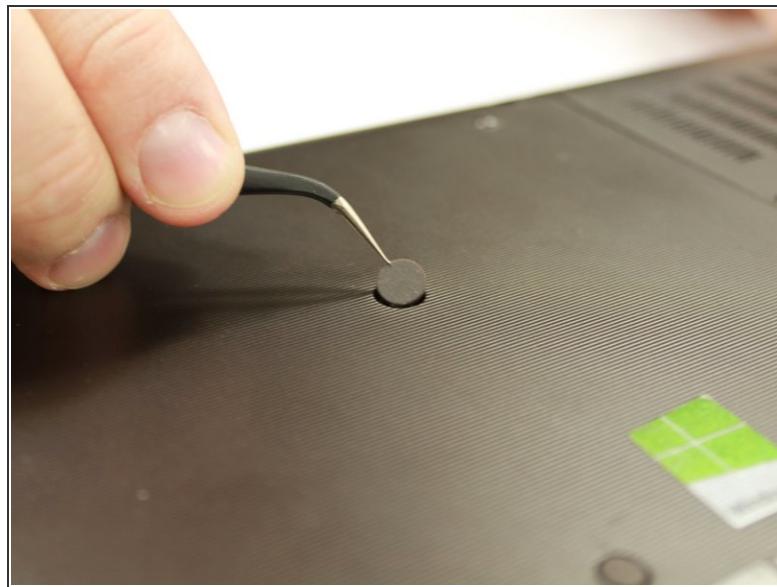

- Close laptop and turn it upside down
- Remove the 14 circular rubber covers with tweezers along with one smaller more cylindrical rubber cover.

## Step 2

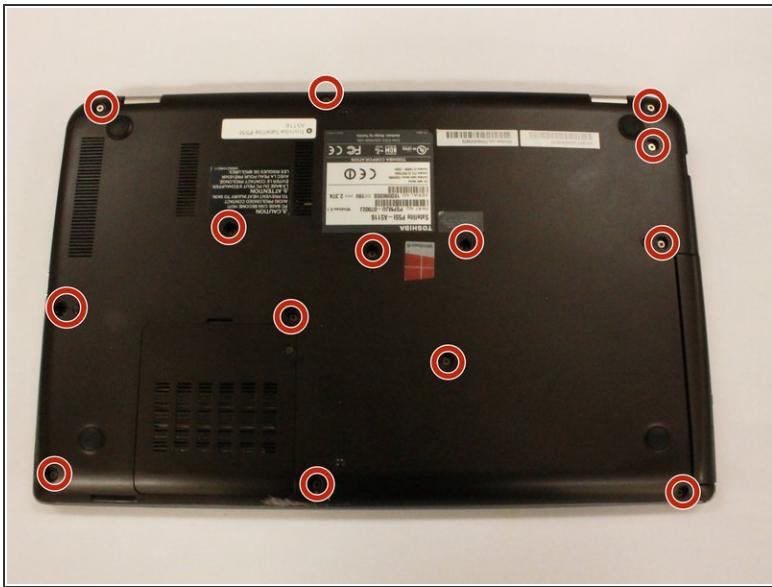

- Using the #PH0 screw head, remove 14 (5.7 mm) screws from the back casing.

## Step 3




- Gently pry off the bottom case with the plastic opening tools.
- Find the seam between the back case and the rest of the laptop casing.

## Step 4 — RAM



- Locate the RAM cover on the back of the Laptop.
- Using the #PH0 screw head, remove 1 (5.7mm) screw.
- Use the plastic opening tool to remove the RAM cover.

## Step 5

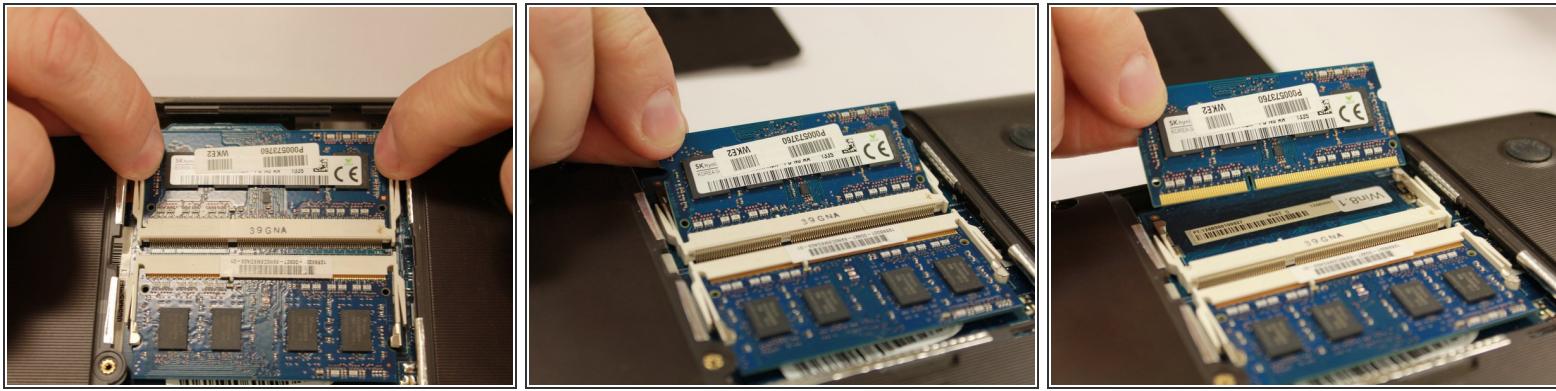

- Pull out the latches on either side.
- The RAM should pop up.
- Remove the RAM.
- Repeat for other side.

To reassemble your device, follow these instructions in reverse order.