



Toshiba Satellite S75D-A7346 RAM Replacement

This Replacement guide will be teaching you step by step how to replace the ram on you Toshiba Satellite S75D-A7346

Written By: Emil Lambert



This document was generated on 2019-10-10 04:13:39 AM (MST).

INTRODUCTION

This Replacement guide will be teaching you step by step how to replace the ram on you Toshiba Satellite S75D-A7346

TOOLS:

- [Phillips #000 Screwdriver \(1\)](#)

Step 1 — Taking Out The Battery





- First we have to take out the battery
- Pull the switch on the left to the left
- then hold the switch on the right to the right direction
- then pull up the battery from the point inbetween the 2 switches

Step 2 — UnScrewing The BackPlate



- Unscrew the screw located next to the information sticker
- Then get a screw driver or prier to gently pry the covering plate

Step 3 — Taking Out The RAM Sticks

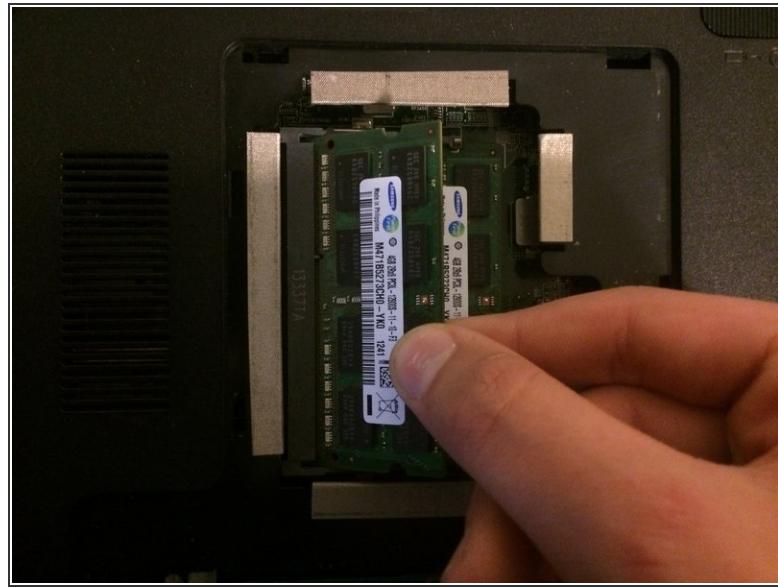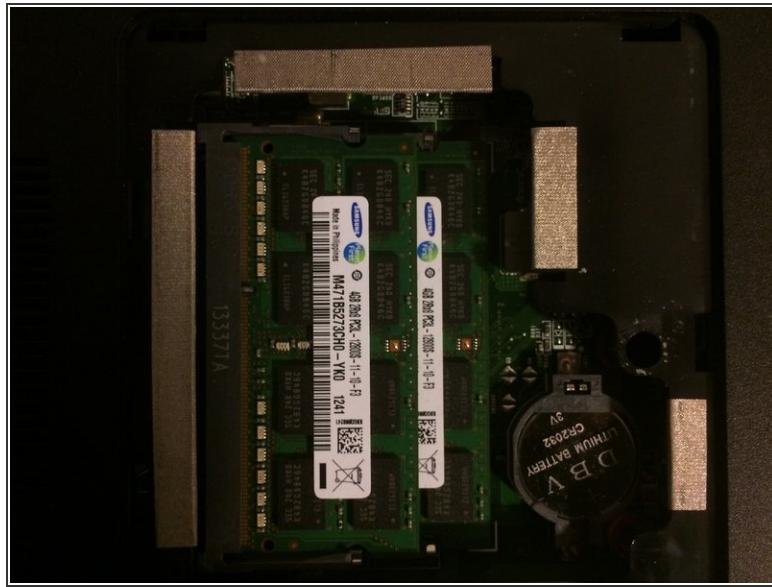


- Gently move the 2 notches on the ends of each ram stick and the stick should pop out at a 30 degree angle
- then pull that ram stick out
- you can do the same to the other one

Step 4 — Adding In New RAM Sticks




- Insert the lowest ram stick first by inserting it at a 30 degree angle then push down on it
- Note: do not put a lot of pressure on it
- Note: make sure before you push it down the RAM stick is all the way in
- Note: The maximum supported RAM is 8 GB in each slot of DDR3 1600Mhz

Step 5 — Putting On The Backplate

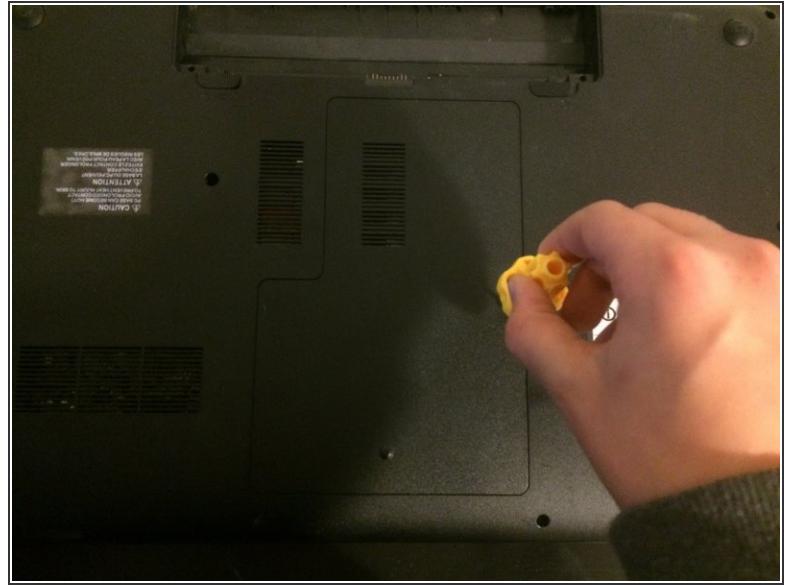

- Put on the backplate and put pressure around the edges of the blackplate so it stays flat with the case
- Then screw in the screw next to the information sticker

Step 6 — Putting In The Battery

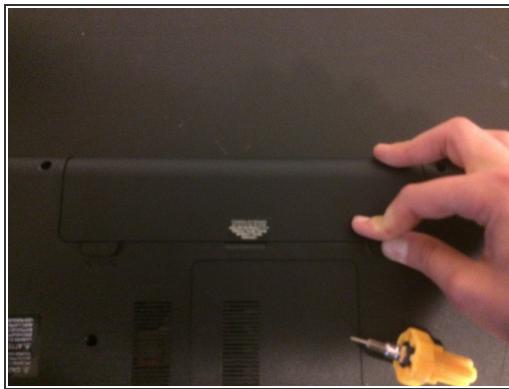

- Place the battery in the slot
- Then hold the right switch to the right and push the battery in, then release the switch.
- move the left switch to the right

Step 7 — You Finished



- You have now finished the replacement