




Toshiba Satellite U925T-S2120 Heat Sink Replacement

Use this guide to replace the heat sink of your Toshiba Satellite U925T-S2120.

Written By: Andrew Honderich

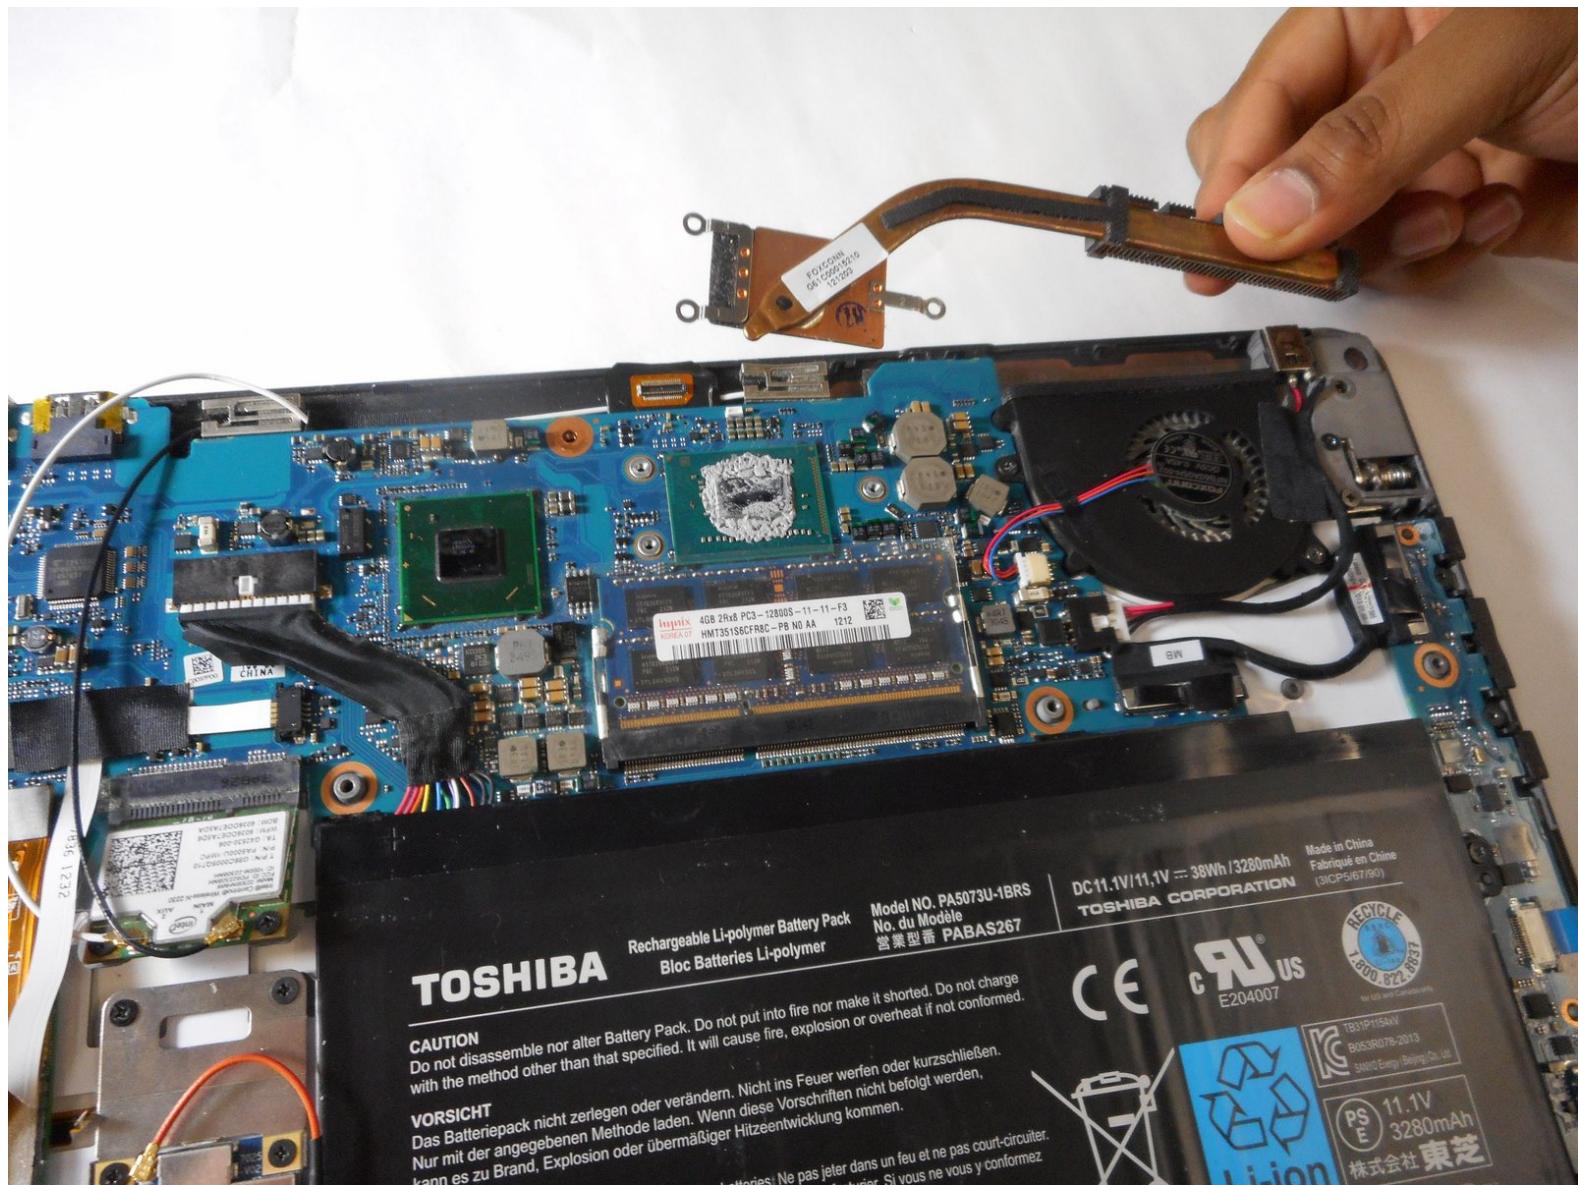


INTRODUCTION

In this guide you will learn how to remove the heat sink of your Toshiba Satellite U925T-S2120. If your heat sink is clogged or broken, you may need to replace it. Before beginning this guide you should have all required tools that are listed.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — Heat Sink

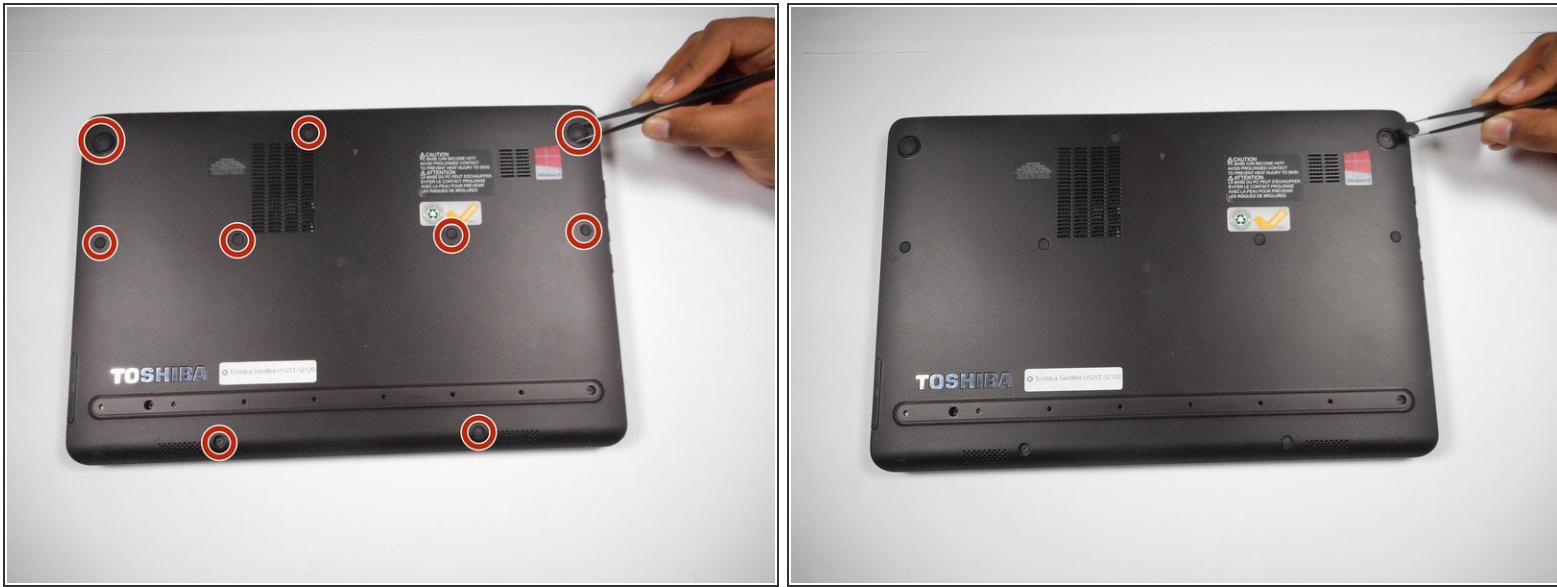

- Use tweezers to remove the nine rubber grip pads on the back panel of the laptop.

Step 2

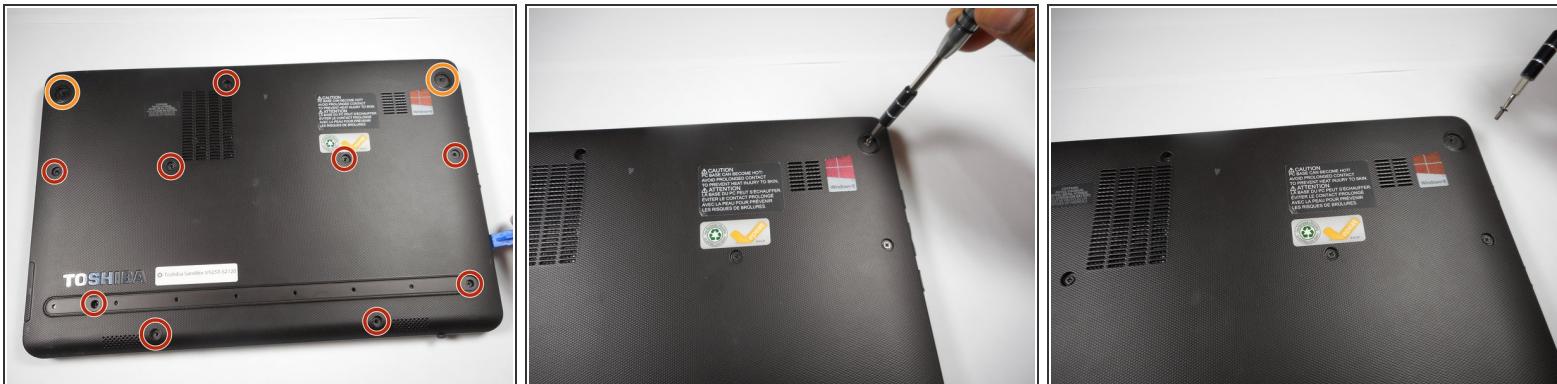

- Unscrew the nine 5.8 mm screws using a PH1 screwdriver.
- Unscrew the two 6.8 mm screws. Set all screws aside.

Step 3




- Remove the back panel by inserting the plastic opening tool into the seam of the laptop and pushing the opening tool downwards.

Step 4



- Unscrew the three 3.4 mm screws using a PH1 screwdriver.

Step 5

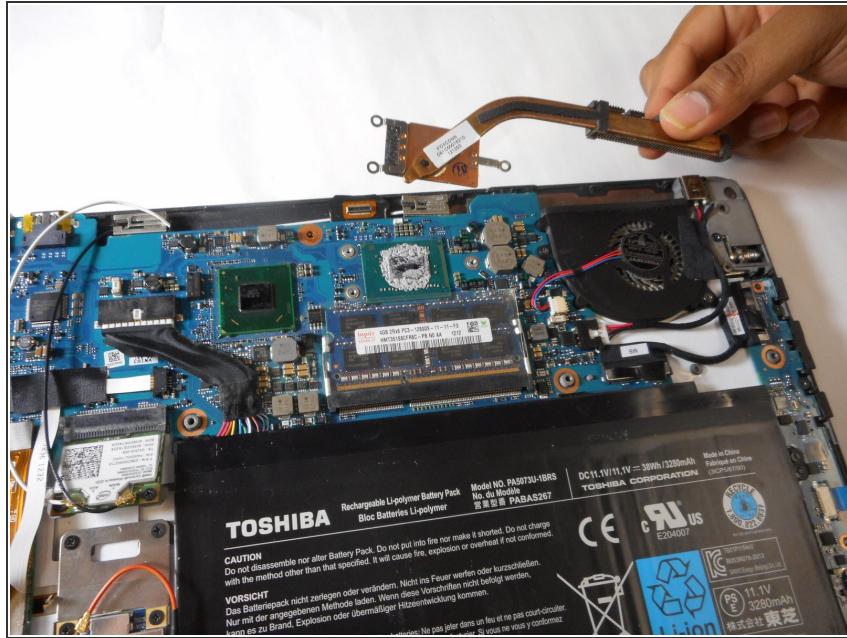

- Gently pinch the heat sink with fingers to lift and remove it.

To reassemble your device, follow these instructions in reverse order.