



Toshiba Satellite U925T-S2120 RAM Replacement

Use this guide to replace the RAM of your Toshiba Satellite U925T-S2120.

Written By: Andrew Honderich




INTRODUCTION

In this guide you will learn how to remove the RAM of your Toshiba Satellite U925T-S2120. If your RAM is broken, you may need to replace it. Before beginning this guide you should have all required tools that are listed.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — RAM

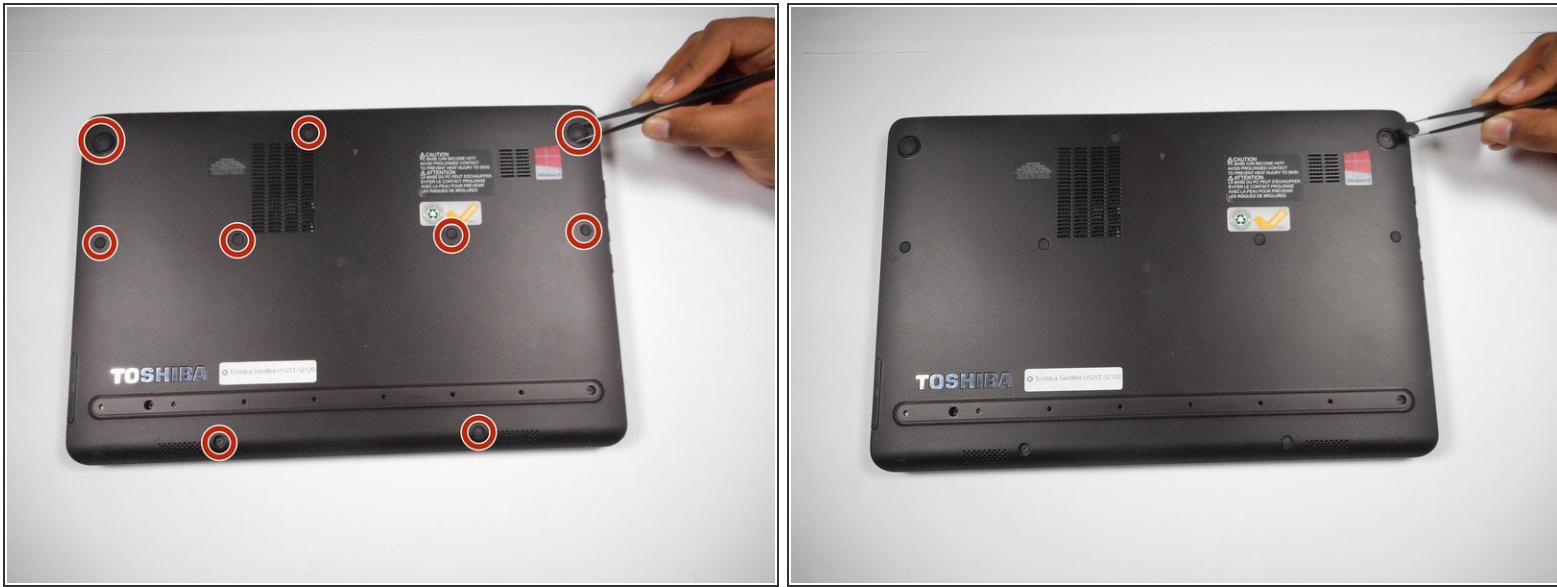

- Remove the 9 rubber gripper pads on the back panel of the laptop using tweezers.

Step 2

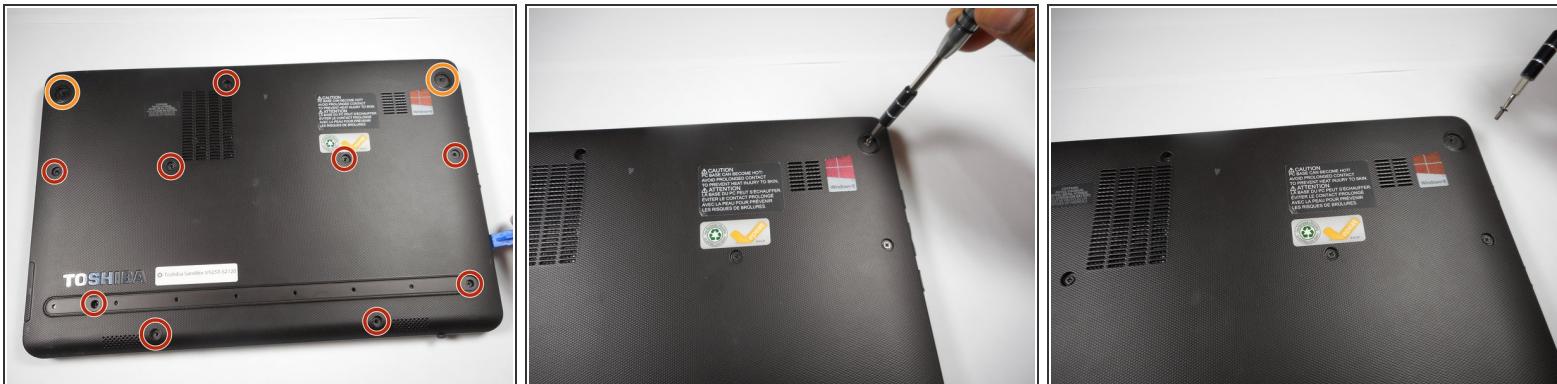



- Unscrew nine 5.8 mm screws by turning a PH1 screwdriver clockwise after inserting it into the screw.
- Unscrew two 6.8 mm screws by turning a PH1 screwdriver clockwise after inserting it into the screw.

Step 3



- Take off the back panel open by sticking the plastic opening tool into the seam of the laptop, and pushing the opening tool downwards.

Step 4

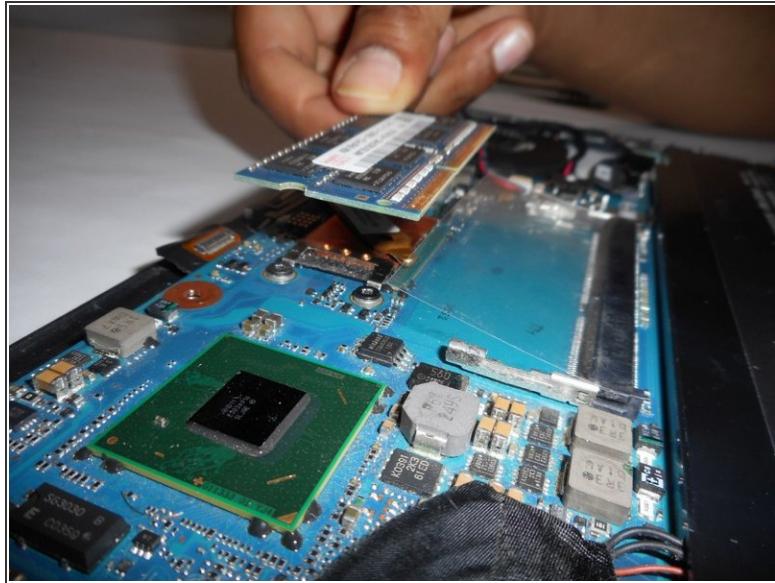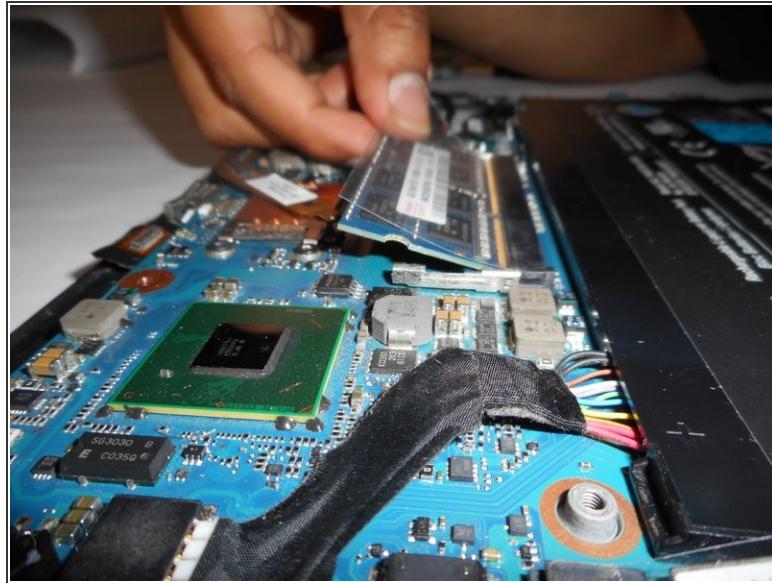

- Gently pinch the RAM with your thumb and pointer finger.
- Pull the RAM out of the logic board with gentle force.

 Try to keep the RAM parallel as you pull it out, so that the RAM does not chip.

To reassemble your device, follow these instructions in reverse order.