




Toshiba Satellite e205 Wireless Card Replacement

Written By: Tyler

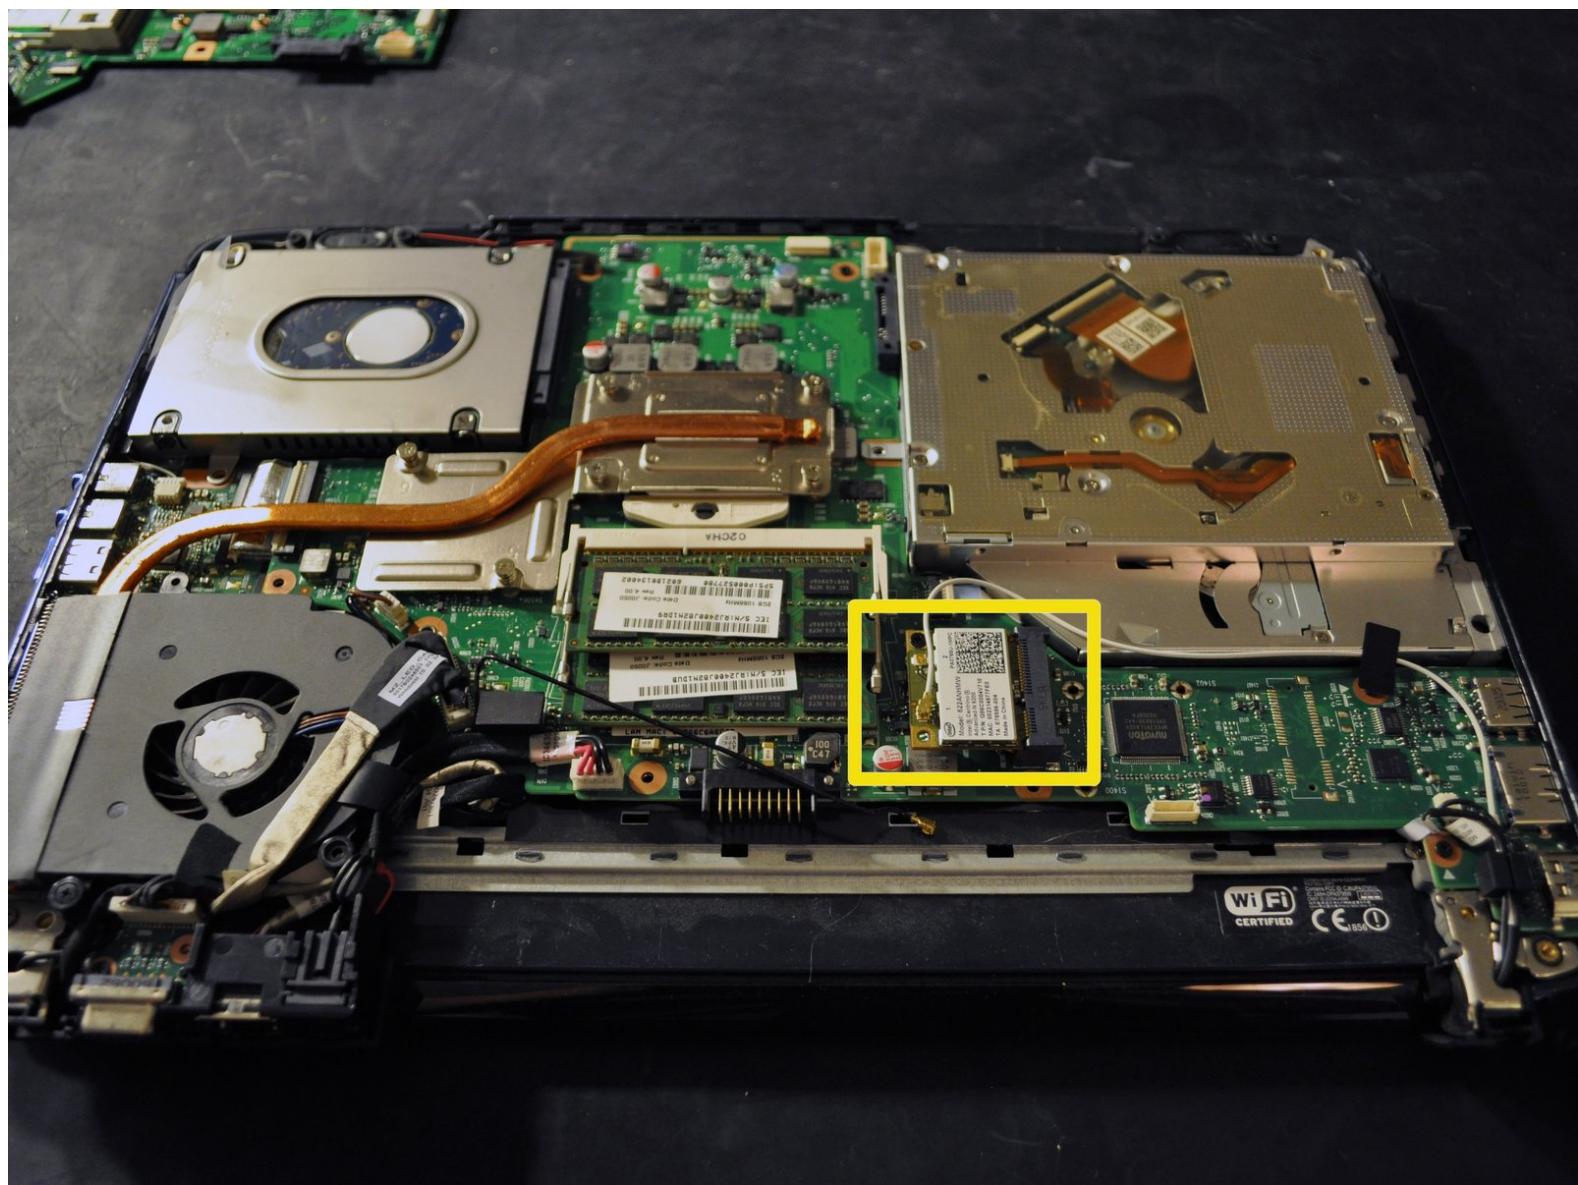

 **TOOLS:**


- **Phillips #0 Screwdriver** (1)
- **Spudger** (1)

Step 1 — Battery




- With the battery away from you, slide the locking clips out.
- (i)* The left clip stays, the right clip is spring loaded.
- Slide the battery away from you.

Step 2 — Keyboard

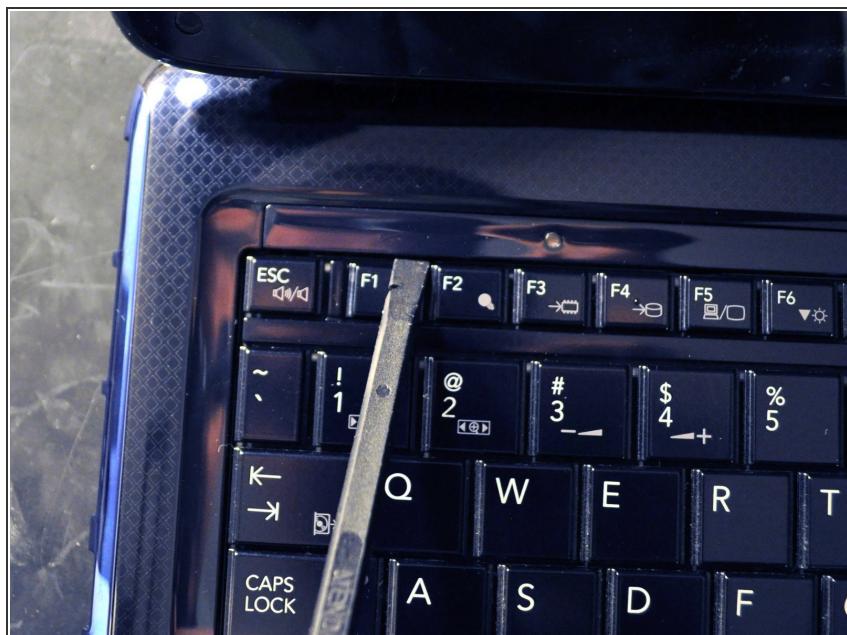


- Use a spudger to carefully pry up the keyboard screw cover.

Step 3

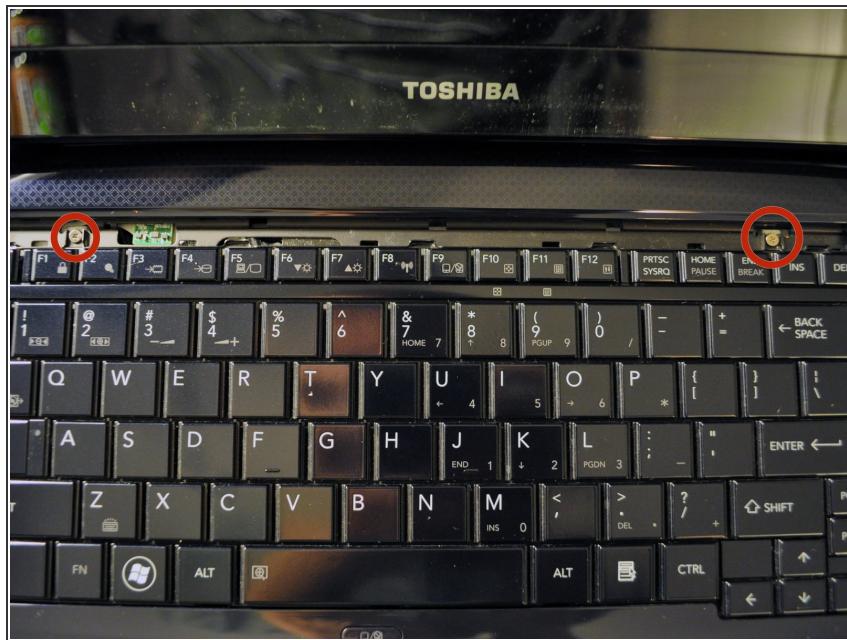


- Remove the two screws securing the keyboard to the chassis.

Step 4

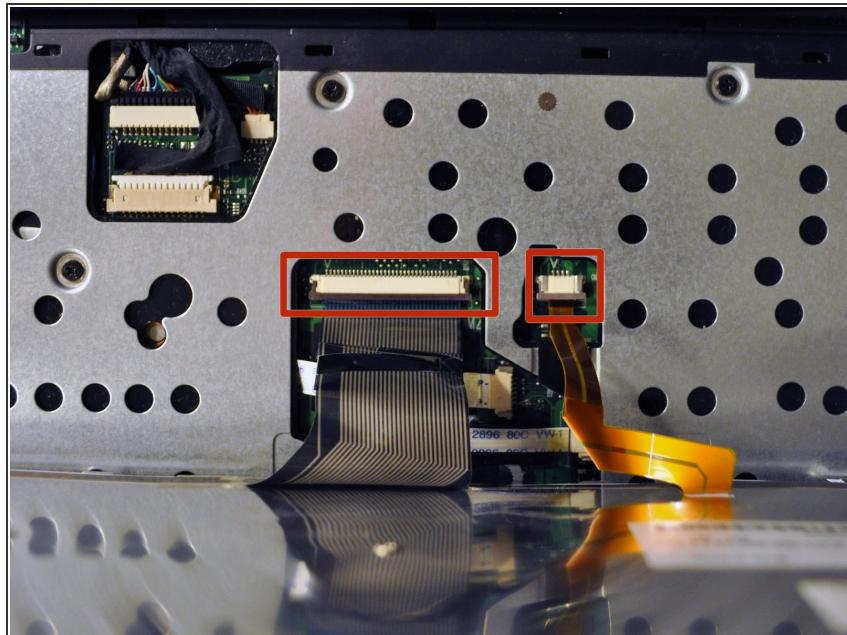


- Carefully tilt the keyboard towards you and release the ribbon cables.
- Use a spudger if needed to release the latch. The latch slides out.
- The keyboard is now free and can be set aside.

Step 5 — Bottom Cover

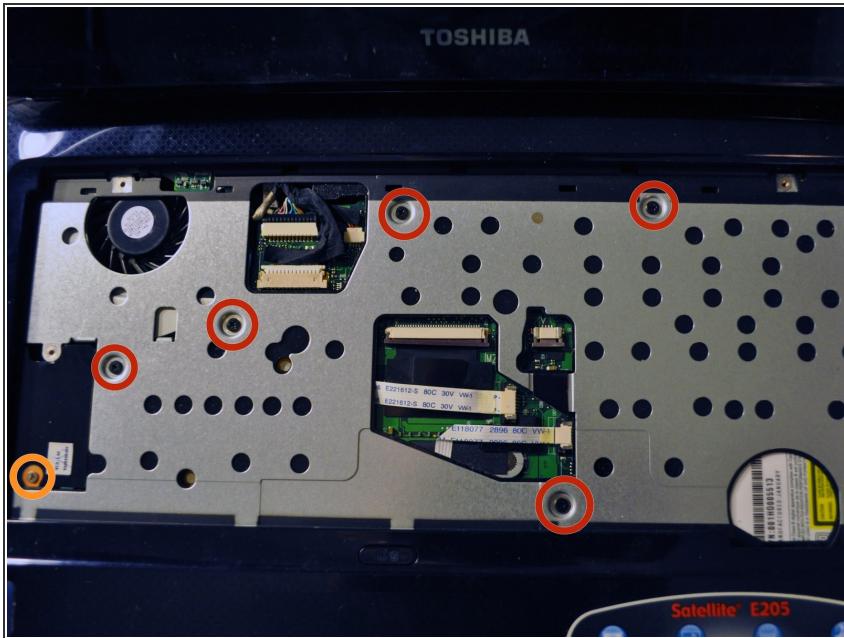

- Remove the five black screws
- Remove the one silver screw


Step 6

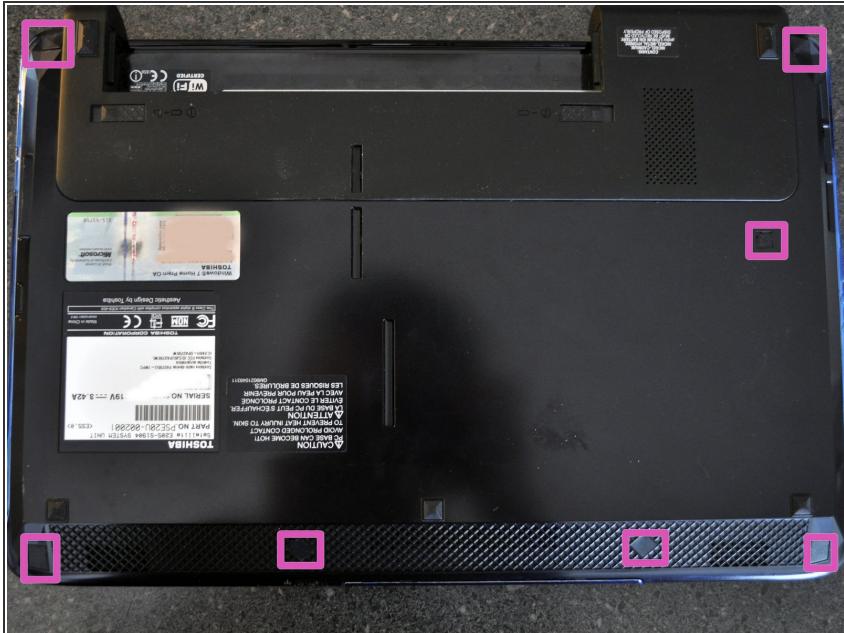

- Flip the laptop over so the bottom is facing up.
- Using a spudger, remove the seven rubber inserts.


(i) The feet only go in one location on the bottom of the laptop, so save yourself some time and track where they go.

Step 7

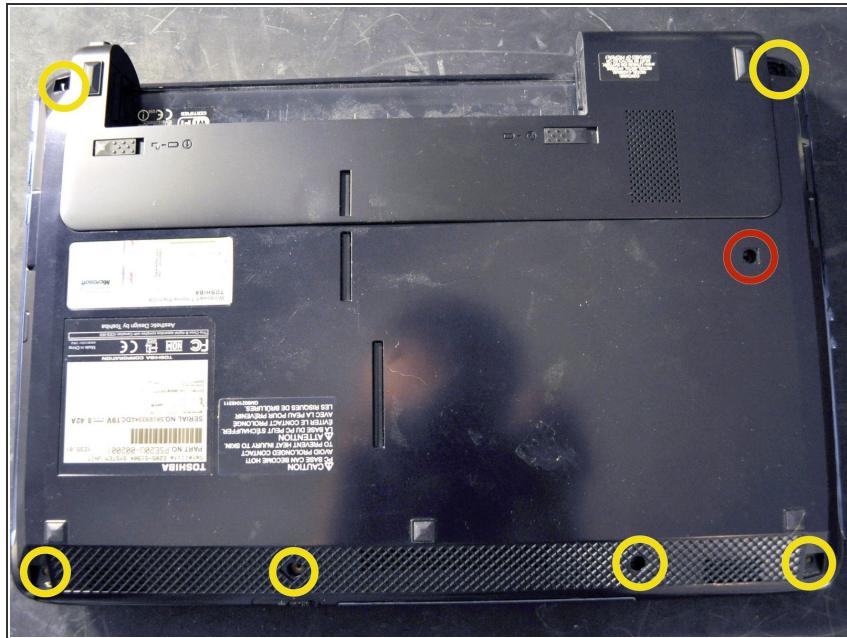


- Remove the six silver screws.
- Remove the one black screw.

Step 8

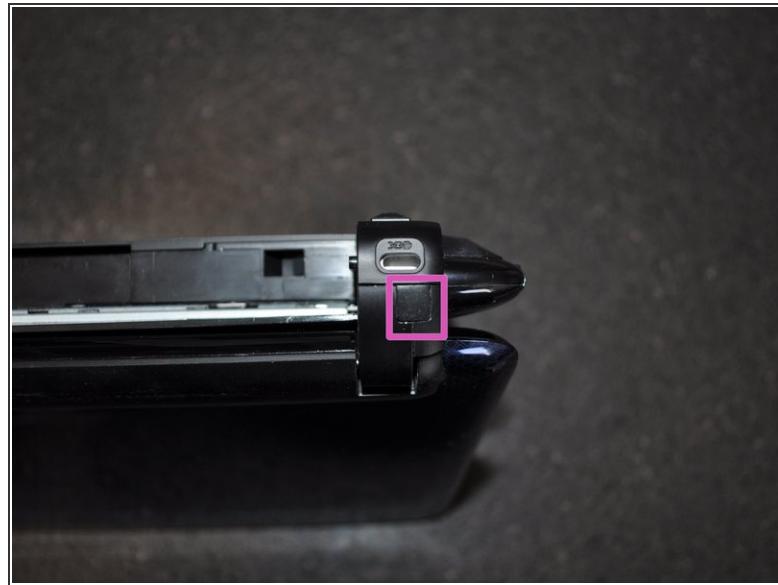

- Stand the laptop up on end.
- Remove the two rubber inserts from the back of the laptop. One insert is on each side of the laptop.

Step 9

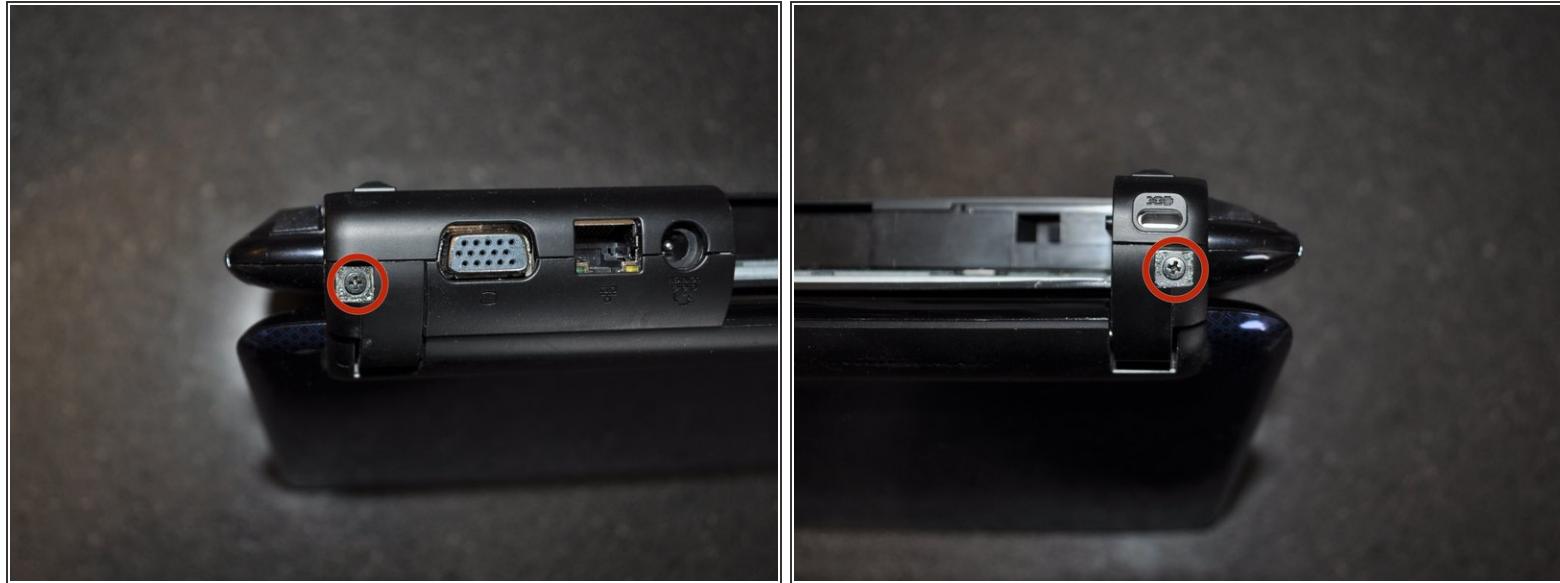

- Remove the two screws.


Step 10



- Carefully work a spudger in the crack at the back of the laptop and separate the small rubberized


section from the bottom of the laptop.

Step 11

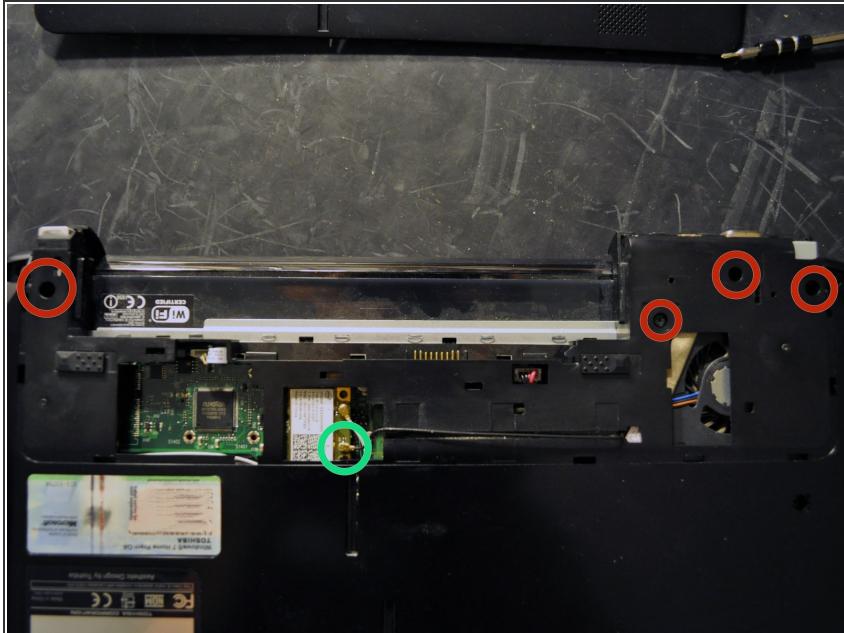

- Remove the four screws.
- Disconnect the black wireless antenna lead.

Step 12


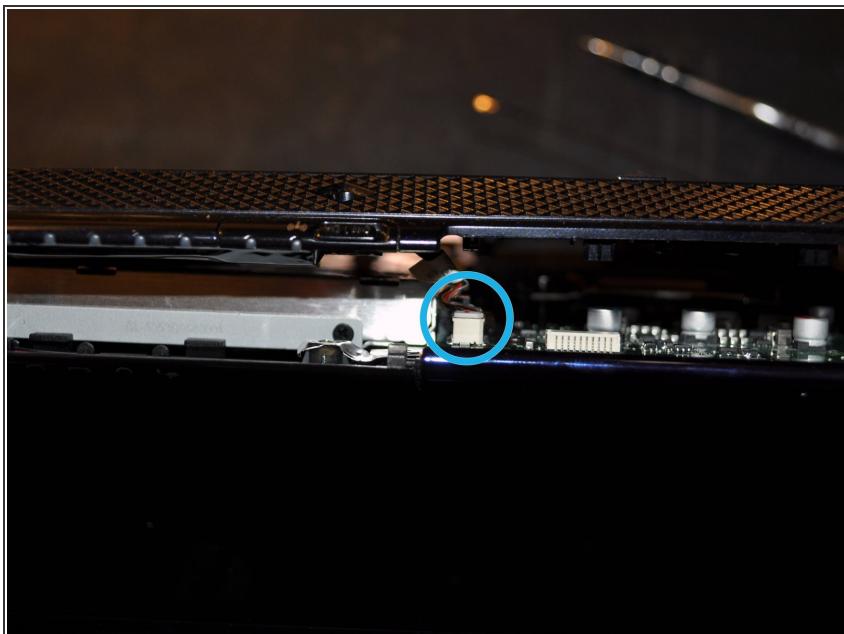


- The bottom of the laptop is now ready to lift off.
- Carefully work a spudger around the seam of the laptop separating the bottom from the rest of the laptop.

⚠ There is a data connection at the front of the laptop that needs to be disconnected.

- Use a spudger to carefully disconnect the wire from the motherboard. Once this is free the bottom will come off.

Step 13 — Wireless Card

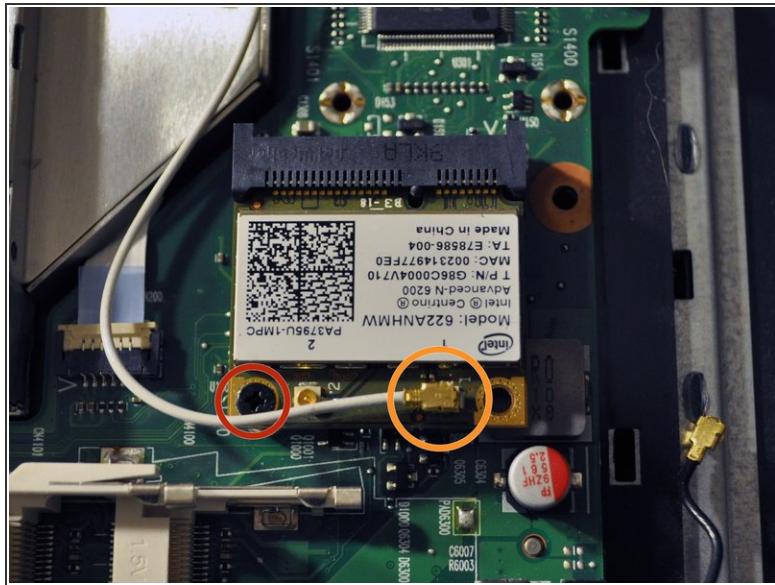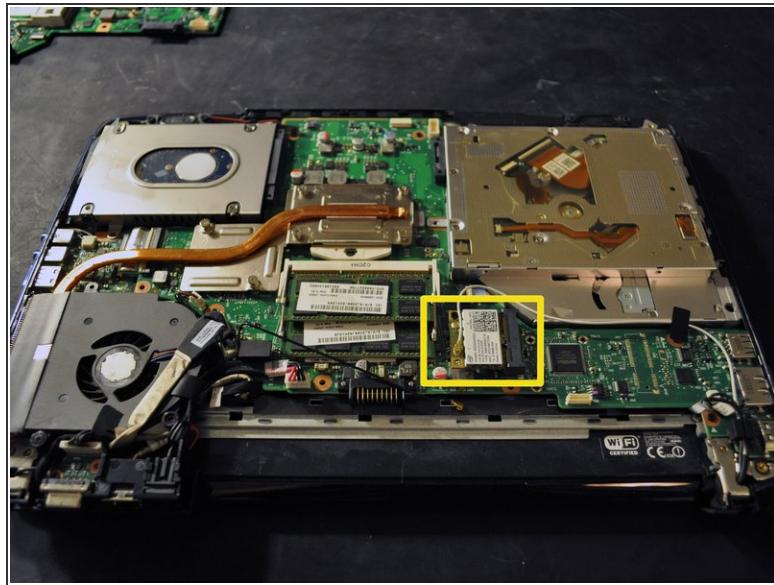

- Locate the wireless card.
- Remove the white antenna lead.
- Remove the single screw.
- Lift the card up from the edge with the screw, and pull out.

To reassemble your device, follow these instructions in reverse order.