



# TotalPond Pond Pump Throttling Valve Replacement

This guide includes steps explaining how to replace throttling valve.

Written By: Nicole Santana



## INTRODUCTION

The throttling valve adjusts the rate at which water flows out of the pump. To replace this part, follow the steps below.

## Step 1 — Unscrew throttling valve



- Turn the throttling valve counterclockwise until it is fully detached from the pump.

To reassemble your device, follow these instructions in reverse order.