


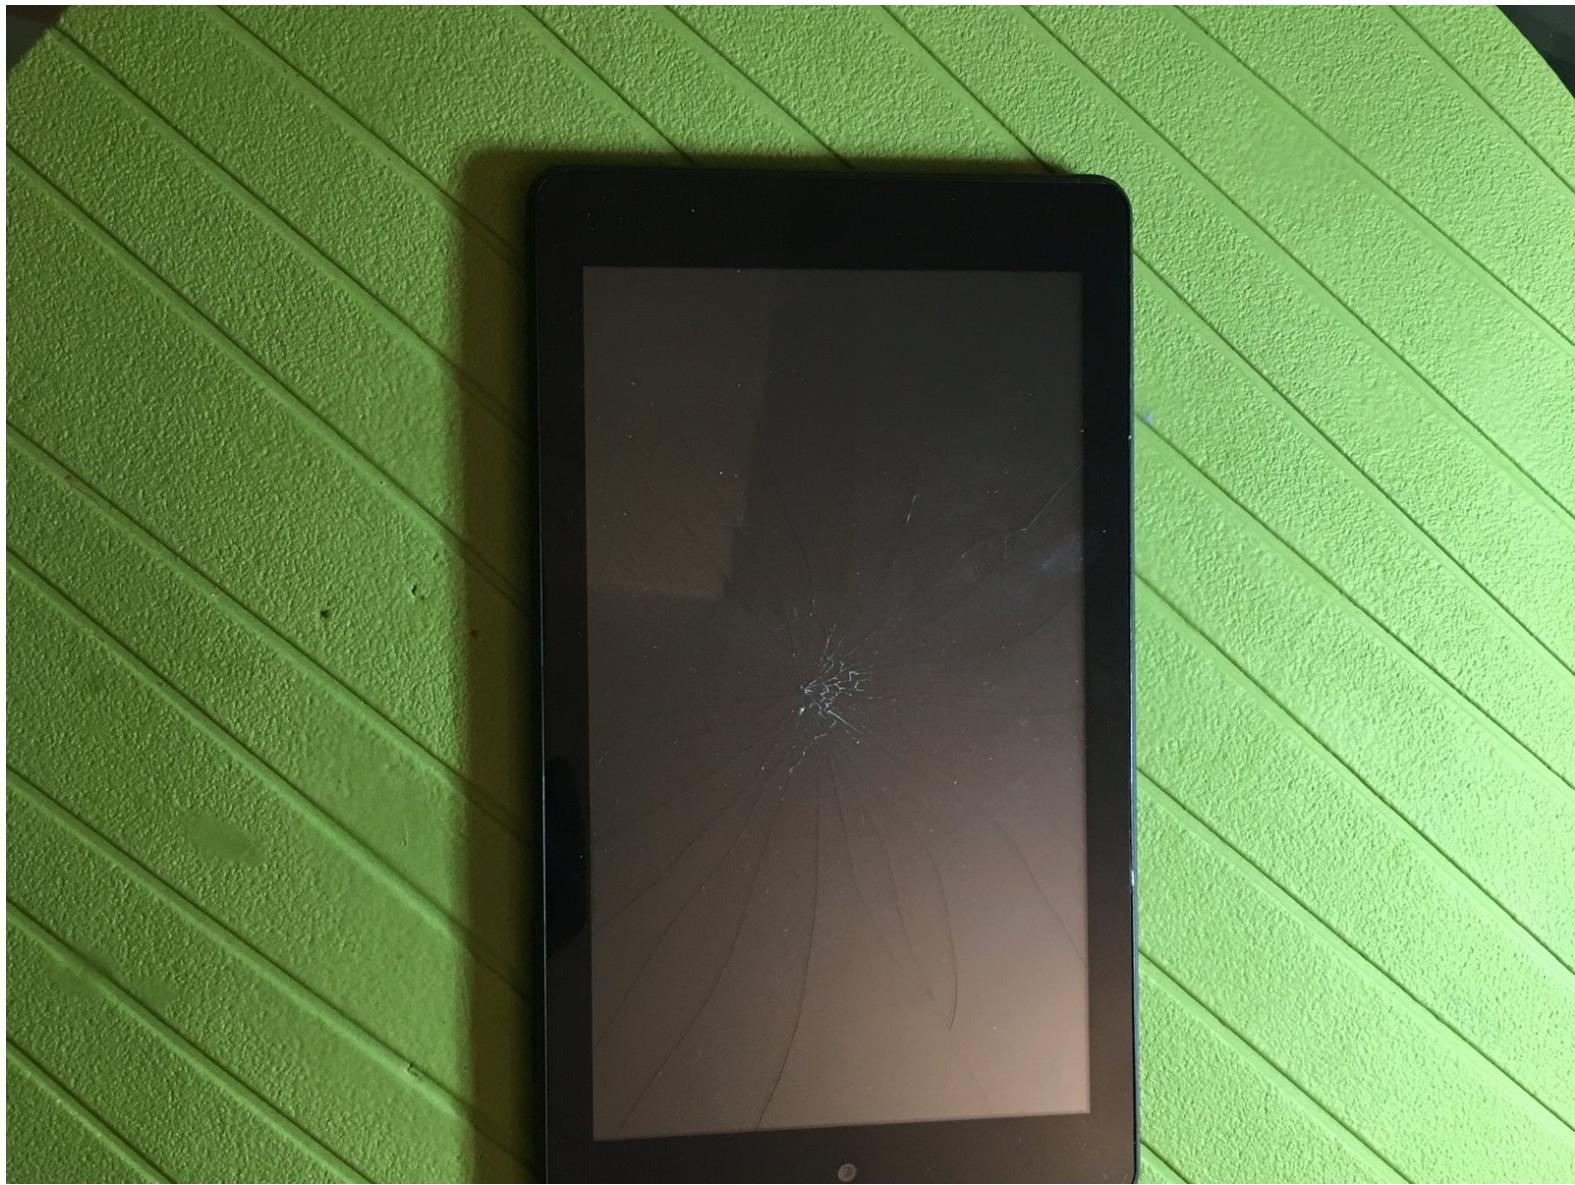

# Trekstore Surftab Breeze 7.0 Plus Touchscreen Glass Replacement

Follow the guide to replace the glass or other parts of the device once it's open


Written By: Smilzo



## INTRODUCTION

Follow the guide to replace the glass or other parts of the device once it's open

## Step 1 — Touchscreen Glass

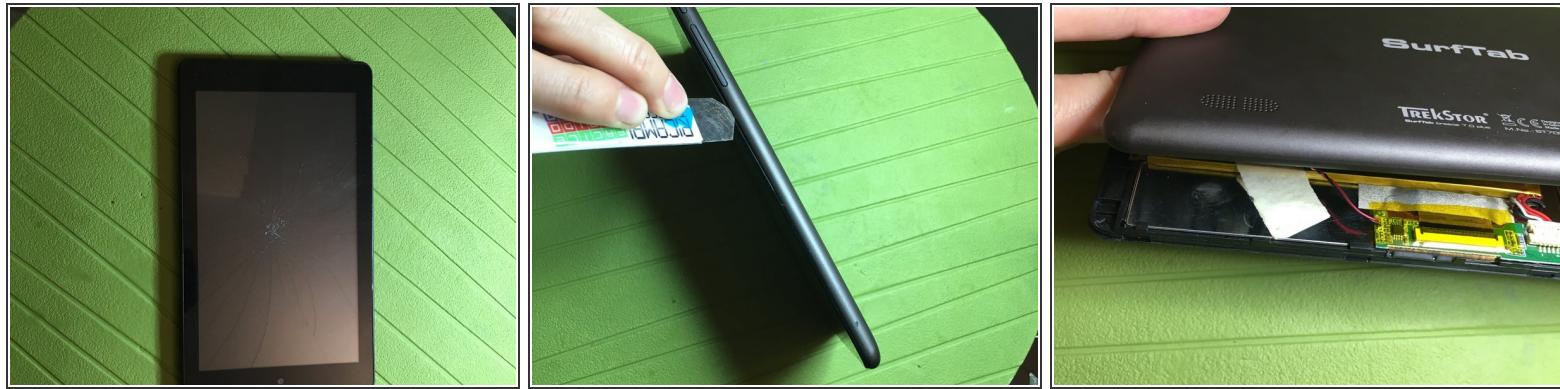


- With a thin opening tool remove the back cover prying between screen and cover on all the device edges.

## Step 2



- Be careful not to damage the speaker screwed to the back cover with two screws.
- Unscrew the screws and remove the speaker from the back cover.

## Step 3

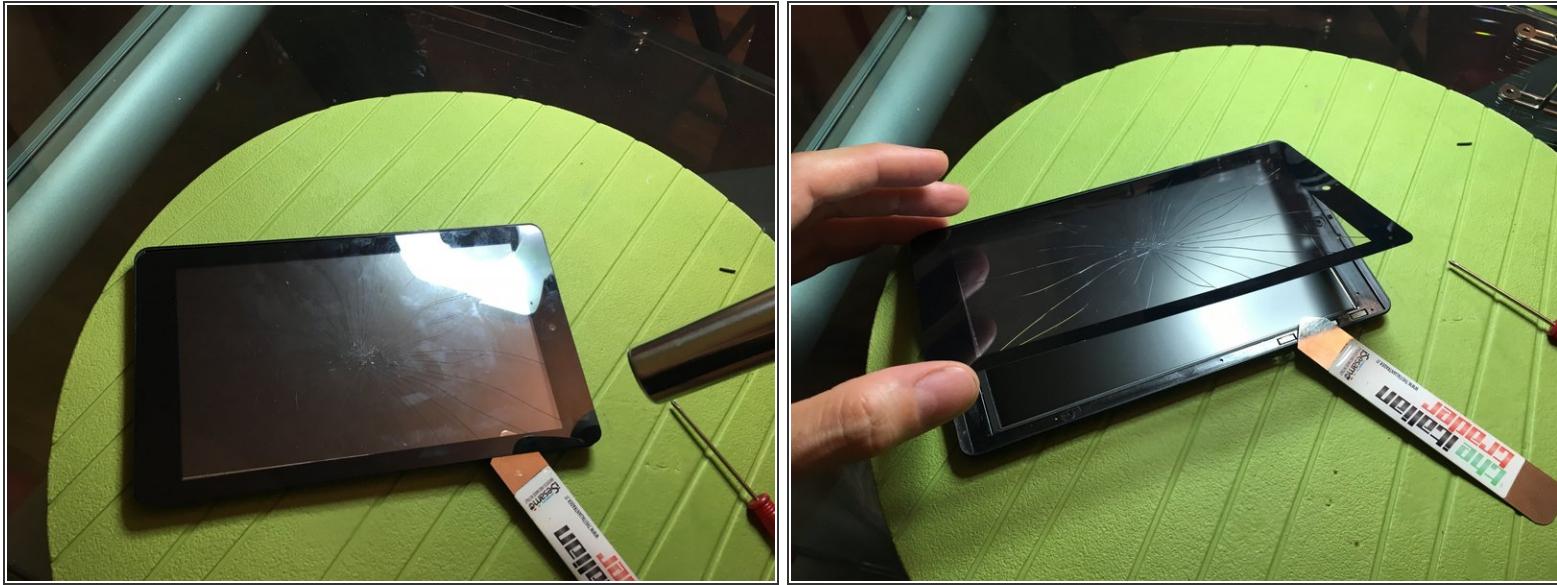


- With the help of a hairdryer or any heat source, heat the corners of the glass and with a thin tool remove the adhesive and subsequently the glass

## Step 4



- Lift up the protective film of the touchscreen connector.
- Push the two black clips to disconnect the ribbon cable connector.

## Step 5

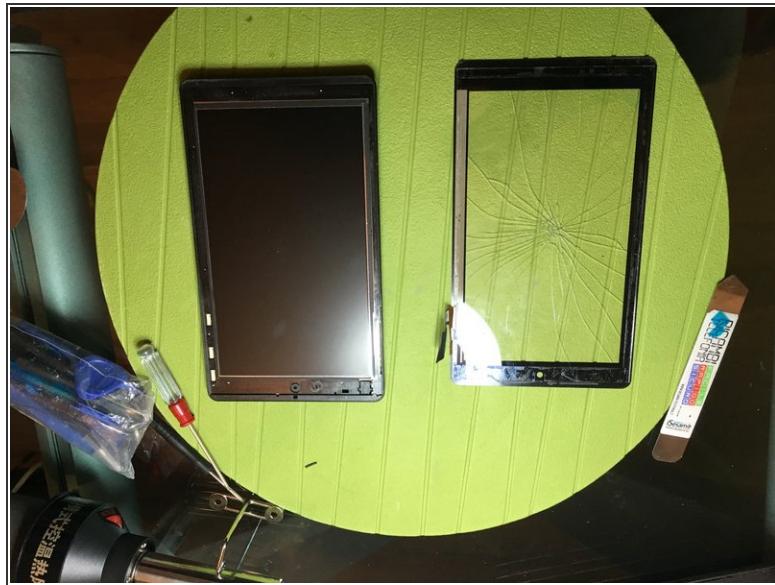

- Replace the old touchscreen with a new one

To reassemble the device, follow these instructions in reverse order.