



Uniden Dect 6.0 Display Replacement

A guide on how to remove a Uniden Dect 6.0 home phone main screen.

Written By: Megan Lawrence



INTRODUCTION

The main screen is the screen that displays incoming calls, and functions on the Uniden sect 6.0 home phone. This guide will show how to replace the screen.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Battery




- Locate the battery compartment on the back of the Uniden home phone.
- Place your finger on the groove, and pull directly back on the cover to gain access to the battery.

Step 2




- Remove the white battery pack from the battery compartment.

Step 3

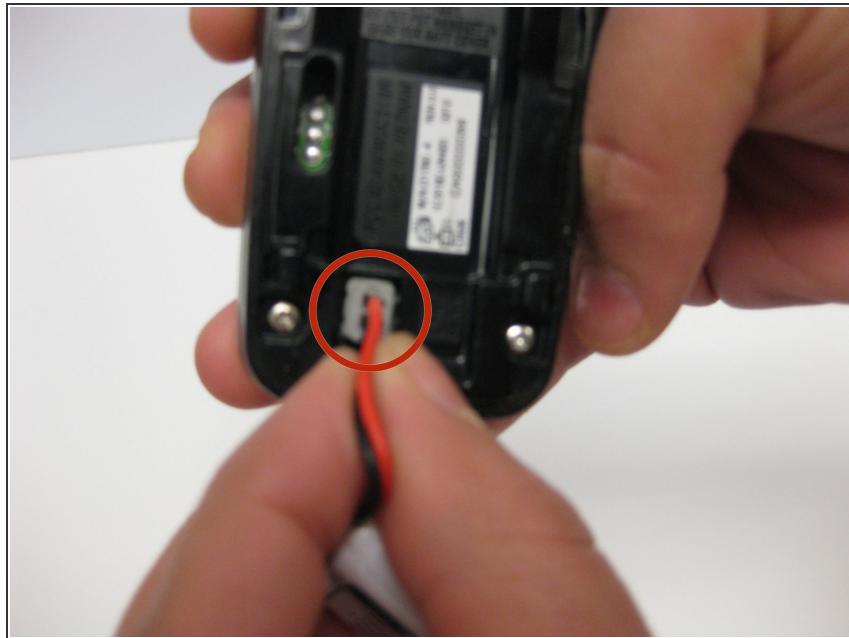


- Remove the red and black wired port from the plug directly under the battery compartment.

Step 4 — Keyboard

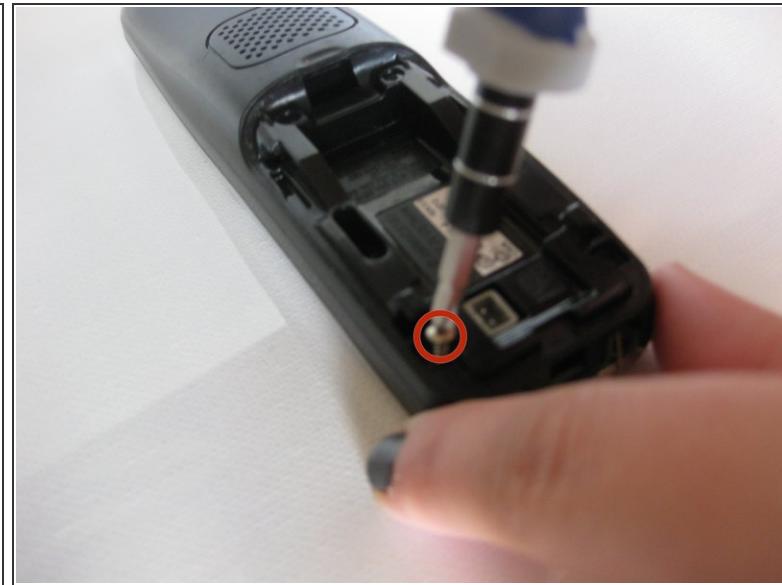

- Using a Phillips #1 screw driver, remove the two .9 mm screws on the back of the device on both sides of the battery pack.


Step 5

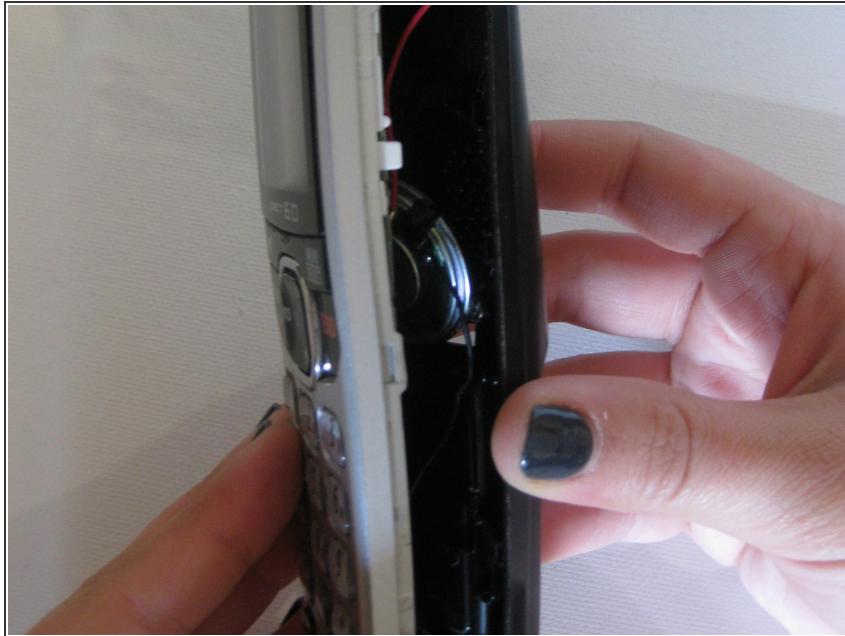

- Gently lift and separate the front of the housing from the back housing using your fingers.


 While separating the back housing from the front, be sure to open from sides as pictured and not from the top or bottom of the phone. Doing so could damage inside cables or motherboard piece!

Step 6

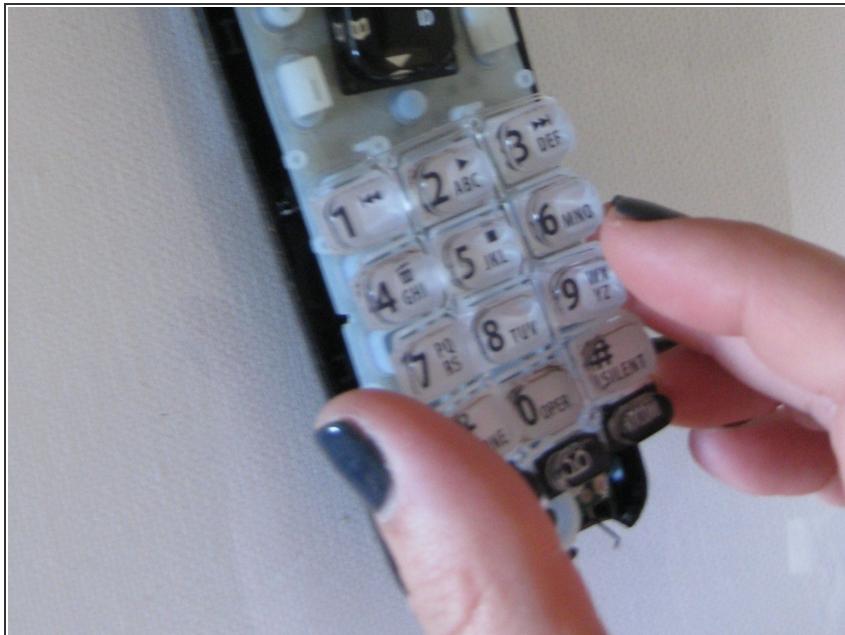

- Gently remove the loose keyboard from the lined gel casing located under the front housing of the front of the phone.

Step 7 — Gel Casing

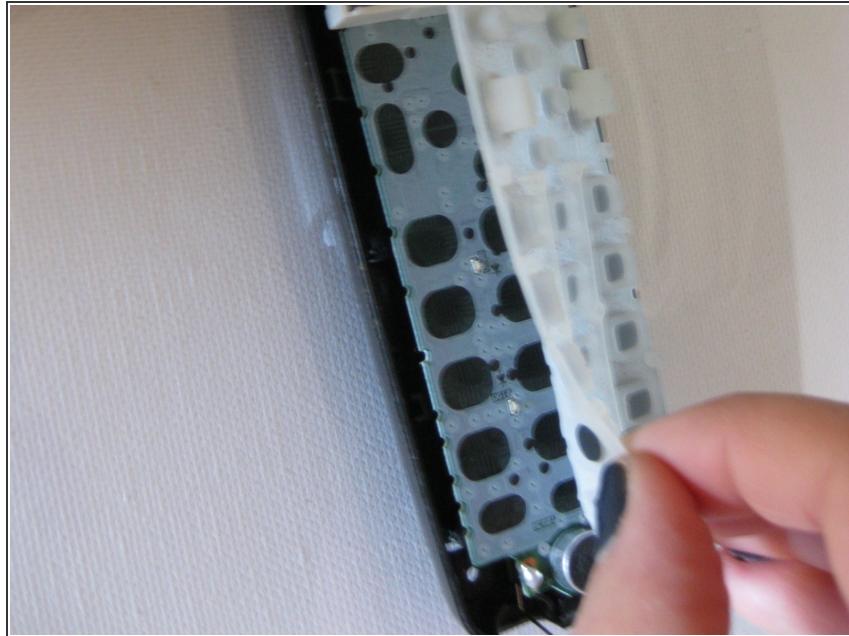

- In order to better access the screen, remove the loose gel casing that sits under the keyboard.

Step 8



- Lift out attached motherboard piece and turn it side ways so the side of the phone can be accessed.

 This piece is very fragile and wires that connect the motherboard to the phone can be easily severed.

Step 9



- Gently use tweezers to access beneath the screen from the motherboard panel, and lift straight up.

To reassemble your device, follow these instructions in reverse order.