



Uniden Dect 6.0 Keyboard Replacement

This guide will help the owner of a Uniden Dect 6.0 Home phone replace the faulty keyboard!

Written By: Megan Lawrence



INTRODUCTION

This guide entails and explains the simple steps to replace the non-functioning keyboard on the Uniden Dect 6.0 home phone.

TOOLS:

- Phillips #1 Screwdriver (1)

Step 1 — Battery



- Locate the battery compartment on the back of the Uniden home phone.
- Place your finger on the groove, and pull directly back on the cover to gain access to the battery.

Step 2




- Remove the white battery pack from the battery compartment.

Step 3




- Remove the red and black wired port from the plug directly under the battery compartment.

Step 4 — Keyboard

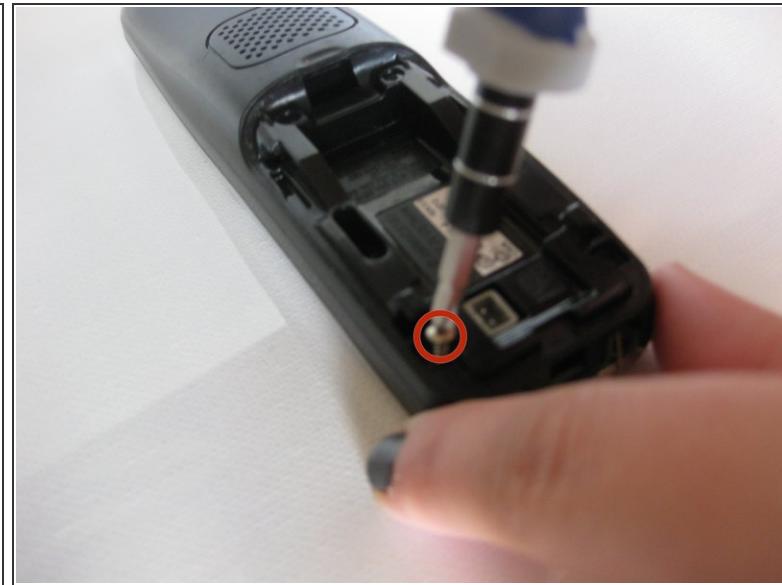

- Using a Phillips #1 screw driver, remove the two .9 mm screws on the back of the device on both sides of the battery pack.


Step 5

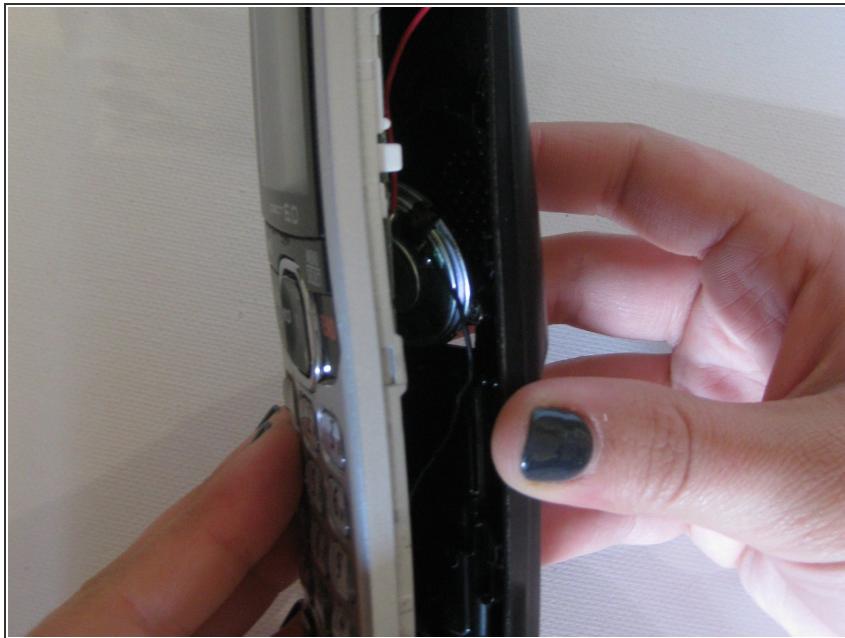

- Gently lift and separate the front of the housing from the back housing using your fingers.

 While separating the back housing from the front, be sure to open from sides as pictured and not from the top or bottom of the phone. Doing so could damage inside cables or motherboard piece!

Step 6

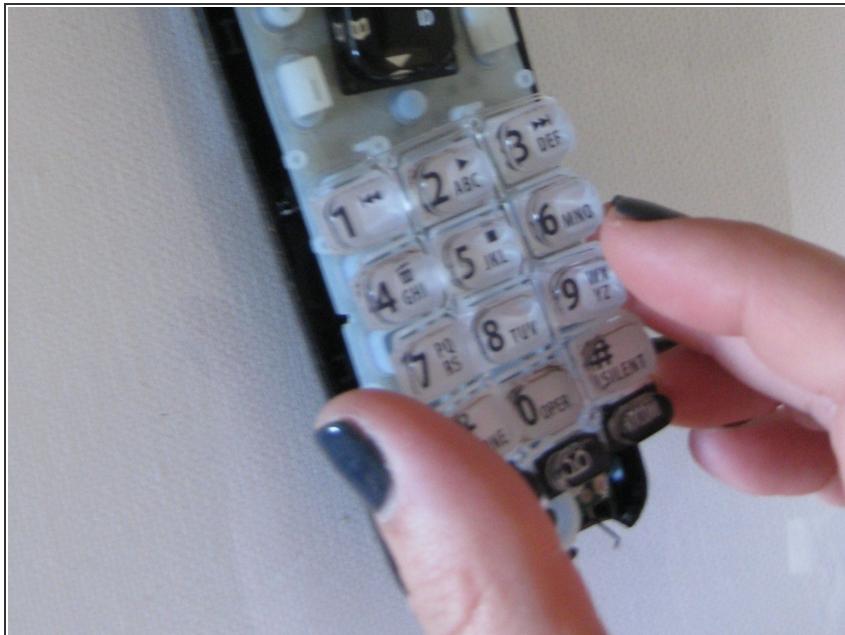

- Gently remove the loose keyboard from the lined gel casing located under the front housing of the front of the phone.

To reassemble your device, follow these instructions in reverse order.