



# Unnecto Drone M Digitizer Replacement

Touch screens are important in smartphones and can develop wear and scratches that lead to unresponsive inputs. This guide shows how to repair it.

Written By: John Stavrianopoulos



 **TOOLS:**

- [Tweezers \(1\)](#)
- [iFixit Plastic Opening Tool \(1\)](#)
- [Phillips PH000 Screwdriver \(1\)](#)

## Step 1 — Unnecto Drone M Disassembly



- Place the phone facedown on a cleared work area
- Remove the back case by applying moderate force to the indentation in the lower left corner of the case.

## Step 2



- Grip the top right corner of the battery.
- Remove the battery by pulling it outwards.

## Step 3



- Remove the four screws on the back of the phone using a Philips 000 screwdriver

## Step 4




- Separate the frame evenly using a plastic opening tool.
- Be careful, as the frame is thin and can break easily.

## Step 5



- Use a Phillips #000 screwdriver to remove the four screws that secure the motherboard.

## Step 6

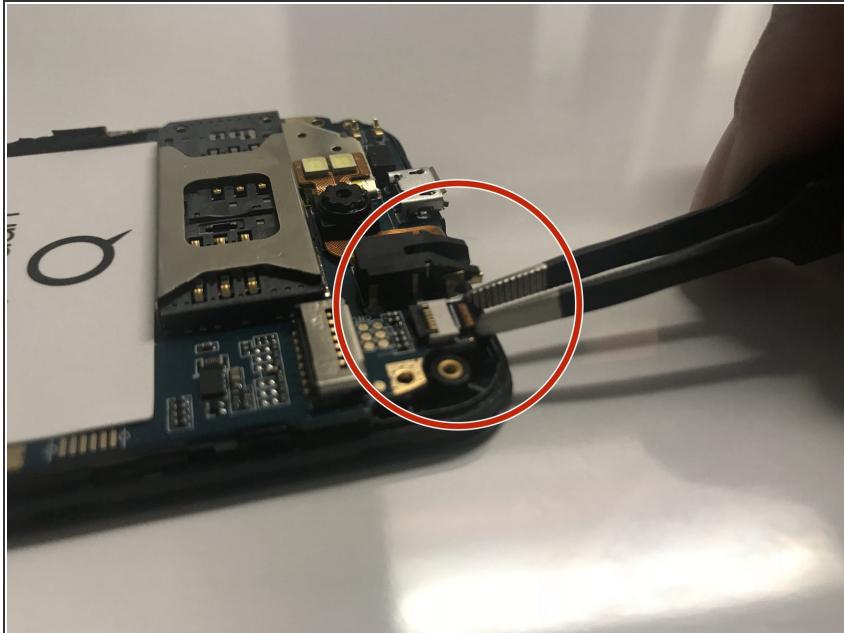

- Disconnect the ribbon cable from the motherboard using rounded, spade-tipped tweezers.

## Step 7



- Peel the white circuit on left side of the frame by inserting fine-tipped tweezers between it and the frame.
- *(i)* The white circuit is flimsy and securely glued to the frame.

## Step 8



- Set aside the circuit board from the screen protector.

## Step 9 — Digitizer



- Replace the old plastic screen with the new one.
- Reassemble the phone by following the steps in reverse order.

To reassemble your device, follow these instructions in reverse order.