


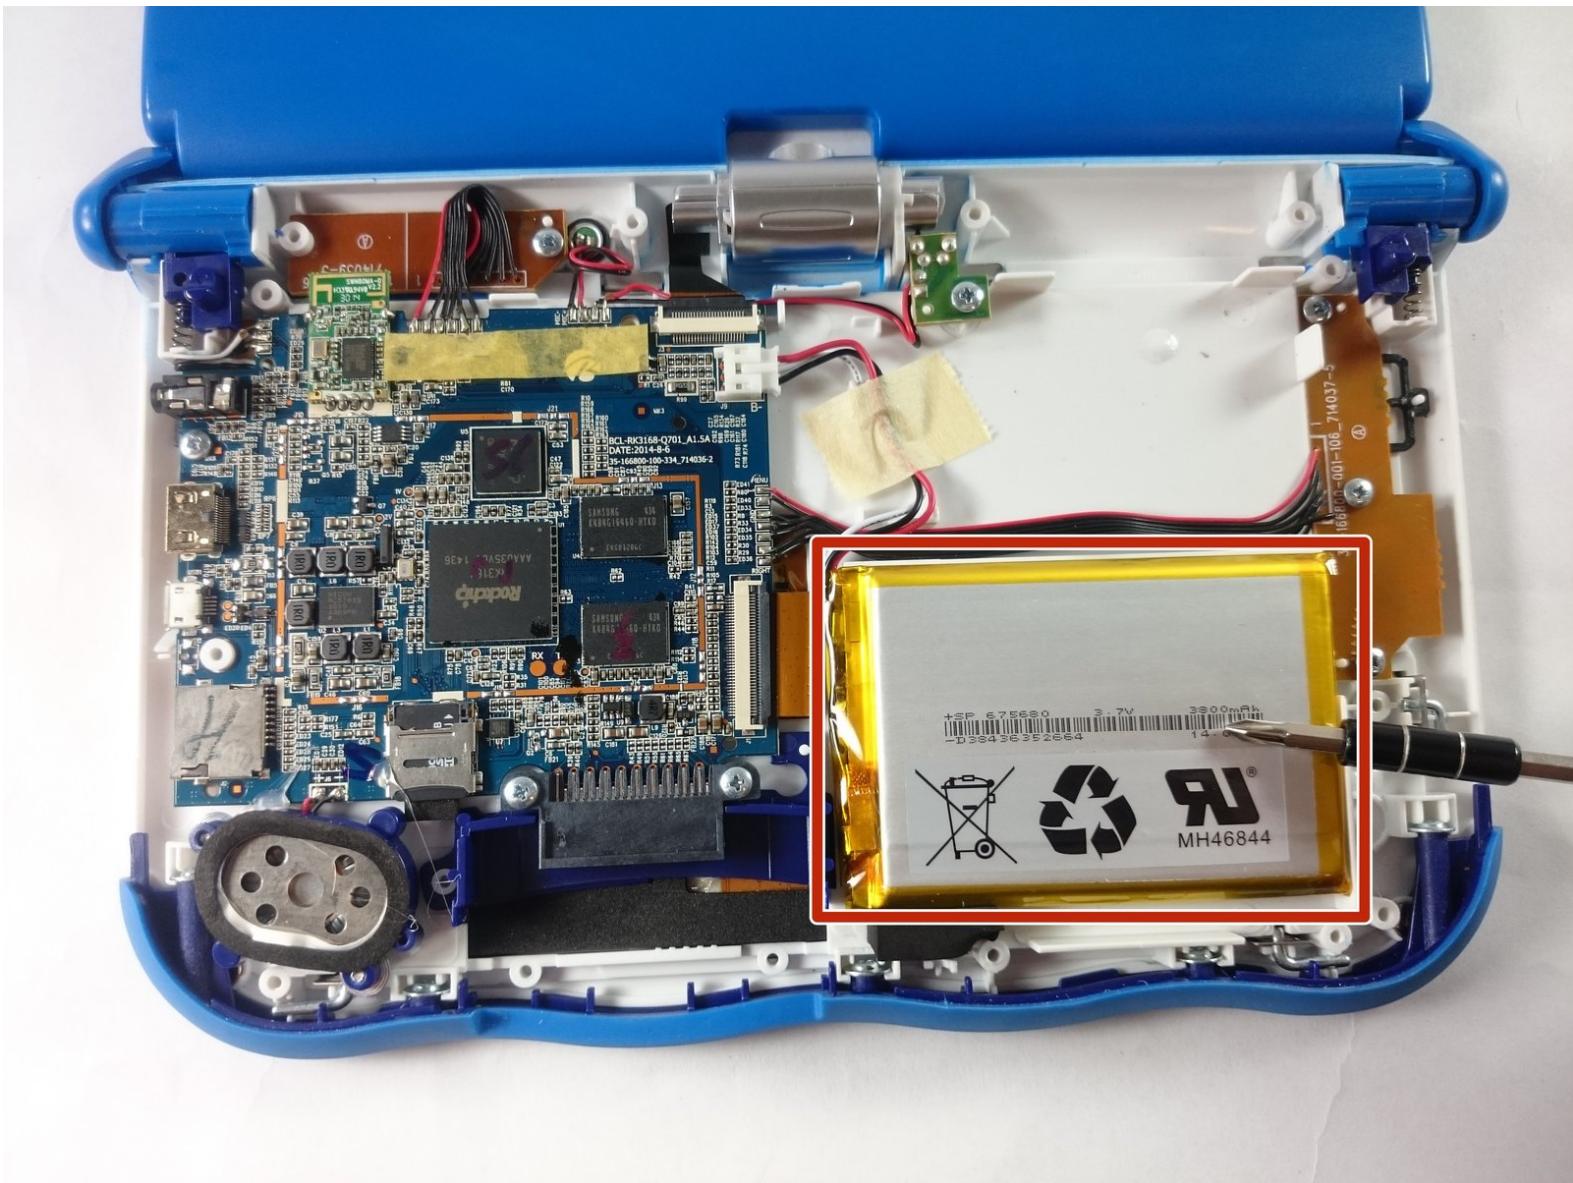

VTech InnoTab Max Battery Replacement

This guide will show how to replace the battery in the VTech InnoTab Max.

Written By: Jacob Schioppo



INTRODUCTION

This guide will show how to replace the battery in the VTech InnoTab Max.

TOOLS:

- [J1 Screwdriver Bit \(1\)](#)
- [iFixit Precision Bit Driver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Magnetic Project Mat \(1\)](#)

Step 1 — Cover



- Remove all screw caps from the back panel using a metal spudger.

Step 2



- Next remove all of the now uncovered screws.

(i) If there is a cartridge in the device make sure to remove it.

Step 3




- Now that all of the screws have been removed, pry the back cover off using a plastic opening tool.

Step 4



- Here you can see the back cover has been fully removed and you can now access the front cover.
- To remove the front cover, remove the springs holding the pictured brackets in place, then pull it away.

Step 5 — Battery

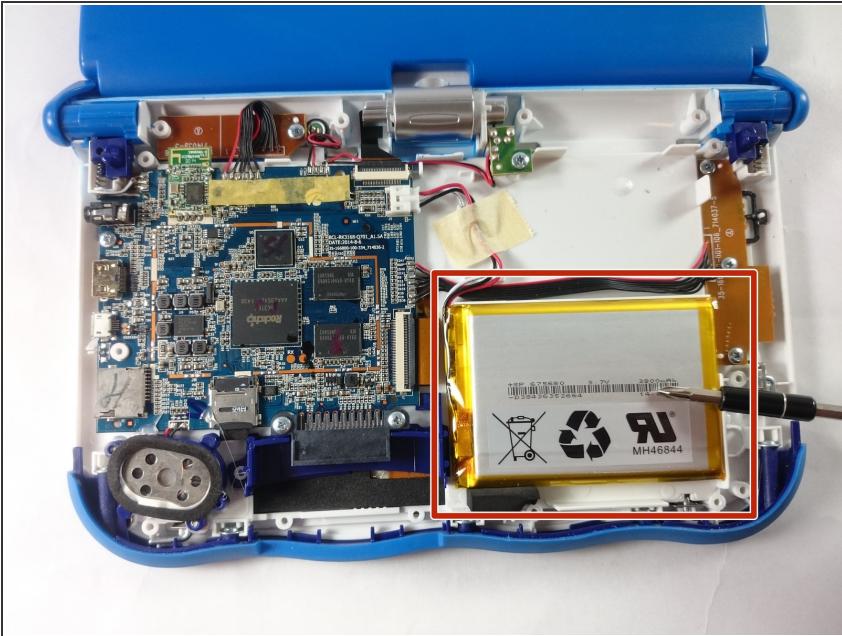


- Once the back cover is removed the battery will be located in the bottom right as you can see in the image to the right.

Step 6




- Remove the tape holding down the wires, and carefully pry the battery off of the base of the device.
- (i)* Pry carefully to avoid damaging the battery. The battery may start to bend slightly, this is normal and not a cause for concern.
- !** It is best to use a plastic card or nylon spudger to remove the battery. Metal tools can puncture a battery, potentially causing a fire.

Step 7

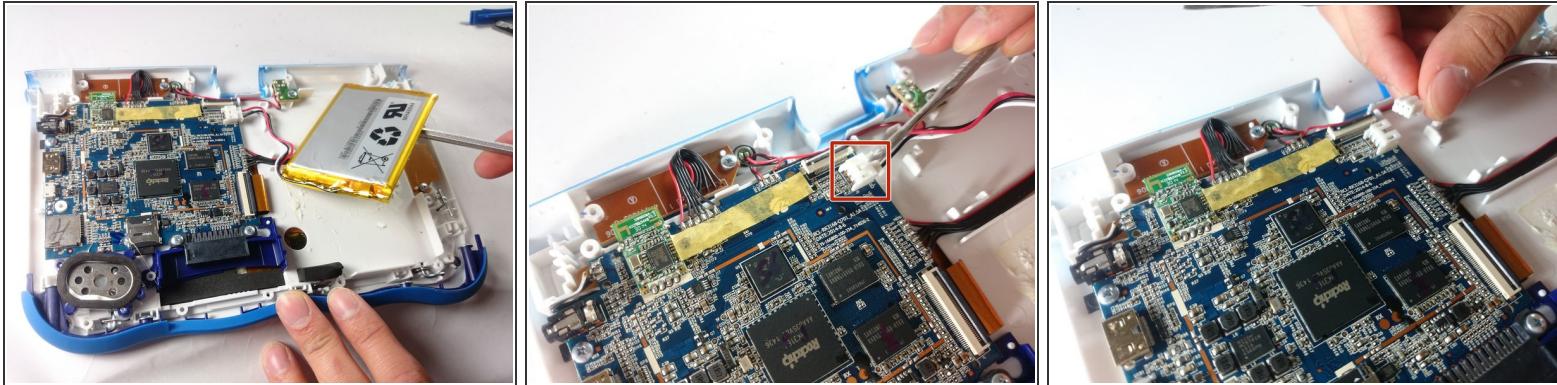

- Now that the battery is free to be moved, unplug the wire connecting the battery to the motherboard.

Step 8

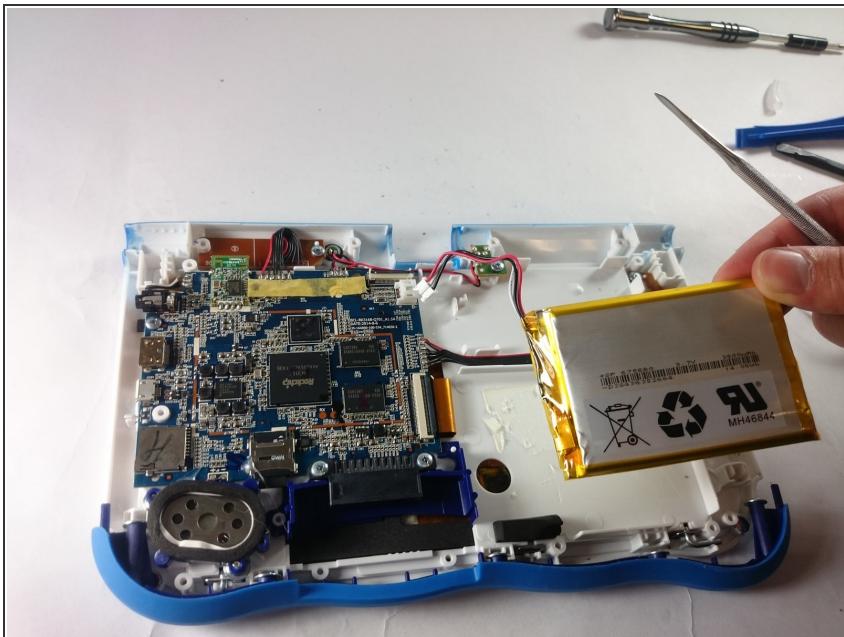

- The battery is now fully disconnected.

To reassemble your device, follow these instructions in reverse order.