



VTech Kidizoom Camera Connect Shutter Button Replacement

The picture taking button is the button on the top of the camera you must press in order to take photos. This guide will show you how to replace that button in case of failure.

Written By: Justin Sanchez



This document was generated on 2019-09-22 02:14:45 PM (MST).

INTRODUCTION

Use this guide to remove and replace the button and circuit board used for taking photos

TOOLS:

- [Soldering Iron](#) (1)
- [Metal Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Front Case



 Remove batteries and SD card before beginning disassembly!

- Locate the four plastic screw covers denoted by the markers and gently pry them up with the metal spudger.

Step 2



- Remove all four (11mm) screws with the Philips #0 screwdriver.

Step 3



- Remove the two battery cartridges located on the underside of the camera.
- Once cartridges are removed, use the metal spudger to pry open the top, bottom, and both sides of the camera.

Step 4



 Beware of the two black viewfinder lens falling out as you pry open the device!

- The device should now be open and ready for further repair and/or replacement parts.

Step 5 — Shutter Button





- Remove the purple plastic that covers the button and circuit board. It should slide right out from the slot it sits in.

Step 6

- 
- Unsolder wires connected to the right side of the circuit board. Pull the wires to the side.

Step 7

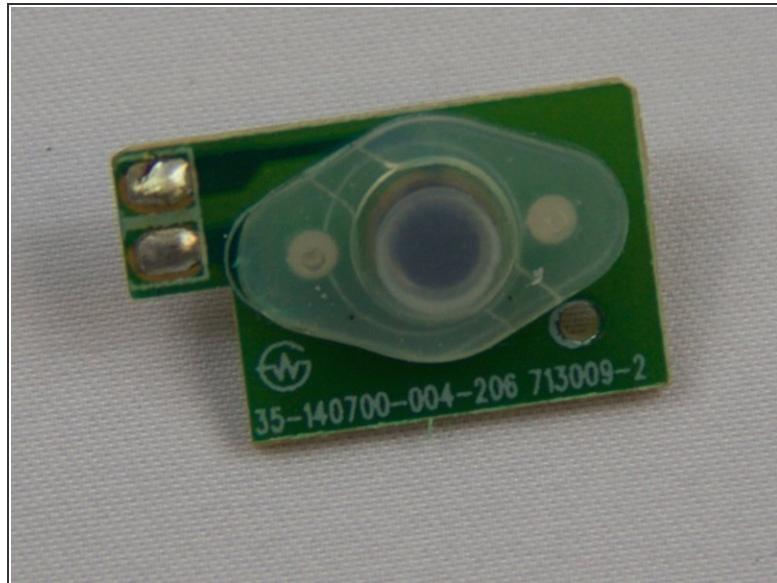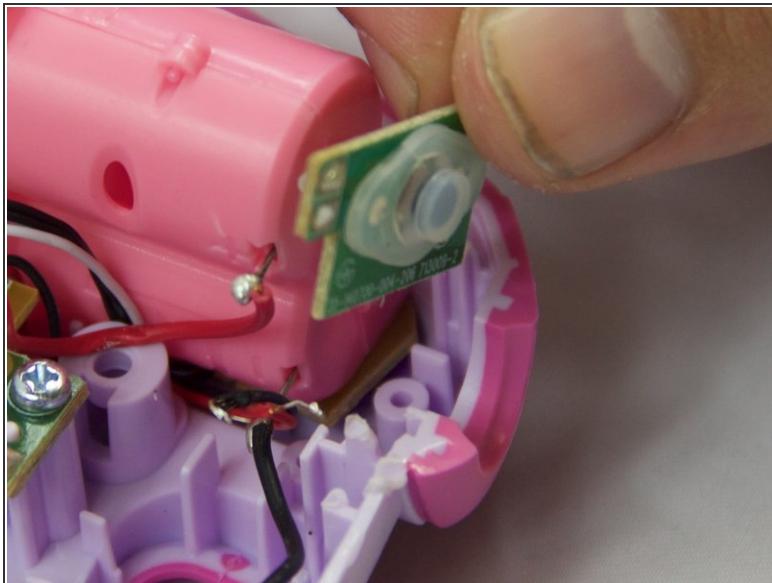

- The button/circuit board should be loose now. Gently pull out the button/circuit board to remove it from the device.

To reassemble your device, follow these instructions in reverse order.