


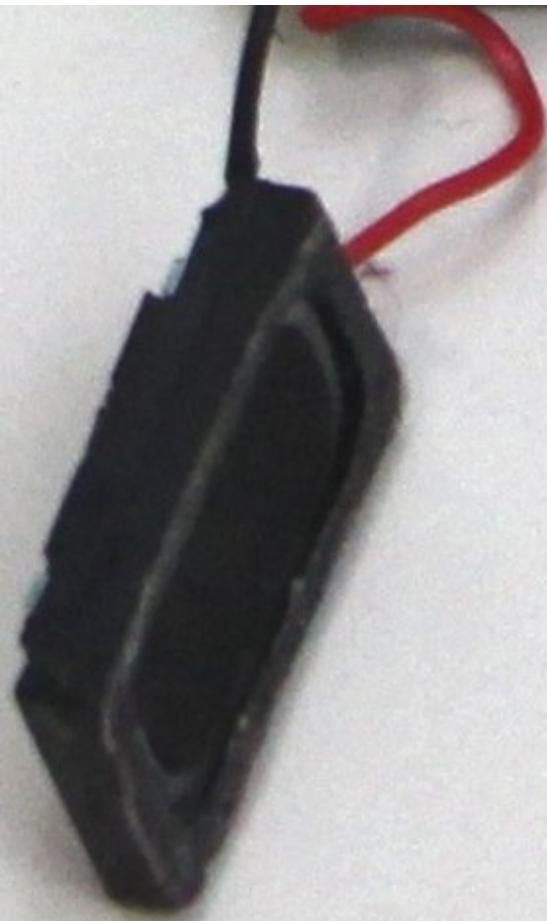

# VTech Kidizoom Smartwatch DX2 Speakers Replacement

Use this guide to replace the speaker on your VTech Kidizoom Smartwatch DX2.

Written By: Jessica Richard



## INTRODUCTION

If the speakers on your watch are not working, cracked, or damaged in anyway it will need to be replaced. The following guide will show you how.

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Solder](#) (1)
- [Soldering Iron](#) (1)

## Step 1 — Master Switch




- Begin by flipping the watch over with its back facing upwards.

## Step 2

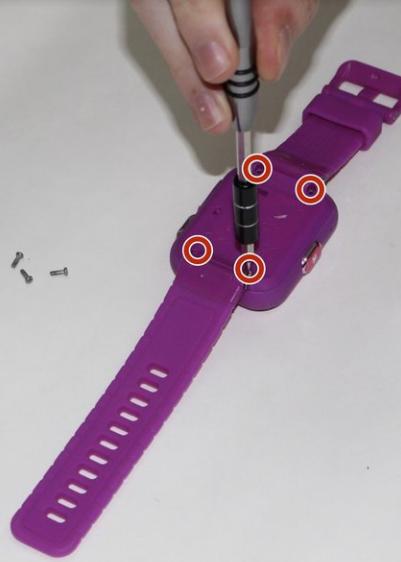


- Next, use the Phillips #00 screwdriver to unscrew the four 6.0 mm screws located in each corner of the watch to remove the backplate.

## Step 3

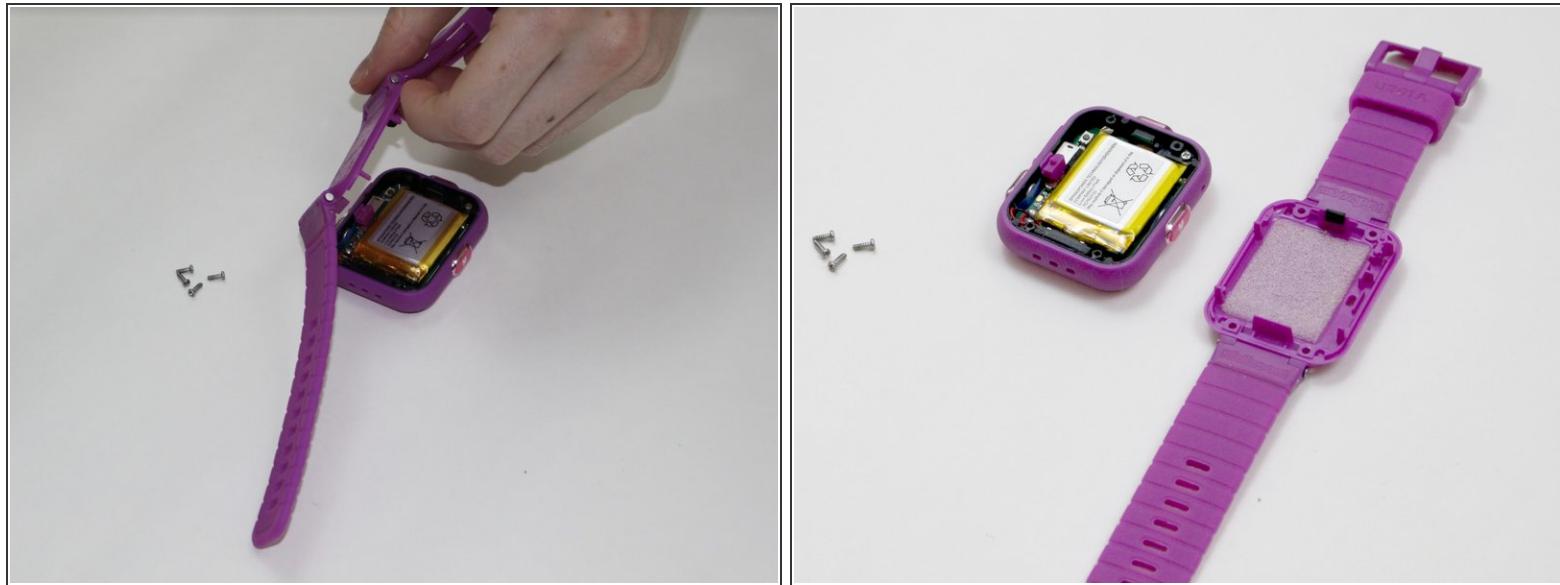

- Gently lift the backplate up to remove it.

## Step 4

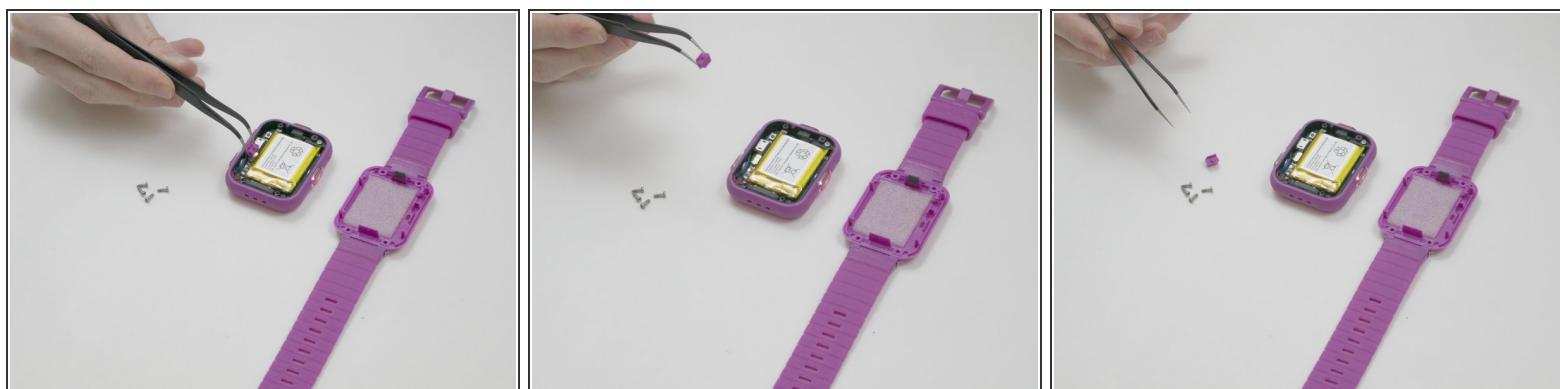

- After removing the backplate, lift the master switch up from the circuit board.

## Step 5 — Motherboard




- Using a Phillips #00 screwdriver, remove the 0.6 mm screw.

## Step 6




- Carefully remove the speaker from the case without disconnecting it from the motherboard.

## Step 7

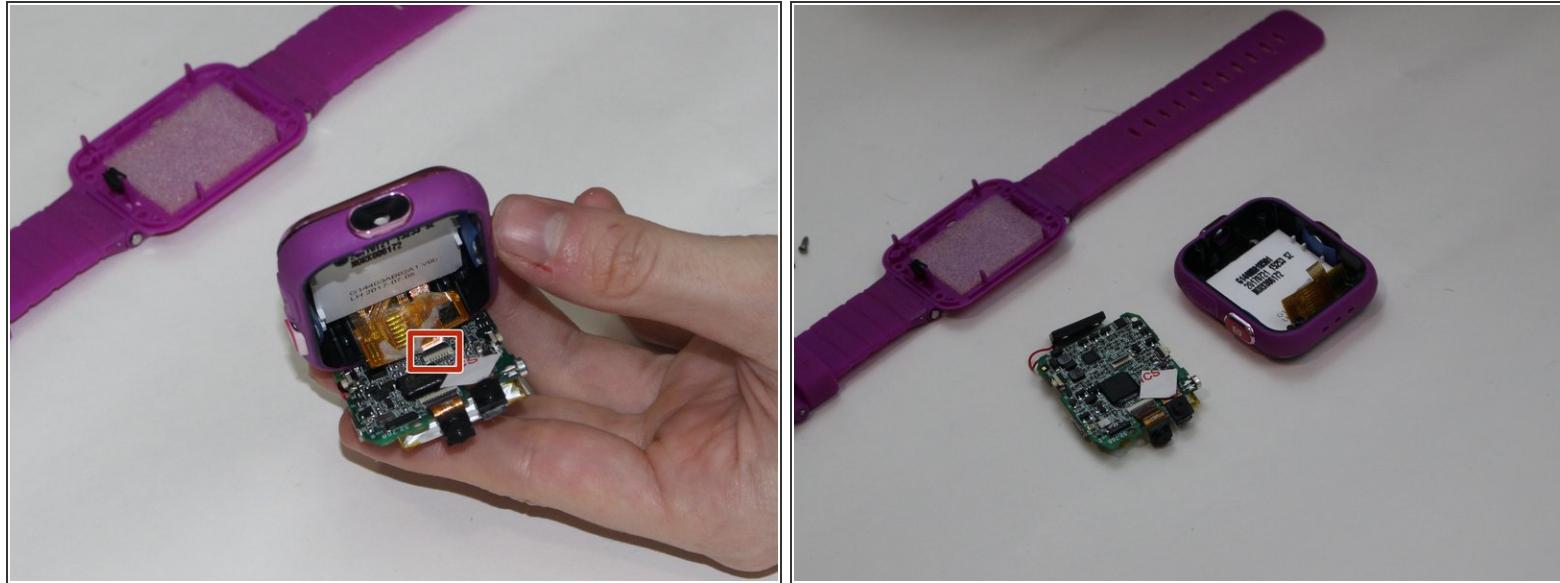

- Using the tweezers, carefully lift the bar holding the connection to the screen.
- Remove the motherboard from the device.

## Step 8 — Speakers

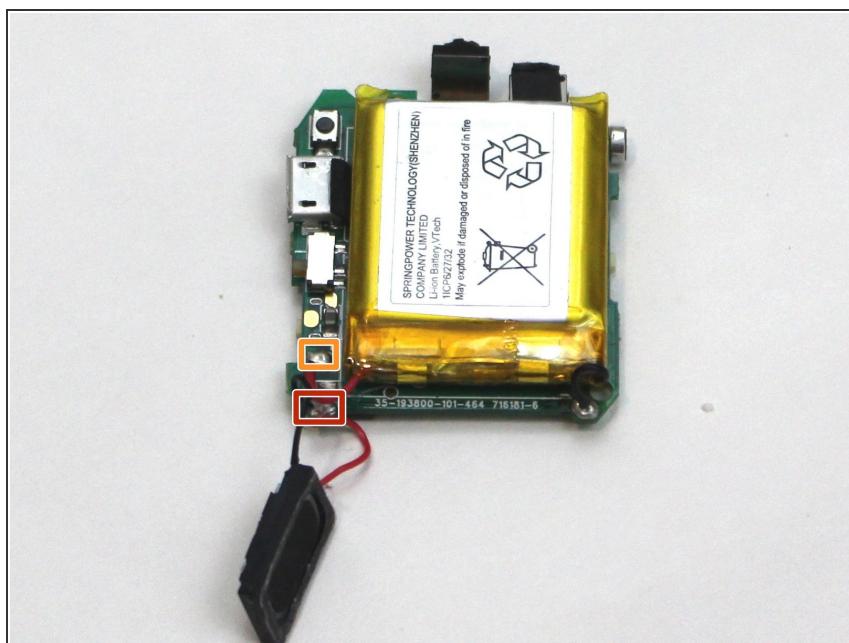

- Carefully desolder the speaker from the board.
- Be careful to not desolder the battery cable.

To reassemble your device, follow these instructions in reverse order.