


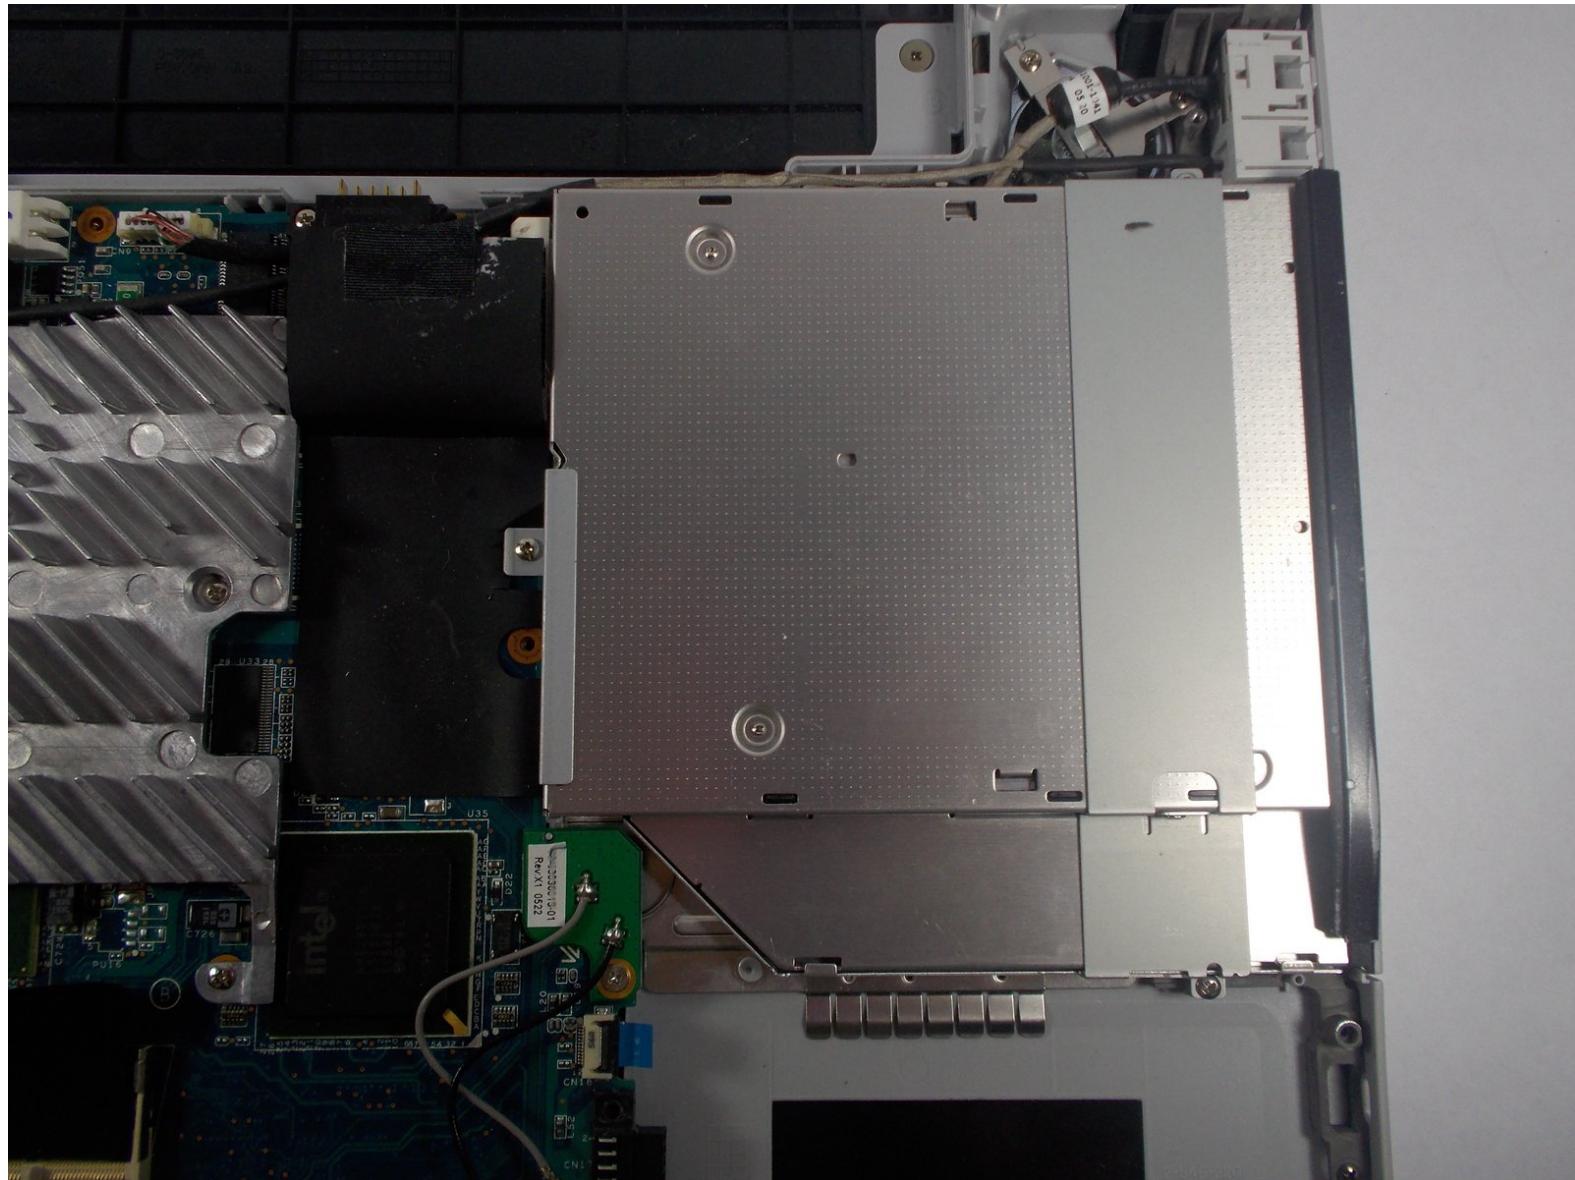

Vaio FS series VGRFS640 CD DVD drive Replacement

The CD/DVD drive is what allows a computer to read and write CDs or DVDs. If this isn't working properly it can be a hinderance to the laptop's usability.

Written By: Geoffrey



This document was generated on 2019-09-18 02:43:09 PM (MST).

INTRODUCTION

This guide will instruct you, step by step, in how to remove and replace the disk drive in your Vaio VGRFS640.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

PARTS:


- [CD DVD drive \(1\)](#)

Step 1 — BackPlate



- Flip laptop over so that "Service TAG" is shown at the top left corner.

Step 2

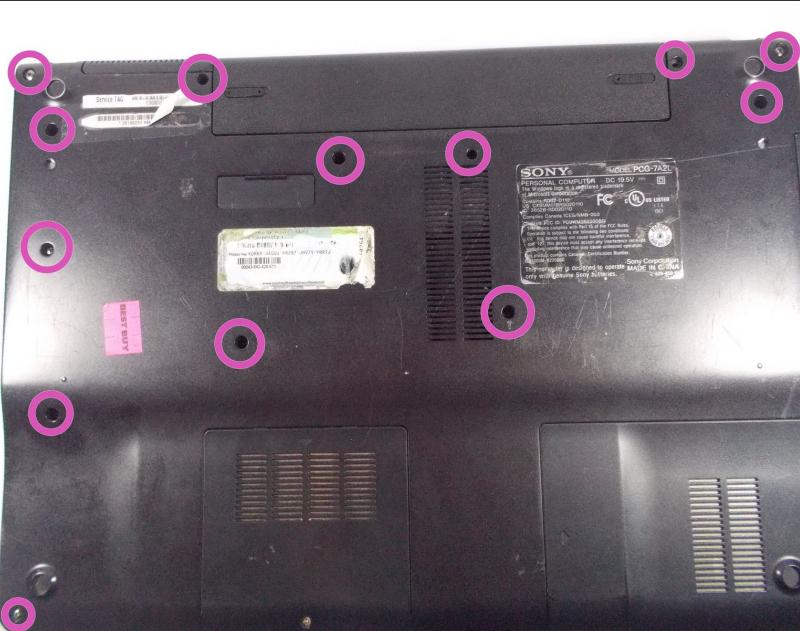

- Remove highlighted screws from back of laptop.

Step 3




- Remove screws from panels at bottom right hand side.

Step 4




- Remove two panels at bottom right hand corner by sliding in direction of arrows shown

Step 5

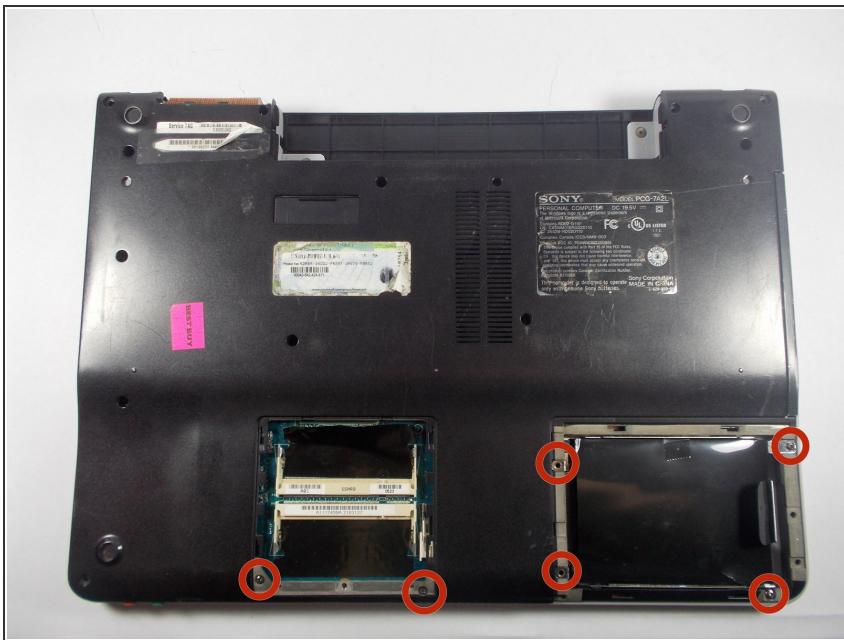

- Remove screws underneath removed panels.

Step 6

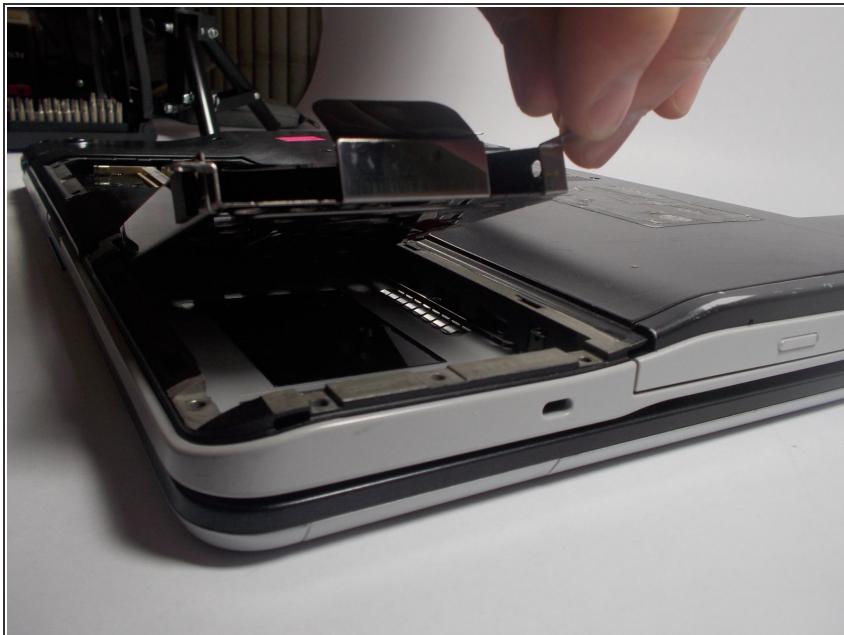

- Remove Hard drive from computer.

Step 7




- Remove battery by pressing inwards on both tabs.

Step 8





- Remove cover at top left of laptop by pulling outwards.

Step 9

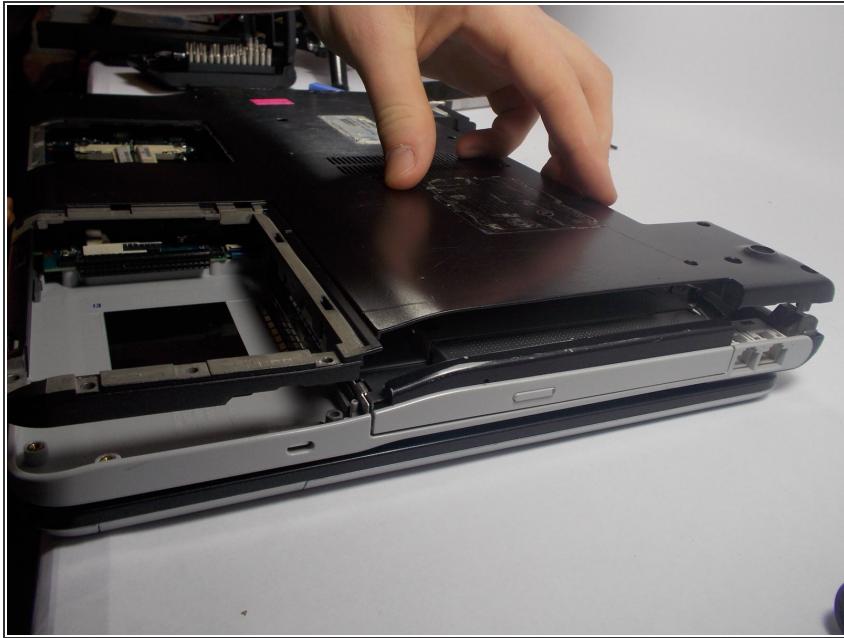



- Remove backplate of laptop by pulling outward.

Step 10 — CD DVD drive

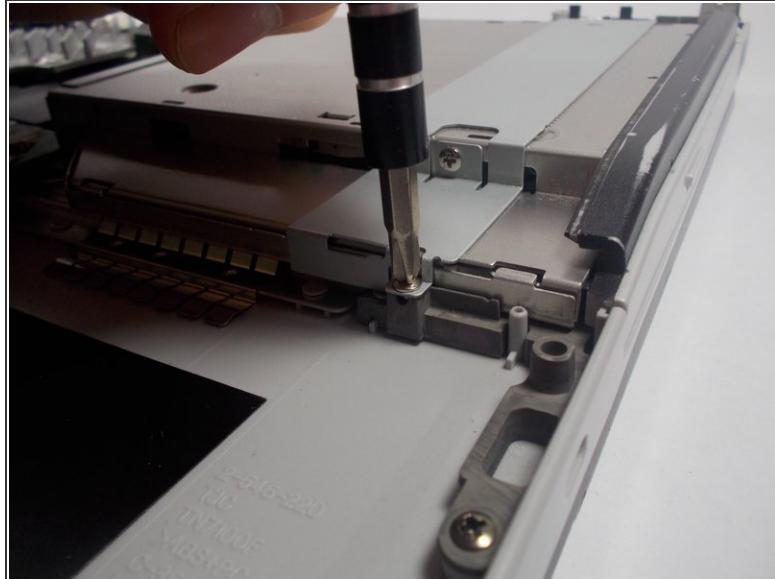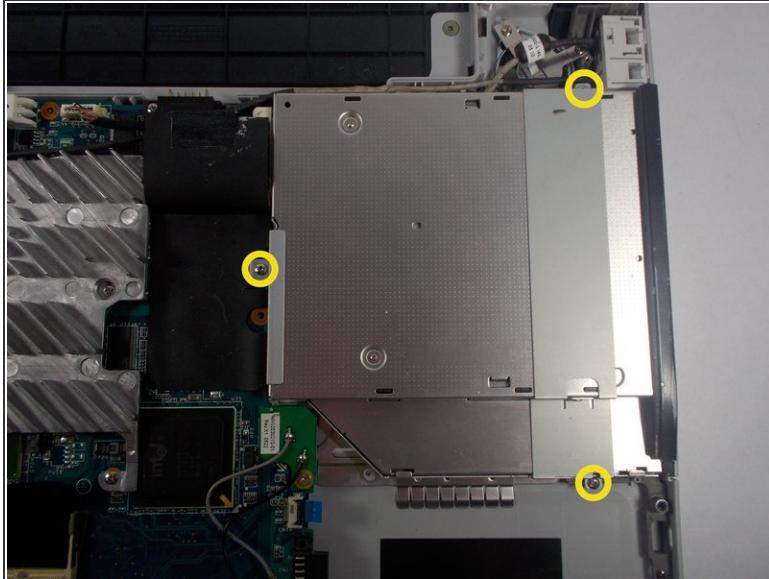


- Unscrew the screws holding in the CD/ DVD drive.

Step 11

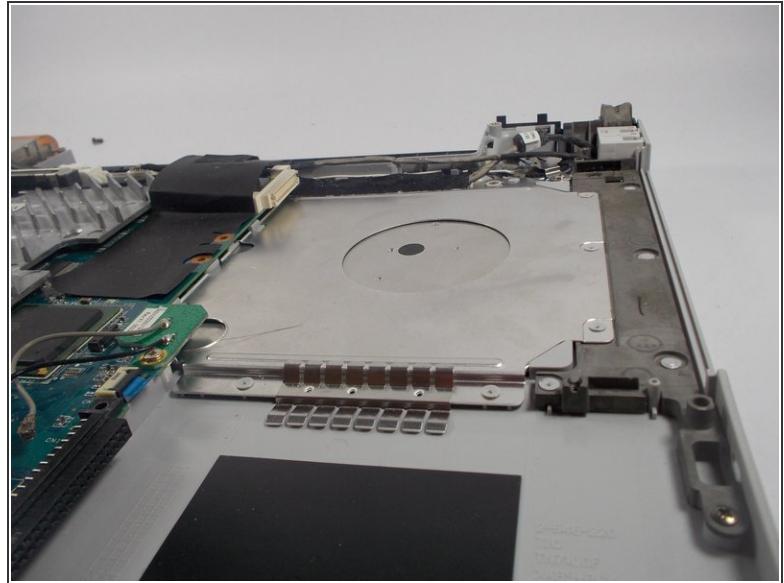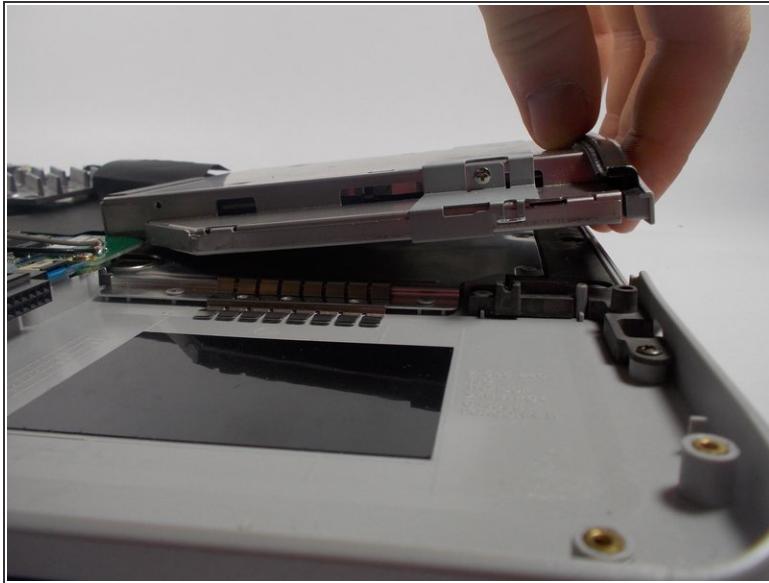

- Remove the CD/ DVD drive by gently lifting it up and out of the laptop.

Step 12

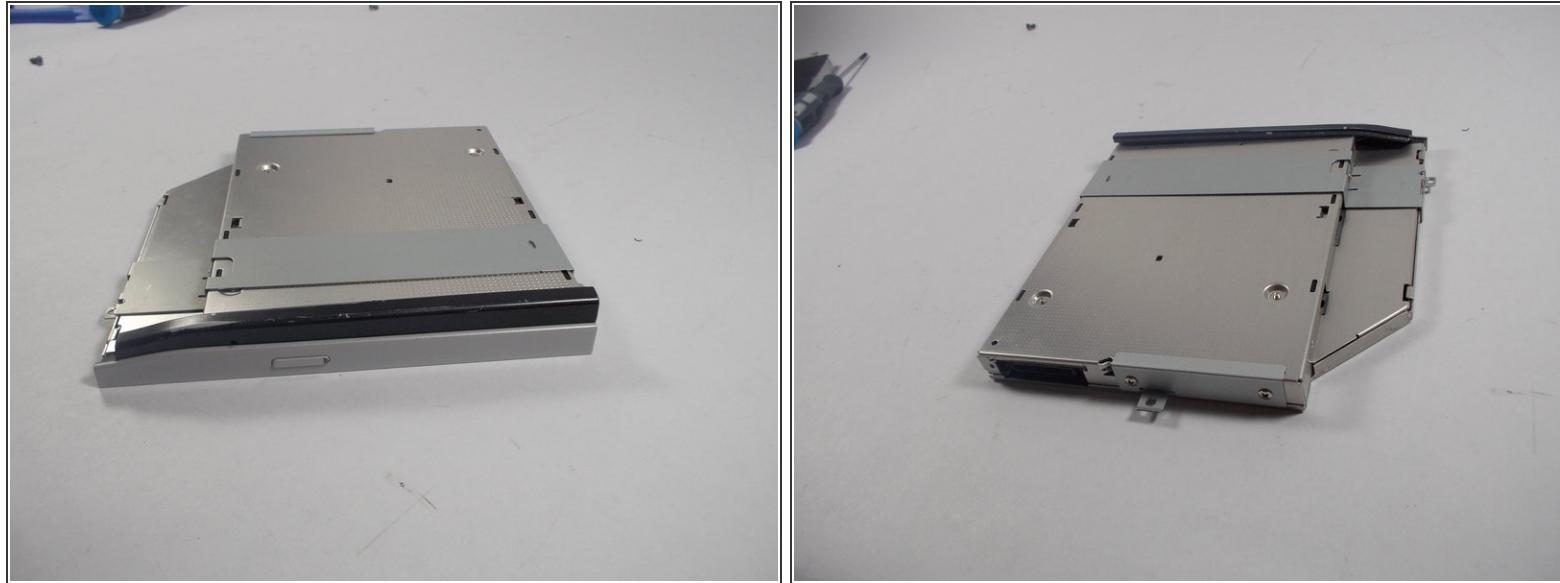

- Get the new CD/ DVD drive.

⚠ Make sure that the new CD/ DVD drive is compatible with the Vaio VGRFS640

⚠ Sony no-longer has a list of compatible drivers, however the original driver can be found [here](#) under optical drive.

To reassemble your device, follow these instructions in reverse order.